

 
 
heart rate monitors




POLAR SULKY REPEATER

Operating instruction • Gebrauchsanleitung • Mode d'emploi • Istruzioni d'uso
Manual de instrucciones • Instruktionsbok • Bruksanvisning • Tuotteen soveltuvuus

Polar Sulky Repeater

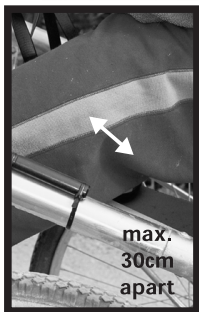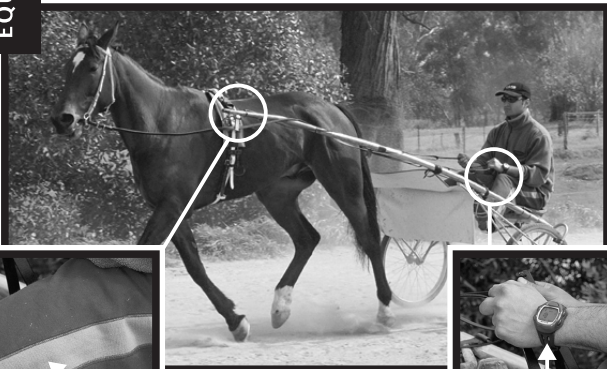

 Positioning of the **Polar Sulky Repeater** near the Polar Transmitter [left] and near the Polar Receiver [right].

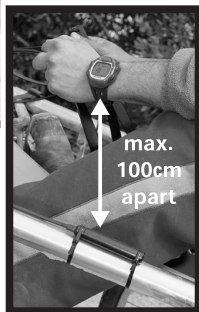

Polar Sulky Repeater



Polar Electro Europe BV

Fleurier Branch

Av. D.-Jeanrichard 2

2114 Fleurier, Switzerland

Tel: + 41 32 862 90 50

Fax: + 41 32 862 90 55

Email: info@horsehrm.com

www.horsehrm.com



Polar Sulky Repeater

Installation

(See picture of Polar Sulky Repeater in the bottom left panel)

1. Open the long tube by pulling both ends.
2. Place the 2 LR44 batteries within the black insulation (the spring corresponds to the positive contact). Close the long tube by rotating over 2 O-ring.
3. Attach the small tube close to the Polar Transmitter (max. 30cm) by using one cable tie. Wind the cable around the shaft.
4. Attach the long tube by using 2 cable ties, side to the Polar Receiver. When your arm is parallel to the tube, maximum distance range should be around 100cm.
5. The Polar Receiver can also be attached to the Polar bike mount (accessory).



Trouble Shooting

- If the 00 heart rate readings appear only occasionally, this may be caused by high voltage power lines in your surroundings.
- If the 00 readings appear more often, you probably have ridden 4000 hours (1500 hours with Polar Coded Transmitter). You have to change the batteries (2 x LR44) by following the installation procedure (1-2).
- If you cannot read heart rate value at all, check the position of the small tube compared to the Polar Transmitter (3).

