
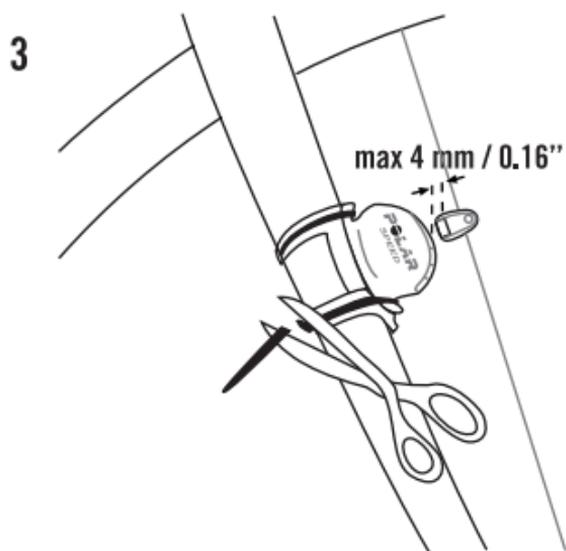
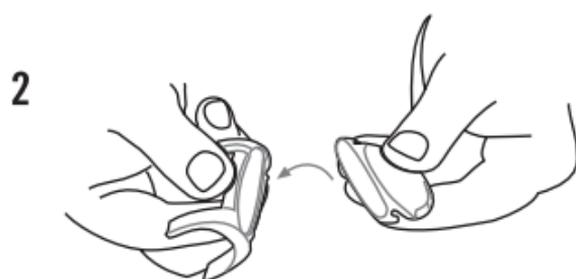


POLAR CS SPEED SENSOR W.I.N.D.

User Manual

POLAR[®]
LISTENS TO YOUR BODY

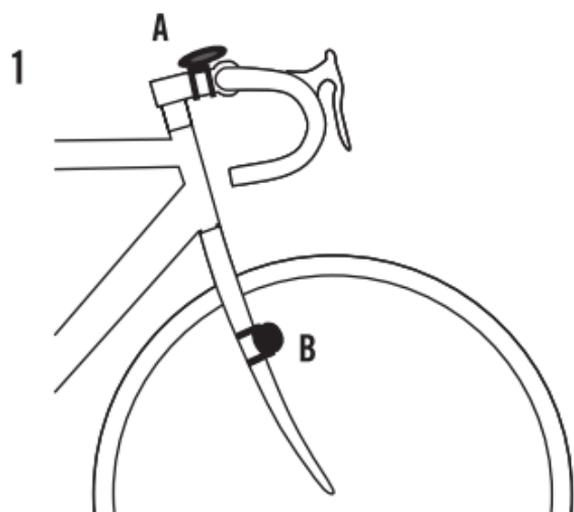

ENGLISH

The Polar CS speed Sensor W.I.N.D. is designed to measure speed and distance when cycling. No other use is intended or implied.

The latest version of this user manual can be downloaded at www.polar.com/support.

Please follow the pictures on the front cover.

Product Elements

1. Polar bike mount / Polar dual lock bike mount (picture 1 A). For instructions on the bike mount installation, refer to the user manual of Polar training computer in question.
2. Speed sensor, rubber part and spoke magnet (picture 1 B).

Installing the Polar Speed Sensor

For a video tutorial, go to www.polar.com/en/polar_community/videos.

To install the speed sensor and spoke magnet, you will need cutters and a cross-head screwdriver.

1. It is recommended to install the speed sensor on the front fork (as in picture 1) of your bicycle. Do not install the speed sensor on the seat stay if the (optional) power sensor is mounted.

2. Attach the rubber part to the speed sensor (picture 2).
3. Pass the cable ties over the speed sensor and rubber part (picture 3). Adjust the sensor to the front fork so that the POLAR logo faces outwards. Adjust the ties loosely. Do not tighten them fully yet.
4. Attach the magnet to a spoke at the same level as the speed sensor. There is a small caved dot at the backside of the sensor, which indicates the spot the magnet should be pointing at when passing the sensor. Fasten the magnet to the spoke and tighten it loosely with a screwdriver. Do not tighten it fully yet.

Fine-tune the positioning of both the magnet and the speed sensor so that the magnet passes close to the sensor but does not touch it. Move the sensor towards the wheel/spokes as close as possible. The gap between the sensor and the magnet should be under 4 mm/0.16". The gap is correct when you can fit a cable tie between the magnet and the sensor.

Rotate the front tire to test the speed sensor. The flashing red light on the sensor indicates that the magnet and the sensor are positioned correctly. Once the magnet and the speed sensor are positioned correctly, tighten the screw to the magnet with a screwdriver. Also tighten the cable ties securely and cut off any excess cable tie ends.

Before you start cycling, set the wheel size of your bicycle into the Polar training computer.

Speed Sensor Teaching

Your new speed sensor must be introduced to your Polar training computer in order to receive speed and distance data. This enables training in a group without interference from other sensors.

The Polar training computer and sensor that came with the product set have already been synchronized but teaching is necessary when you start using a new sensor.

For further information on teaching, refer to the user manual of Polar training computer in question.

Care and Maintenance

Keep the speed sensor clean. Clean it with a mild soap and water solution and rinse off with clean water. Dry it carefully with a soft towel. Never use alcohol or any abrasive material such as steel wool or cleaning chemicals. Do not immerse the speed sensor in water.

Your safety is important to us. Make sure that you can turn your handlebars normally and that the cable wires for brakes or gears do not catch the bike mount or the sensor. Also, make sure that the sensor does not disturb pedaling or using the brakes or gears. While riding your bike, keep your eyes on the road to prevent possible accidents and injury. Avoid hard hits as these may damage the sensor.

Speed Sensor Battery

The battery cannot be replaced. The sensor is sealed in order to maximize mechanical longevity and reliability. To purchase a new sensor contact your authorized Polar Service Center or retailer.

Frequently Asked Questions

What should I do if...

...the speed reading is 0.0 or there is no speed reading while cycling?

- Make sure the position and distance of the sensor to the magnet are appropriate.
- Check that you have activated the speed function in the Polar training computer. For further information, see Speed Sensor Teaching.
- If the 0.0 reading appears irregularly, this may be due to temporary electromagnetic interference in your current surroundings.
- If the 0.0 reading is constant, you may have exceeded 3000 riding hours and the battery is empty.

...there are irregular speed, distance or heart rate readings?

- Disturbance may occur near microwave ovens and computers. Also WLAN base stations may cause interference when training with Polar speed sensor W.I.N.D. To avoid erratic reading or misbehaviors, move away from possible sources of disturbance.

Technical Specification

Operating temperature:	-10 °C to +50 °C / +14 °F to +122 °F
Battery life:	Average 3000 riding hours
Accuracy:	±1 %
Material:	Thermoplastic polymer
Water resistance:	Splash proof

Limited Polar International Guarantee

- This guarantee does not affect the consumer's statutory rights under applicable national or state laws in force, or the consumer's rights against the dealer arising from their sales/purchase contract.
- This limited Polar international guarantee is issued by Polar Electro Inc. for consumers who have purchased this product in the USA or Canada. This limited Polar international guarantee is issued by Polar Electro Oy for consumers who have purchased this product in other countries.
- Polar Electro Oy/Polar Electro Inc. guarantees the original consumer/purchaser of this device that the product will be free from defects in material or workmanship for two (2) years from the date of purchase.
- **The receipt of the original purchase is your proof of purchase!**
- The guarantee does not cover the battery, normal wear and tear, damage due to misuse, abuse, accidents or non-compliance with the precautions; improper maintenance, commercial use, cracked, broken or scratched cases/displays, elastic strap and Polar apparel.
- The guarantee does not cover any damage/s, losses, costs or expenses, direct, indirect or incidental,

consequential or special, arising out of, or related to the product.

- Items purchased second hand are not covered by the two (2) year warranty, unless otherwise stipulated by local law.
- During the guarantee period, the product will be either repaired or replaced at any of the authorized Polar Service Centers regardless of the country of purchase.

Guarantee with respect to any product will be limited to countries where the product has been initially marketed.

Copyright © 2013 Polar Electro Oy, FI-90440 KEMPELE. All rights reserved. No part of this manual may be used or reproduced in any form or by any means without prior written permission of Polar Electro Oy. The names and logos marked with a TM symbol in this user manual or in the package of this product are trademarks of Polar Electro Oy. The names and logos marked with a ® symbol in this user manual or in the package of this product are registered trademarks of Polar Electro Oy.

Polar Electro Oy is a ISO 9001:2008 certified company.

Compliance Statement

Canada

Polar Electro Oy has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment.

Polar Electro Oy n'a approuvé aucune modification apportée à l'appareil par l'utilisateur, quelle qu'en soit la nature. Tout changement ou toute modification peuvent annuler le droit d'utilisation de l'appareil par l'utilisateur.

Industry Canada (IC) regulatory information

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Avis de conformité à la réglementation d'Industrie Canada

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Class B digital device notice

This Class B digital apparatus complies with Canadian ICES-003, RSS-Gen and RSS-210.

Cet appareil numérique de la classe B est conforme à la norme NMB-003, CNR-Gen et CNR-210 du Canada.

USA

Polar Electro Oy has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment.

FCC regulatory information

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/ TV technician for help.

This product emits radio frequency energy, but the radiated output power of this device is far below the FCC radio frequency exposure limits. This equipment complies with FCC RF radiation exposure limits for an uncontrolled environment. Nevertheless, the device should be used in such a manner that the potential for human contact with the antenna during normal operation is minimized.



This product is compliant with Directives 93/42/EEC, 1999/5/EC and 2011/65/EU. The relevant Declaration of Conformity is available at www.polar.com/support.



This crossed out wheeled bin marking shows that Polar products are electronic devices and are in the scope of Directive 2002/96/EC of the European Parliament and of the Council on waste electrical and electronic equipment (WEEE) and batteries and accumulators used in products are in the scope of Directive 2006/66/EC of the European Parliament and of the Council of 6 September 2006 on batteries and accumulators and waste batteries and accumulators. These products and batteries/accumulators inside Polar products should thus be disposed of separately in EU

countries. Polar encourages you to minimize possible effects of waste on the environment and human health also outside the European Union by following local waste disposal regulations and, where possible, utilize separate collection of electronic devices for products, and battery and accumulator collection for batteries and accumulators.

Disclaimer

The material in this manual is for informational purposes only. The products it describes are subject to change without prior notice, due to the manufacturer's continuous development program.

Polar Electro Inc./Polar Electro Oy makes no representations or warranties with respect to this manual or with respect to the products described herein.

Polar Electro Inc./Polar Electro Oy shall not be liable for any damages, losses, costs or expenses, direct, indirect or incidental, consequential or special, arising out of, or related to the use of this material or the products described herein.

Manufactured by

Polar Electro Oy
Professorintie 5
FIN-90440 KEMPELE
Tel +358 8 5202 100
Fax +358 8 5202 300
www.polar.com

POLAR®
LISTENS TO YOUR BODY