

# POLAR IGNITE 2



# **CONTENTS**

Contents	
Polar Ignite 2 User Manual	
Introduction	7
Take full advantage of your Polar Ignite 2	
Polar Flow App	
Polar Flow web service	
Get started	
Setting up your watch	
Option A: Set up with a phone and Polar Flow app	
Option B: Set up with your computer	
Option C: Set up from the watch	
Button functions and touch display	
Color touch display	
View Notifications	
Backlight activation gesture	
Menu	
Watch faces	
Backlight activation	
Backlight activation gesture	
Do not disturb feature	
Backlight always on during training	
Quick settings	
Pairing a phone with your watch	
Before pairing a phone:	
To pair a phone:	
Delete a pairing	
Updating the firmware	
With phone or tablet	
With computer	
Settings	
General settings	
Pair and sync	
Continuous HR tracking	
Flight mode	
Backlight brightness	
Do not disturb	
Phone notifications	
Music controls	22
Units	
Language	
Inactivity alert	
Vibrations	22
I wear my watch on	
Positioning satellites	
About your watch	
Choose views	
Watch face settings	
Time & Date	
Time	
Date	
Date format	
First day of week	
Physical settings	
	24
<u> </u>	

Height	
Date of birth	
Sex	
Training background	
Activity goal	
Preferred sleep time	
Maximum heart rate	
Resting heart rate	
VO2max	
Display icons	
Restarting and resetting	
To restart the watch	
To reset the watch to factory settings	
Factory reset via FlowSync	
Factory reset from the watch	
Training  Wrist-based heart rate measurement	
Wearing your watch when measuring heart rate from your wrist or tracking your sleep	
Start a training session	
Start a planned training session	
Quick menu	
During training	
Browse the training views	
Set timers	
Interval Timer	
Countdown Timer	
Automatic lap settings	
Training with a target	
Change phase during a phased session	
Notifications	
Pausing/Stopping a training session	
Training summary	
After training	
Training data in the Polar Flow App	
Training data in the Polar Flow Web Service	
Features	
Smart Coaching	
Nightly Recharge™ recovery measurement	39
ANS charge details in the Flow app	41
Sleep charge details in Polar Flow	41
For exercise	41
For sleep	42
For regulating energy levels	42
Sleep Plus Stages™ sleep tracking	43
Sleepwise™	47
Daily Boost from sleep	47
Weekly sleep	
Scientific background	
FitSpark™ daily training guide	
During training	
Serene™ guided breathing exercise	
Fitness Test with wrist-based heart rate	
Before the test	
Performing the test	
Test results	
Fitness level classes	
Men	
Women	59

VO2max	
Training Load Pro™	
Cardio load	59
Perceived load	59
Training load from a single session	60
Strain and Tolerance	60
Cardio load status	60
Long term analysis in the Flow app and web service	61
Polar Running Program	
Create a Polar Running Program	
Start a running target	
Follow your progress	
Running Index	
Short-term analysis	
Long-term analysis	
Training Benefit	
Smart Calories	
Continuous heart rate	
Continuous heart rate on your watch	
24/7 Activity tracking	
Activity Goal	
Activity data on your watch	
Inactivity alert	
Activity data in the Flow App and web service	
Activity Guide	
Activity Benefit	
Positioning satellites	
Assisted GPS	
A-GPS expiry date	
Sport Profiles	
Heart Rate Zones	
Speed Zones	
Speed zones settings	
Training target with speed zones	
During training	
After training	
Speed and distance from the wrist	
Swimming metrics	
Pool swimming	
Pool Length setting	
Open water swimming	
Measuring heart rate in water	
Start a swimming session	
During your Swim	
After your Swim	
Weather	
Power save settings	
Energy sources	
Energy sources summary	
Detailed analysis in the Flow mobile app	
Phone notifications	
Set phone notifications on	
Do not disturb	
View notifications	
Music controls	
Music controls watch face	
During training	
Music controls settings in Polar Flow app	
HR sensor mode	

To turn on the HR sensor mode:	81
To stop sharing HR:	
Changeable wristbands	
Changing the wristband	
Compatible sensors	
Polar OH1 optical heart rate sensor	
Polar Verity Sense	
Polar H10 heart rate sensor	
Polar H9 heart rate sensor	
Pairing sensors with your watch	
Pair a heart rate sensor with your watch	
Polar Flow	
Polar Flow App	
Training data	
Activity data	
Sleep data	
Sport profiles	
Image sharing	
Start using the Flow app	
Polar Flow Web Service	
Diary	
Reports	
Programs	
Sport profiles in Polar Flow	
Add a sport profile	
Edit a sport profile	
Planning your training	
Create a training plan with the Season Planner	
Create a training target in the Polar Flow web service	
Create a target based on a favorite training target	
Sync the targets to your watch	
Create a training target in the Polar Flow app	
Favorites	
Edit a Favorite	
Remove a favorite	
Syncing Sync with Flow mobile App	
Sync with Flow Mob Service Via Flow Sync	
Sync With Flow Web Service Via FlowSync	
Important information Battery	
Operating time	
Charging the battery	
Charging during training	
Battery status and notifications	
Battery status icon	
Battery notifications	
Caring for your watch  Keep your watch clean	
Take good care of the optical heart rate sensor	
Storing	
Service	
Precautions	
Interference During Training	
Health and training Warning - Keep batteries out of reach of children	
Warning - Keep batteries out of reach of children  How to use your Polar product securely	
Technical specification	
Polar Ignite 2	
1 Old 191116 Z	

Polar FlowSync Software	102
Polar Flow mobile application compatibility	102
Water resistance of Polar products	
Regulatory information	103
Limited International Polar Guarantee	
Disclaimer	104

# POLAR IGNITE 2 USER MANUAL

This user manual helps you get started with your new watch. To see video tutorials and FAQs, go to support.polar.com/en/ignite-2.

### INTRODUCTION

Congratulations on your new Polar Ignite 2!

Polar Ignite 2 is a customizable fitness watch with smart features. You'll get the most timely and relevant information right on the watch face, including your activity status, your heart rate, latest training sessions including <a href="weekly\_we

Polar Ignite 2 measures heart rate from the wrist with Polar's Precision Prime™ sensor fusion technology and tracks speed, pace, distance and route with built-in GPS. Nightly Recharge™ measures your recovery every night, and the FitSpark™ training guide gives you personalized workout guidance based on your training history, fitness level and current recovery status. The Sleep Plus Stages™ sleep tracking monitors your sleep stages (REM, light and deep sleep) and gives you sleep feedback and a numerical sleep score. Polar Ignite 2 helps you relax and relieve stress with the Serene™ guided breathing exercise. You can adapt the Polar Ignite 2 to suit your style with changeable wristbands and watch face color themes.

The Weather watch face shows the current day's hourly forecast and helps you prepare for weather changes when planning your daily outdoor activities. With the <a href="music controls">music controls</a> you can easily navigate around your playlist and adjust the volume straight on your watch. You can control music from the training display or from the watch face, or both. Just open your favorite music app or audio book and choose the playlist you want to listen to. The <a href="music energy sources">Energy sources</a> breakdown in the training summary shows how much of different energy sources (fats, carbs and proteins) you used during your session. You can see it in the training summary right after finishing your session and also when opening the latest training session view.

<u>In HR sensor mode</u> you can easily turn your Polar Ignite 2 into a heart rate sensor and share your heart rate to other Bluetooth devices like training apps, gym equipment or cycling computers. You can also use your Ignite 2 during Polar Club classes to broadcast your heart rate to the <u>Polar Club system</u>.



We are continuously developing our products for a better user experience. To keep your watch up to date and get the best performance, always make sure to <u>update the firmware</u> whenever a new version is available. The firmware updates enhance the functionality of your watch through improvements.

### TAKE FULL ADVANTAGE OF YOUR POLAR IGNITE 2

Get connected to the Polar ecosystem and get the most out of your watch.

### POLAR FLOW APP

Get the Polar Flow app from the App Store® or Google Play<sup>TM</sup>. Sync your watch with the Flow app after training, and get an instant overview and feedback on your training results and performance. In the Flow app you can also see how active you've been during the day, how your body has recovered from training and stress during the night and how well you have slept. Based on the Nightly Recharge automatic overnight measurement and other parameters we have measured from you, you get personalized tips in the Flow app on exercise, and tips on sleep and regulating your energy levels on those particularly rough days.

### **POLAR FLOW WEB SERVICE**

Sync your training data to the <u>Polar Flow web service</u> with the FlowSync software on your computer or via the Flow app. In the web service you can plan your training, track your achievements, get guidance and see a detailed analysis of your


training results, activity and sleep. Let all your friends know about your achievements, find fellow exercisers and get motivation from your social training communities.

Find all this at <u>flow.polar.com</u>

# **GET STARTED**

### **SETTING UP YOUR WATCH**

**To wake up and charge your watch**, plug it into a powered USB port or a USB charger with the custom cable that came in the box. The cable magnetically snaps into place, just make sure to align the ledge on the cable with the slot on your watch (marked with red). Please note that it may take a while for the charging animation to appear on the display. We recommend that you charge the battery before you start using your watch. See <a href="Battery">Battery</a> for detailed information on charging the battery.

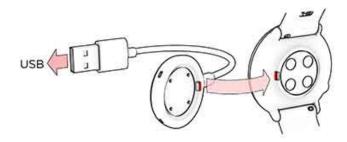

**To set up your watch**, choose your language and preferred setup method. The watch gives you three options for setup: Browse to the option most convenient for you by swiping the display up or down. Tap the display to confirm your selection.

- A. **On your phone**: Mobile setup is convenient if you don't have access to a computer with a USB port, but it might take longer. This method requires an internet connection.
- B. **On your computer**: Wired computer setup is quicker and you can charge your watch at the same time, but you need a computer available. This method requires an internet connection.



**The A and B options are recommended.** You can fill in all the physical details required for accurate training data at once. You can also choose your language and get the latest firmware for your watch.

C. On your watch: If you don't have a compatible mobile device and can't get to a computer with an internet connection right away, you can start from the watch. Please note that when you do the setup from the watch, your watch is not yet connected with Polar Flow. It's important that you do the setup later via option A or B to get the latest firmware updates to your Ignite 2. In Flow you can also see a detailed analysis of your training, activity and sleep data.

### OPTION A: SET UP WITH A PHONE AND POLAR FLOW APP



Please note that you have to do the pairing in the Flow app and NOT in your phone's Bluetooth settings.

- 1. Keep your watch and phone close to each other during setup.
- 2. Make sure your phone is connected to the internet and turn on Bluetooth.
- 3. Download the Polar Flow app from the App Store or Google Play on your phone.
- 4. Open the Flow app on your phone.
- 5. The Flow app recognizes your watch nearby and prompts you to start pairing it. Tap the **Start** button on the Flow app.
- 6. When the **Bluetooth Pairing Request** confirmation message appears on your phone, check that the code shown on your phone matches the code shown on your watch.

- 7. Accept the Bluetooth pairing request on your phone.
- 8. Confirm the pin code on your watch by tapping the display.
- 9. **Pairing done** is displayed once the pairing is completed.
- 10. Sign in with your Polar account or create a new one. We'll walk you through the sign-up and setup within the app.

When you're done with the settings, tap **Save and sync** and your settings are synced to your watch.



If you're prompted to update the firmware, please plug your watch into a power source to ensure a flawless update operation, and then accept the update.

### **OPTION B: SET UP WITH YOUR COMPUTER**

- 1. Go to <u>flow.polar.com/start</u> and download and then install the Polar FlowSync data transfer software onto your computer.
- 2. Sign in with your Polar account or create a new one. Plug your watch into your computer's USB port with the custom cable that came in the box. We'll walk you through the sign-up and setup within the Polar Flow web service.

### **OPTION C: SET UP FROM THE WATCH**

Adjust the values by swiping the display and tap to confirm your selection. If you want to return and change a setting at any point, press the button until you reach the setting you want to change.



Please note that when you do the setup from the watch, your watch is not yet connected with Polar Flow. Firmware updates for your watch are available only through Polar Flow. To make sure you get to enjoy your watch and the unique Polar features at their best, it's important that you do the setup later in the Polar Flow web service or with the Polar Flow mobile app by following the steps in option A or B.

### BUTTON FUNCTIONS AND TOUCH DISPLAY

You watch has one button that has different functionalities depending on the situation of use. See the table below to find out what functionalities the button has in different modes.

Time view	Menu	Pre-training mode	During training	
Enter the menu	Return to the previous	Return to time view	Pause training by	
Press and hold to start	level	Illuminate the display	pressing once. Tap the display to continue.	
pairing and syncing	Leave settings unchanged		, ,	
Illuminate the display			To stop the session, press and hold when	
	Cancel selections		paused.	
	Illuminate the display		Illuminate the display	

### **COLOR TOUCH DISPLAY**

The color touch display lets you easily swipe between watch faces, through lists and menus, as well as choose items by tapping the display.

- Tap the display to confirm selections and choose items.
- Swipe up or down to scroll the menu.
- Swipe left or right during training to see different training views.
- Swipe left or right in time view to switch between the watch faces.
- Swipe down in time view to access the quick settings menu (screen lock, do not disturb, flight mode).
- Swipe up in time view to see notifications.
- Tap the display to see more detailed information.

To ensure proper function of the touch display wipe any dirt, sweat or water off the display with a cloth. The touch display won't respond properly when trying to use it while wearing gloves.

### **VIEW NOTIFICATIONS**

View the notifications by swiping up from the bottom of the display or by turning your wrist to look at the watch immediately after the watch vibrates. The red dot at the bottom of the display indicates you have new notifications. For more information, see Phone notifications.

### **BACKLIGHT ACTIVATION GESTURE**

The backlight is automatically switched on when you turn your wrist to look at the watch.

### MENU

Enter the menu by pressing the button and browse through the menu by swiping up or down. Confirm selections by tapping the display, and return with the button.

### Start training



From here you can start your training sessions. Tap the display to enter the pre-training mode and browse to the sport profile you want to use.

See Start a training session for detailed instructions.

### **Settings**



You can edit the following settings on your watch:

- General settings
- Choose views
- Watch face
- Time & Date
- · Physical settings

For more information, see Settings.



In addition to the settings available on your watch, you can edit Sport Profiles in the Polar Flow web service and app. Customize your watch with your favorite sports and the information you want to follow during your training sessions. See <a href="Sport">Sport</a> <a href="Profiles in Flow">Profiles in Flow</a> for more information.



In **Timers** you'll find an alarm, a stopwatch and a countdown timer.

#### **Alarm**

Set alarm repetition: **Off, Once, Monday to Friday** or **Every day**. If you choose **Once, Monday to Friday** or **Every day**, also set the time for the alarm.



When the alarm is set on, a clock icon is displayed in the time view.

### Stopwatch

To start the stopwatch, tap first **Stopwatch** and then . To add a lap, tap the lap icon \_\_\_\_\_. To pause the stopwatch, press the button.



#### **Countdown Timer**

You can set the countdown timer to count down from a preset time. Tap on **Set Timer**, and set the countdown time, and tap to confirm. When completed, tap **Start** to start the countdown timer.

The countdown timer is added to the basic watch face.



At the end of the countdown, the watch notifies you by vibrating. Tap v to restart the timer, or tap to cancel and return to the time view.



During training you can use interval timer and countdown timer. Add the timer views to training views in the sport profile settings in Flow and sync the settings to your watch. For more information on using timers during training, see <a href="During training">During training</a>.

### Serene guided breathing exercise



First, tap **Serene** and then tap **Start exercise** to start the breathing exercise.

For more information, see Serene™ guided breathing exercise.

#### **Fitness Test**



To perform the fitness test, first tap **Fitness Test**, and then tap **Relax and start the test**.

For more information, see Fitness Test with wrist-based heart rate.

### **WATCH FACES**

Watch faces tell you a lot more than just the time. You'll get the most timely and relevant information right on the watch face, including your activity status, your heart rate, latest training sessions, Nightly Recharge status, FitSpark ondemand training suggestions, Weather and weekly training summary. You can scroll through the watch faces by swiping left or right and open a more detailed view by tapping the watch face.

Polar Ignite 2 supports up to ten different watch faces. Choose which watch faces are shown on the display in time view from **Settings > Choose views**.



You can choose between an analogue and a digital display in Watch face settings.

#### Time



Basic watch face with time and date.

### **Activity**



The graph bar around the watch face and the percentage below the time and date show your progress towards your daily activity goal.

In addition, when opening the details, you can see the following details of your day's accumulated activity:



1905

- Steps you've taken so far. The amount and type of body movements are registered and turned into an estimation of steps.
- Active time tells you the cumulative time of body movements that benefit your health.
- Calories you've burned through training, activity and BMR (Basal metabolic rate: the minimum metabolic activity required to maintain life).

For more information, see 24/7 Activity tracking.

#### **Heart rate**





When using the **Continuous heart rate** feature your watch continuously measures your heart rate and displays it on the Heart rate watch face.

When using the Continuous heart rate feature, you can also follow what are the highest and lowest heart rate readings of your day and you can check what your lowest heart rate reading was during the previous night. You can turn the Continuous heart rate feature on, off or to night-time only mode on your watch in **Settings** > **General settings** > **Continuous HR tracking**.

For more information, see Continuous heart rate feature.



If you're not using the **Continuous heart rate** feature, you can still quickly check your current heart rate without starting a training session. Just tighten your wristband, choose this watch face and you'll see your current heart rate by tapping the display. Return to the Heart rate watch face by pressing the button.



### Latest training sessions





See the time passed since your latest training session and the sport of the session.

In addition, when opening the details, you can view the summaries of your training sessions from the last 14 days. Browse to the training session you want to view by swiping up/down, and then tap the display to open the summary. For more information, see Training summary.

### Nightly Recharge watch face



When you wake up you can see your **Nightly Recharge status**. Nightly Recharge status tells you how restorative your last night was. Nightly Recharge combines information on how well your autonomic nervous system (ANS) calmed down during the early hours of your sleep ( **ANS charge**) and how well you slept ( **sleep charge**). Tap on ANS charge details or Sleep charge details for more information.



For more information, see <u>Nightly Recharge™ recovery measurement</u> or <u>Sleep Plus Stages™</u> sleep tracking.

### FitSpark watch face



Your watch suggests the most suitable training targets for you based on your training history, fitness level and current recovery status. Tap the watch face to see all the suggested training targets. Tap one of the suggested training targets to see detailed information about the training target.



For more information, see FitSpark daily training guide.

#### Weather



View the current day's hourly forecast straight from your wrist. Tap the display to view more detailed weather information including for example wind speed, wind direction, humidity and chance of rain as well as tomorrow's 3-hour and the day after tomorrow's 6-hour forecast.

For more information, see Weather.



### Weekly summary




View an overview of your training week. Your total training time for the week split into different training zones is illustrated on the display. Tap the display to open more details. You'll see distance, training sessions, total calories and time spent in each heart rate zone. In addition, you can view last week's summary and details as well as any sessions planned for next week.

Scroll down and tap the display to view more information about a single session.



Note that the watch faces and their contents cannot be edited.



#### Your name



Time, date and your name is displayed.

#### Music controls



Control music and media playing on your phone with your watch from the Music controls watch

For more information, see Music controls.

### **BACKLIGHT ACTIVATION**

### **BACKLIGHT ACTIVATION GESTURE**

The backlight is not constantly on to save the battery of your device. The backlight is automatically switched on when you turn your wrist to look at the watch. It is not possible to set the backlight always on apart from during training sessions.



You can adjust the backlight brightness from **General settings** by choosing **High**, **Medium** or **Low**. Backlight brightness is set to **High** by default.

### DO NOT DISTURB FEATURE



The backlight activation gesture is **disabled**, when **Do not disturb** is switched on. You can activate the backlight when **Do not disturb** is on by pressing the button. See **Quick settings** for further information.

### **BACKLIGHT ALWAYS ON DURING TRAINING**

**To enable backlight always on during training:** Swipe down from the top of the display to pull down the **Quick settings** menu. Tap the Backlight icon to select **Always on** or **Automatic**. With always on selected the watch display will be illuminated throughout your training session. The backlight setting will default back to automatic after you finish your training session.



Please note that the always on selection will drain your battery much faster than the default setting.

### **QUICK SETTINGS**

#### Quick settings menu



Swipe down from the top of the display in time view to pull down the **Quick settings** menu. Swipe left or right to browse and tap to choose a feature.

Tap to customize what features you want to see in the quick settings menu. Choose from Screen lock, Alarm, Countdown timer, Do not disturb and Flight mode.

- **Screen lock**: Tap the screen lock icon to switch screen lock on. Press the button for 2 seconds to unlock the screen.
- Alarm: Set alarm repetition: Off, Once, Monday to Friday or Every day. If you choose
   Once, Monday to Friday or Every day, also set the time for the alarm.
- **Countdown timer**: Swipe up or down to set the countdown time, and tap the green tick to confirm and start the countdown timer.
- **Do not disturb**: Tap the do not disturb icon to switch it on and tap again to switch it off. When do not disturb is switched on, you will not get any notifications or call alerts. Also, the backlight activation gesture is disabled.
- **Flight mode**: Tap the flight mode icon to switch it on and tap again to switch it off. Flight mode cuts off all wireless communication from your watch. You can still use it, but you can't sync your data with the Polar Flow mobile app or use it with any wireless accessories.

Battery status icon shows how much charge is left in the battery.

### **During training**



- **Backlight**: Tap the Backlight icon to choose **Always on** or **Automatic**. With always on selected the watch display will be illuminated throughout your training session. The backlight setting will default back to automatic after you finish your training session. Please note that the always on selection will drain your battery much faster than the default setting.
- **Screen lock**: Tap the screen lock icon to switch screen lock on. Press the button for 2 seconds to unlock the screen

### PAIRING A PHONE WITH YOUR WATCH

Before you can pair a phone with your watch, you need to setup your watch in the Polar Flow web service or with the Polar Flow mobile app as described in chapter <u>Setting up your watch</u>. If you did the setup for your watch with a phone, your watch has already been paired. If you did the setup with a computer and would like to use your watch with Polar Flow app, please pair your watch and phone as follows:

### Before pairing a phone:



- download Flow app from the App Store or Google Play
- make sure your phone has Bluetooth turned on, and airplane mode/flight mode is not turned on.
- Android users: make sure location is enabled for the Polar Flow app in the phone's application settings.

### To pair a phone:

1. On your phone, open the Flow app and sign in with your Polar account, which you have created when setting up your watch.



**Android users**: If you have several Flow app compatible Polar devices in use, make sure you have chosen Polar Ignite 2 as the active device in the Flow app. This way the Flow app knows to connect to your watch. In the Flow app, go to **Devices** and choose Polar Ignite 2.

- On your watch, press and hold the button in time mode OR go to Settings > General settings > Pair and sync >
  Pair and sync phone and tap the display.
- 3. **Open Flow app and bring your watch close to phone** is displayed on your watch.
- 4. When the **Bluetooth Pairing Request** confirmation message appears on your phone, check that the code shown on your phone matches the code shown on your watch.
- 5. Accept the Bluetooth pairing request on your phone.
- 6. Confirm the pin code on your watch.
- 7. **Pairing done** is displayed once the pairing is completed.

### **DELETE A PAIRING**

To delete a pairing with a phone:

- 1. Go to Settings > General settings > Pair and sync > Paired devices and tap the display.
- 2. Choose the device you want to remove by tapping its name on the display.
- 3. **Remove pairing?** is displayed. Confirm by tapping the display.
- 4. **Pairing removed** is displayed when you are done.

### **UPDATING THE FIRMWARE**

To keep your watch up to date and to get the best performance, always make sure to update the firmware whenever a new version is available. Firmware updates are performed to improve the functionality of your watch.



You won't lose any data due to the firmware update. Before the update begins, the data from your watch is synced to the Flow web service.

### WITH PHONE OR TABLET

You can update the firmware with your phone if you're using the Polar Flow mobile app to sync your training and activity data. The app will let you know if there's an update available and will guide you through it. We recommend that you plug the watch into a power source before starting the update to ensure a flawless update operation.




The wireless firmware update may take up to 20 minutes, depending on your connection.

### WITH COMPUTER

Whenever a new firmware version is available, FlowSync will notify you when you connect the watch to your computer. The firmware updates are downloaded via FlowSync.

### To update the firmware:

1. Plug your watch into your computer with the custom cable that came in the box. Make sure that the cable snaps into place. Align the ledge on the cable with the slot on your watch (marked with red).

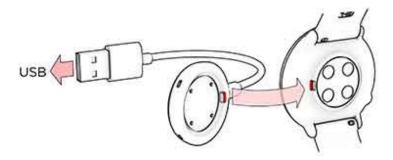

- 2. FlowSync starts syncing your data.
- 3. After syncing, you are asked to update the firmware.
- 4. Choose **Yes**. The New firmware is installed (this may take up to 10 minutes), and the watch restarts. Please wait until the firmware update has been finalized before you detach the watch from your computer.

# SETTINGS

### **GENERAL SETTINGS**

To view and edit your general settings, press the button in Time view, swipe down the menu and tap **Settings** and then **General settings**.

In General settings you'll find:

- · Pair and sync
- · Continuous HR tracking
- Flight mode
- Backlight brightness
- Do not disturb
- · Phone notifications
- Music controls
- Units
- Language
- Inactivity alert
- Vibrations
- · I wear my watch on
- Positioning satellites
- About your watch

### **PAIR AND SYNC**

- Pair and sync phone/Pair sensor or other device: Pair sensors or phones with your watch. Sync data with the Flow app.
- Paired devices: View all the devices you have paired with your watch. These can include heart rate sensors and phones.

### **CONTINUOUS HR TRACKING**

Turn the Continuous Heart Rate feature On, Off or Night-time only. For more information, see Continuous heart rate.

### **FLIGHT MODE**

Choose On or Off.

Flight mode cuts off all wireless communication from your watch. You can still use it, but you can't sync your data with the Polar Flow mobile app or use it with any wireless accessories.

### **BACKLIGHT BRIGHTNESS**

You can adjust the backlight brightness by choosing **High**, **Medium** or **Low**. Backlight brightness is set to **High** by default.

#### **DO NOT DISTURB**

Turn the Do not disturb feature **On**, **Off** or **On** ( - ). Set the period when do not disturb is on. Choose when it **Starts at** and **Ends at**. When it is set on, you will not get any notifications or call alerts. Also, the backlight activation gesture is disabled.

### **PHONE NOTIFICATIONS**

Set phone notifications **Off** or **On, when not training**. Note that you will not receive any notifications during training sessions.

#### MUSIC CONTROLS

Choose where you want to control music in **Training display** or in **Watch face** or in both. The music controls are on by default but if you don't want to use them, you can turn them off by removing both selections. When you're done tap **Save.** 

### **UNITS**

Choose metric (kg, cm) or imperial (lb, ft). Set the units used to measure weight, height, distance and speed.

### **LANGUAGE**

You can choose the language you want to use on your watch. Your watch supports the following languages: **Bahasa Indonesia**, **Čeština**, **Dansk**, **Deutsch**, **English**, **Español**, **Français**, **Italiano**, **Nederlands**, **Norsk**, **Polski**, **Português**, **Pyccкий**, **Suomi**, **Svenska**, 简体中文, 日本語 and **Türkçe**.

### **INACTIVITY ALERT**

Set the inactivity alert **On** or **Off**.

### **VIBRATIONS**

Set vibrations for scrolling menu items **On** or **Off**.

### I WEAR MY WATCH ON

Choose Left hand or Right hand.

### **POSITIONING SATELLITES**

You can change the satellite navigation system your watch uses in addition to GPS. The setting is located on your watch in **General settings** > **Positioning satellites**. You can choose **GPS + GLONASS**, **GPS + Galileo** or **GPS + QZSS**. The default setting is **GPS + GLONASS**. These options give you the possibility to test different satellite navigation systems and find out if they can give you improved performance in areas covered by them.

### **GPS + GLONASS**

GLONASS is a Russian global satellite navigation system. It is the default setting as its global satellite visibility and reliability is the best of these three, and in general we recommend using it.

### **GPS + Galileo**

Galileo is a global navigation satellite system created by the European Union. It is still under development and is estimated to be ready by the end of 2021.

### **GPS + QZSS**

QZSS is a four-satellite regional time transfer system and a satellite-based augmentation system developed to enhance GPS in the Asia-Oceania regions, with a focus on Japan.

### **ABOUT YOUR WATCH**

Check the device ID of your watch, as well as the firmware version, HW model, A-GPS expiry date and the Polar Ignite 2-specific regulatory labels. Restart your watch, turn it off or reset all data and settings on it.



**Restart**: If you experience problems with your watch, you can try restarting it. Restarting the watch will not delete any of the settings or your personal data from the watch. You can also restart your watch by pressing and holding the button for 10 seconds.

**Turn off**: Turn your watch off. To turn it back on press and hold the button.

**Reset all data and settings**: Reset the watch back to factory settings. This will erase all data and settings on your watch.

### **CHOOSE VIEWS**

Watch faces tell you a lot more than just the time. You'll get the most timely and relevant information right on the watch face, including your activity status, your heart rate, latest training sessions, Nightly Recharge status, FitSpark ondemand training suggestions, Weather and weekly training summary. You can scroll through the watch faces by swiping left or right and open a more detailed view by tapping the watch face.

Polar Ignite 2 supports up to ten different watch faces. Choose which watch faces are shown on the display in time view from **Settings > Choose views**.

For more information, see Watch faces.

### **WATCH FACE SETTINGS**

You can customize your Polar watch by choosing different watch face styles and colors from a set of pre-defined options.

To change the watch face style and color, go to **Settings > Watch face > Digital/Analog**.

Choose **Digital** or **Analog**. Then choose the style.

Under Digital you'll find Symmetry, Minutes in middle, Small seconds and Seconds in circle.

Symmetry

Minutes in middle

Small seconds

Seconds in circle

10:10

Wednesday 24/3

Seconds in circle

10:08

Wednesday 24/3

Under Analog you'll find Classic, Art Deco, Lollipop and Pearl.



You can also choose the color theme for your watch face. The available colors are red, orange, yellow, green, blue, purple, pink and peach.

Note that for the **Digital Symmetry** option you cannot change the color.



The watch faces and their contents cannot be edited apart from changing the watch face style or color.

### TIME & DATE

### **TIME**

Set the time format: 24 h or 12 h. Then set the time of day.



When syncing with the Flow app and web service, the time of day is automatically updated from the service.

### **DATE**

Set the date.

### **DATE FORMAT**

Also set the **Date format**, you can choose **dd.mm.yyyy, dd/mm/yyyy, dd-mm-yyyy, yyyy.mm.dd, yyyy/mm/dd, yyyy-mm-dd, mm.dd.yyyy, mm/dd/yyyy** or **mm-dd-yyyy**.



When syncing with the Flow app and web service, the date is automatically updated from the service.

### **FIRST DAY OF WEEK**

Choose the starting day of each week. Choose Monday, Saturday or Sunday.



When syncing with the Flow app and web service, the week's starting day is automatically updated from the service.

### PHYSICAL SETTINGS

To view and edit your physical settings, press the button in Time view, swipe down the menu and tap **Settings** and then **Physical settings**.

It is important that you are precise with the physical settings, especially when setting your weight, height, date of birth and sex, as they have an impact on the accuracy of the measuring values, such as the heart rate zone limits and calorie expenditure.

In Physical settings you'll find:

- Weight
- Height
- · Date of birth
- Sex
- Training background
- Activity goal
- · Preferred sleep time
- · Maximum heart rate
- · Resting heart rate
- VO<sub>2max</sub>

### WEIGHT

Set your weight in kilograms (kg) or pounds (lbs).

### **HEIGHT**

Set your height in centimeters (metric) or in feet and inches (imperial).

### DATE OF BIRTH

Set your birthday. The order in which the date settings are depends on which time and date format you have chosen (24h: day - month - year/12h: month - day - year).

#### **SEX**

Select Male or Female.

### TRAINING BACKGROUND

Training background is an assessment of your long-term physical activity level. Select the alternative that best describes the overall amount and intensity of your physical activity during the past three months.

- Occasional (0-1h/week): You do not participate regularly in programmed recreational sport or heavy physical activity, e.g. you walk only for pleasure or exercise hard enough to cause heavy breathing or perspiration only occasionally.
- **Regular (1-3h/week)**: You participate regularly in recreational sports, e.g. you run 5-10 km or 3-6 miles per week or spend 1-3 hours per week in comparable physical activity, or your work requires modest physical activity.
- **Frequent (3-5h/week)**: You participate at least 3 times a week in heavy physical exercise, e.g. you run 20-50 km/12-31 miles per week or spend 3-5 hours per week in comparable physical activity.
- **Heavy (5-8h/week)**: You participate in heavy physical exercise at least 5 times a week, and you may sometimes take part in mass sports events.
- **Semi-pro (8-12h/week)**: You participate in heavy physical exercise almost daily, and you exercise to improve performance for competitive purposes.
- **Pro (>12h/week)**: You are an endurance athlete. You participate in heavy physical exercise to improve your performance for competitive purposes.

### **ACTIVITY GOAL**

**Daily activity goal** is a good way to find out how active you really are in your everyday life. Choose your typical activity level from three options and see how active you need to be to reach your daily activity goal.

The time you need to complete your daily activity goal depends on the level you have chosen and the intensity of your activities. Age and gender also affect the intensity you need to reach your daily activity goal.

### Level 1

If your day includes only a little sports and a lot of sitting, commuting by car or public transport and so on, we recommend you pick this activity level.

### Level 2

If you spend most of your day on your feet, perhaps due to the type of work you do or your daily chores, this is the right activity level for you.

#### Level 3

If your work is physically demanding, you're into sports or otherwise tend to be on the move and active, this is the activity level for you.

### PREFERRED SLEEP TIME

Set **Your preferred sleep** time to define how long you aim to sleep every night. By default, it is set to the average recommendation for your age group (eight hours for adults from 18 to 64 years). If you feel that eight hours of sleep is too much or too little for you, we recommend you adjust your preferred sleep time to meet your individual needs. By doing this, you'll get accurate feedback on how much sleep you got in comparison to your preferred sleep time.

### **MAXIMUM HEART RATE**

Set your maximum heart rate, if you know your current maximum heart rate value. Your age-predicted maximum heart rate value (220-age) is displayed as a default setting when you set this value for the first time.

 ${\rm HR}_{\rm max}$  is used to estimate energy expenditure.  ${\rm HR}_{\rm max}$  is the highest number of heartbeats per minute during maximum physical exertion. The most accurate method for determining your individual  ${\rm HR}_{\rm max}$  is to perform a maximal exercise stress test in a laboratory.  ${\rm HR}_{\rm max}$  is also crucial when determining training intensity. It is individual and depends on age and hereditary factors.

### **RESTING HEART RATE**

Your resting heart rate is the lowest number of heartbeats per minute (bpm) when fully relaxed and without distractions. Your age, fitness level, genetics, health status and sex affect the resting heart rate. A typical value for an adult is 55–75 bpm, but your resting heart rate can be significantly lower than that, for example, if you're very fit.

It's best to measure your resting heart rate in the morning after a good night's sleep, right after you wake up. It's OK to go to the bathroom first if it helps you to relax. Don't do any strenuous training leading up to the measurement and make sure you're fully recovered from any activity. You should do the measurement more than once, preferably on consecutive mornings, and calculate your average resting heart rate.

### To measure your resting heart rate:

- 1. Wear your watch. Lie down on your back and relax.
- 2. After about 1 minute, start a training session on your wearable. Choose any sport profile, for example Other indoor
- 3. Lie still and breathe calmly for 3–5 minutes. Don't look at your training data during the measurement.
- 4. Stop the training session on your Polar device. Sync the wearable with the Polar Flow app or web service and check the training summary for the value of your lowest heart rate (HR min)—this is your resting heart rate. Update your resting heart rate to your physical settings in Polar Flow.

### VO<sub>2MAX</sub>

Set your VO2<sub>max</sub>.

VO2<sub>max</sub> (maximal oxygen uptake, maximal aerobic power) is the maximal rate at which oxygen can be used by the body during maximal exercise; it is related directly to the maximal capacity of the heart to deliver blood to the muscles. VO2<sub>max</sub> can be measured or predicted by fitness tests (e.g. maximal exercise tests and submaximal exercise tests). You can also use your Running Index score, which is an estimation of your VO2<sub>max</sub>. You can use the Polar Fitness Test with wrist-based heart rate feature to estimate your VO2<sub>max</sub> and update it to your physical settings.

### **DISPLAY ICONS**



<u>Flight mode</u> is on. Flight mode cuts off all wireless communication from your watch. You can still use it, but you can't sync your data with the Polar Flow mobile app or use it with any wireless accessories.



<u>Do not disturb</u> mode is on. When do not disturb is switched on, you will not get any notifications or call alerts. Also, the backlight activation gesture is disabled.



Vibrating alarm is set. To set the alarm, go to **Settings > Watch settings**.



Your paired phone is disconnected and you have notifications and/or music controls turned on. Check that your phone is within Bluetooth range from your watch and Bluetooth is enabled on your phone.



Screen lock is on. Press the button for 2 seconds to unlock the screen.

### RESTARTING AND RESETTING

If you experience problems with your watch, you can try restarting it. Restarting the watch will not delete any of the settings or your personal data from the watch.

### TO RESTART THE WATCH

Press the button to access the main menu, swipe down to find **Settings**, navigate to **Settings** > **General settings** > **About your watch** > swipe all the way down to find **Restart**. First, tap **Restart** and then tap to confirm the restart.

You can also restart your watch by pressing and holding the button for 10 seconds.

### TO RESET THE WATCH TO FACTORY SETTINGS

If restarting your watch didn't help, you can reset the watch back to factory settings. Note that resetting the watch back to factory settings empties all personal data and settings from the watch, and you will need to set it up again for your personal use. All data that you have synced from your watch to your Flow account is safe. You can do the factory reset via FlowSync or from the watch.

### **Factory reset via FlowSync**

- 1. Go to <u>flow.polar.com/start</u> and download and then install the Polar FlowSync data transfer software onto your computer.
- 2. Connect your watch to the computer's USB port.
- 3. Open settings in FlowSync.
- 4. Press the **Factory Reset** button.
- 5. If you use Flow app to sync, check the list of paired Bluetooth devices on your phone, and remove your watch from the list if it's there.

Now you need to set up your watch again, either via mobile or computer. Just remember to use the same Polar account in the setup you've used before resetting.

### Factory reset from the watch

- 1. Press the button to access the main menu, swipe down to find **Settings.**
- 2. Choose Settings > General settings > About your watch.
- 3. Swipe all the way down to find **Reset all data and settings**.
- 4. First, tap Reset all data and settings.
- 5. Then tap 🗸 to confirm the factory reset.

Now you need to set up your watch again, either via mobile or computer. Just remember to use the same Polar account in the setup you've used before resetting.



### WRIST-BASED HEART RATE MEASUREMENT


Your watch measures your heart rate from the wrist with the **Polar Precision Prime™** sensor fusion technology. This new heart rate innovation combines optical heart rate measurement with skin contact measurement, ruling out any disturbances to the heart rate signal. It tracks your heart rate accurately even in the most demanding conditions and training sessions.

Although there are many subjective clues as to how your body is doing during exercise (perceived exertion, breathing rate, physical sensations), none of them are as reliable as measuring heart rate. It is objective and affected by both internal and external factors—meaning that you will have a dependable measure of your physical state.

# WEARING YOUR WATCH WHEN MEASURING HEART RATE FROM YOUR WRIST OR TRACKING YOUR SLEEP

To measure wrist-based heart rate accurately during training, when using the <u>Continuous heart rate</u> and <u>Nightly</u> <u>Recharge</u> features or while tracking your sleep with <u>Sleep Plus Stages</u> make sure that you wear the watch correctly:

- Wear your watch on top of your wrist, at least a finger's width up from the wrist bone (see the picture below).
- Tighten the wristband firmly around your wrist. The sensor on the back must be in constant touch with your skin and the watch should not be able to move on your arm. A good way to check that the wristband is not too loose is if you push the wristband lightly up from both sides of your arm and make sure the sensor doesn't lift from your skin. When pushing the wristband up you shouldn't see the LED light shining from the sensor.
- For most accurate heart rate measurement, we advise you to wear your watch for a few minutes prior to starting the heart rate measurement. Also it's a good idea to warm up the skin if your hands and skin get cold easily. Get the blood going before starting your session!

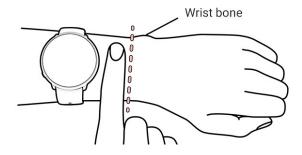



During training you should slide the Polar device further up from the wrist bone and wear the wristband a bit more tightly to try to minimize any extra moving of the device. Give your skin a few minutes to adapt to the Polar device before starting a training session. After the training session, loosen the wristband a bit.

If you have tattoos on the skin of your wrist, avoid placing the sensor right on them as they may prevent accurate readings.

In sports where it's more challenging to keep the sensor stationary on your wrist or where you have pressure or movement in muscles or tendons near the sensor, we recommend using a Polar heart rate sensor with a chest strap if you're looking for supreme accuracy in your training. Your watch is compatible with Bluetooth® heart rate sensors, like Polar H10. The Polar H10 heart rate sensor is more responsive to rapidly increasing or decreasing heart rate, so it's the ideal option also for interval type of training with quick sprints.



To maintain the best possible performance of the wrist-based heart rate measurement, keep your watch clean and prevent scratches. After a sweaty training session, we recommend that you wash the watch under running water with a mild soap and water solution. Then wipe it dry with a soft towel. Let it fully dry before charging.

# WEARING YOUR WATCH WHEN NOT MEASURING HEART RATE FROM YOUR WRIST OR TRACKING YOUR SLEEP/NIGHTLY RECHARGE

Loosen the wristband a bit for a more comfortable fit and to let your skin breathe. Wear the watch just as you would wear a normal watch.



Every once in a while it's a good idea to let your wrist have a breather, especially if you have sensitive skin. Take off your watch and recharge it. This way both your skin and your watch can have a rest, and be ready for your next training event.

### START A TRAINING SESSION

- 1. Wear your watch and tighten the wristband.
- 2. To enter the pre-training mode press the button to enter the main menu and tap **Start training**.



From the pre-training mode, you can access the quick menu by tapping the quick menu icon . The options displayed in the quick menu depend on the sport you have chosen and whether you are using GPS.

You can, for example, choose a favorite training target you want to perform and add timers to your training views. For more information, see Quick menu.

After your choice, the watch returns to the pre-training mode.


- 3. Browse to your preferred sport.
- 4. Stay in the pre-training mode until the watch has found your heart rate and the GPS satellite signals (if applicable to your sport) to make sure your training data is accurate. To catch GPS satellite signals, go outdoors and away from tall buildings and trees. Keep your watch still with the display upwards and avoid touching the watch during the GPS signal search.



If you have paired an optional Bluetooth sensor with your watch, the watch will automatically start searching for the sensor signal as well.



~ 13h Estimated training time with current settings. By using power save settings, the estimated training time can be extended.





The circle around the GPS icon will turn green when the GPS is ready. The watch notifies you with a vibration.

- 89 The watch has found your heart rate when your heart rate is shown.
- When you're wearing a Polar heart rate sensor that's paired with your watch, the watch automatically uses the connected sensor to measure your heart rate during training sessions. A blue circle around the heart rate symbol indicates that your watch uses the connected sensor to measure your heart rate.
- 5. When all signals are found, tap the display to start training recording.

See During Training for more information on what you can do with your watch during training.

### START A PLANNED TRAINING SESSION

You can plan your training and <u>create detailed training targets</u> in the Polar Flow app or the Polar Flow web service and sync them to your watch.

To start a planned training session scheduled for the current day:

- 1. Enter the pre-training mode by first pressing the button and then tappping on **Start training**.
- 2. You'll be prompted to start a training target you've scheduled for the day.



- 3. Tap view the target information.
- 4. Tap **Start** to return to pre-training mode, and choose the sport profile you want to use.
- 5. When the watch has found all the signals, tap the display. **Recording started** is displayed and you can start training.

Your watch will guide you towards completing your target during training. See During Training for more information.



Your planned training targets will also be included in the FitSpark training suggestions.

## **QUICK MENU**

You can access the quick menu by tapping the quick menu icon from pre-training mode and during a session when paused.



The options displayed in the quick menu depend on the sport you have chosen and whether you are using GPS.



### Power save settings:

The power save settings allow you to extend your training time by changing the **GPS recording rate** and setting **Wrist-based heart rate** off. These settings let you optimize battery usage and get more training time for extra long sessions or when the battery is running low.

For more information, see Power save settings



### Training suggestions:

Training suggestions shows you the daily FitSpark training suggestions.



#### Pool length:

When using the Swimming/Pool swimming profile, it's important that you choose the correct pool length, as it affects pace, distance and stroke calculation, as well as your SWOLF score. Tap **Pool length** to access the Pool length setting and change the previously set pool length if necessary. The default lengths are 25 meters, 50 meters and 25 yards, but you can also set it manually to a custom length. The minimum length that can be chosen is 20 meters/yards.



The pool length setting is only available in the pre-training mode from the quick menu.



### Favorites:

In Favorites you'll find training targets that you have saved as favorites in the Flow web service, and synced to your watch. Choose a favorite training target you want to perform. After your choice, the watch returns to the pre-training mode where you can start the training session.

For more information, see Favorites.



### Interval timer:

You can set time and/or distance based interval timers to precisely time work and recovery phases in your interval training sessions.

To add interval timer to your training views for the session, choose **Timer for this session > On**. You can use a previously set timer or create a new timer by returning to the quick menu and choosing **Interval timer > Set timers**:

- Choose Time-based or Distance-based: Time-based: Define minutes and seconds for the timer and tap . Distance-based: Set the distance for the timer and tap . Set another timer? is shown. To set another timer, tap .
- 2. When completed, the watch returns to pre-training mode where you can start the training session. The timer starts when you start the training session.

For more information, see **During Training**.



### Countdown timer:

To add countdown timer to your training views for the session, choose **Timer for this session** > **On**. You can use a previously set timer or create a new timer by returning to the quick menu and choosing **Countdown timer** > **Set timer**. Set the countdown time, and tap to confirm. When completed, the watch returns to pre-training mode where you can start the training session. The timer starts when you start the training session.

For more information, see During Training.

When you choose a training target for your session, the **Favorites** and **Training suggestions** options are crossed out in the quick menu. This is because you can only choose one target for the session. To change the target, choose the crossed out option and you will be asked if you want to change your target. Confirm another target by tapping .

### **DURING TRAINING**

### **BROWSE THE TRAINING VIEWS**

During training you can browse through the training views by swiping the display left or right. Note that the available training views and the information you see on the training views depend on the sport you've chosen and on any edits you've done to the chosen sport profile.

You can add sport profiles onto your watch and define the settings for each sport profile in the Polar Flow app and web service. You can create tailored training views for each sport you do and choose what data you want to follow during your sessions. For more information, see Sport profiles in Flow.

For example, your training views can have the following information:



Your heart rate and the heart rate ZonePointer

Distance

Duration

Pace/Speed



Your heart rate and the heart rate ZonePointer

Duration

Calories



Descent

Your current altitude

Ascent



Maximum heart rate

Heart rate graph and your current heart rate

Average heart rate



Time of day

Duration




For more information, see Music controls.



**Backlight always on during training:** Swipe down from the top of the screen to pull down the **Quick settings** menu. Tap the Backlight icon to select **Always on** or **Automatic**. With always on selected the watch display will be illuminated throughout your training session. The backlight setting will default back to automatic after you finish your training session. Please note that the always on selection will drain your battery much faster than the default setting.

#### **SET TIMERS**

Before you can use timers during training, you need to add the timers to your training views. You can do this either by setting the timer view on for your current training session from the <u>Quick menu</u> or by adding the timers to the training views of the sport profile in the Flow web service sport profile settings and syncing the settings to your watch.

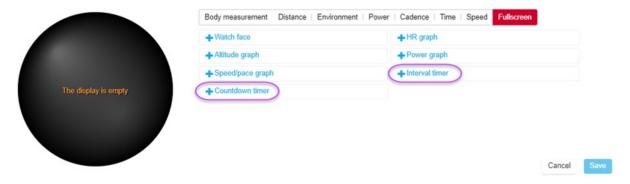

See Sport Profiles in Flow for more information.

### **Interval Timer**





If you set the timer view on for your training session from the <u>Quick menu</u>, the timer starts when you start the training session. You can stop the timer and start a new timer as instructed below.

If you have added the timer in the training views of the sport profile you are using, you can start the timer as follows:

- 1. Browse to the **Interval timer** view and press and hold the display for 3 seconds. Tap **Start** to use a previously set timer or create a new timer in **Set interval timer**.
- 2. Choose **Time-based** or **Distance-based**: **Time-based**: Define minutes and seconds for the timer and tap ... **Distance-based**: Set the distance for the timer and tap ...
- 4. When completed, tap **Start** to start the interval timer. At the end of each interval, the watch notifies you by vibrating.

To stop the timer, press and hold the display for 3 seconds and tap **Stop timer**.

### **Countdown Timer**





If you set the timer view on for your training session from the <u>Quick menu</u>, the timer starts when you start the training session. You can stop the timer and start a new timer as instructed below.

If you have added the timer to the training views of the sport profile you are using, start the timer as follows:

- 1. Browse to the **Countdown timer** view and press and hold the display for 3 seconds.
- 2. Tap **Start** to use a previously set timer or choose **Set countdown timer** to set a new countdown time. When completed, tap **Start** to start the countdown timer.
- 3. At the end of the countdown, the watch notifies you by vibrating. If you want to restart the countdown timer, press and hold the display for 3 seconds and tap **Start**.

### **AUTOMATIC LAP SETTINGS**

In sport profile settings in the Polar Flow app or web service, set **Automatic lap** to **Lap distance** or **Lap duration**. If you choose **Lap distance**, set the distance after which each lap is taken. If you choose **Lap duration**, set the duration after each lap is taken.

### TRAINING WITH A TARGET

If you have created a **training target** based on duration, distance or calories in the Flow app and synced it to your watch, you have the following training target view as the default first training view:



If you've created a target based on duration or distance, you can see how much of your target you still have remaining before you reach it.

OR

If you've created a target based on calories, you can see how many calories of your target you have left to burn.

If you have created a **phased training target** in the Flow app or web service and synced the target to your watch, you have the following training target view as the default first training view:



- Depending on the chosen intensity, you can see either your heart rate or speed/pace and the lower and upper heart rate or speed/pace limit of the current phase.
- Phase name and phase number/total number of phases
- Duration/distance covered so far
- Target duration/distance of the current phase



Your planned training targets will also be included in the FitSpark training suggestions.



See Planning your training for instructions on creating training targets.

### Change phase during a phased session

If you chose **manual phase change** when you created the phased target, tap the display to continue to the next phase after finishing a phase.

If your chose **automatic phase change**, the phase will change automatically when you have finished a phase. The watch notifies you by vibrating when the phase changes.



Note that when setting very short phases (under 10 seconds) you will not get a vibration alarm when the phase is over.

### **Notifications**

If you are training outside the planned heart rate zones or speed/pace zones, your watch notifies you with a vibration.

## PAUSING/STOPPING A TRAINING SESSION



Press the button to pause your training session.

Tap on the sport icon to continue training. To stop the session, press and hold the button. You'll get a summary of your training session on your watch right after you've stopped training.





If you stop your session after pausing, the time elapsed after pausing is not included in the total training time.

### TRAINING SUMMARY

### **AFTER TRAINING**

You'll get a summary of your training session on your watch right after you've stopped training. Get a more detailed and illustrated analysis in the Polar Flow app or in the Polar Flow web service.

The information shown in your summary depends on the sport profile and data collected. For example, your training summary can include the following information:



Start time and date

Duration of the session

Distance covered in the session



#### **Heart rate**

Your average and maximum heart rate during the session.

Your Cardio load from the session



#### **Heart rate zones**

Training time spent in different heart rate zones



### **Energy used**

Energy used during the session

Carbs

Protein

Fat

For more information, see **Energy Sources** 



### **Calories**

Calories burned during the session

Fat burn % of calories: Calories expended from fat during a workout expressed as a percentage of the total calories burned during the session



### Pace/Speed

Average and maximum pace/speed of the session

Running Index: Your running performance class and numerical value. Find out more from chapter Running Index.



### **Speed zones**

Training time spent in different speed zones



#### Cadence

Your average and maximum cadence for the session



Running cadence is measured with a built-in accelerometer from your wrist movements.



#### Altitude

Maximum altitude during the session

Ascended meters/feet during the session

Descended meters/feet during the session



Lap number

Best lap

Average lap

### To view your training summaries later on your watch:



In time view, swipe left or right to navigate to the **Latest training sessions** watch face, and then tap on the display.



You can view the summaries of your training sessions from the last 14 days. Browse to the training session you want to view by swiping up or down and tap the training session to open the summary. Your watch can contain a maximum of 20 training summaries.

### TRAINING DATA IN THE POLAR FLOW APP

Your watch syncs with the Polar Flow app automatically after you finish a training session if your phone is within the Bluetooth range. You can also sync your training data manually from the watch to the Flow app by pressing and holding the button of your watch when you're signed in to the Flow app and your phone is within the Bluetooth range. In the app you can analyze your data at a glance after each session. The app allows you to see a quick overview of your training data.

For more information, see Polar Flow App.

### TRAINING DATA IN THE POLAR FLOW WEB SERVICE

Analyze every detail of your training and learn more about your performance. Follow your progress and also share your best sessions with others.

For more information, see Polar Flow Web Service.

# **FEATURES**

# **SMART COACHING**

Whether it's assessing your day-to-day fitness levels, creating individual training plans, working out at the right intensity or receiving instant feedback, Smart Coaching offers a choice of unique, easy-to-use features, personalized to your needs and designed for maximum enjoyment and motivation when training.

Your watch includes the following Polar Smart Coaching features:

- <u>Nightly Recharge™ recovery measurement</u>
- Sleep Plus Stages™ sleep tracking
- FitSpark™ daily training guide
- Serene<sup>™</sup> guided breathing exercise
- Fitness Test
- Running Program
- Running Index
- Training benefit
- Smart calories
- Continuous heart rate
- 24/7 Activity tracking
- · Activity Benefit

#### NIGHTLY RECHARGE™ RECOVERY MEASUREMENT

**Nightly Recharge™** is an overnight recovery measurement that shows you how well you recover from the demands of your day. Your **Nightly Recharge status** is based on two components: how you slept (**sleep charge**) and how well your autonomic nervous system (ANS) calmed down during the early hours of your sleep (**ANS charge**). Both components are formed by comparing your last night to your usual levels from the past 28 days. Your watch automatically measures both sleep charge and ANS charge during the night.

You can see your Nightly Recharge status on your watch and in the Polar Flow app. Based on what we've measured from you, you get personalized daily tips in Polar Flow app on exercise, and tips on sleep and regulating your energy levels on those particularly rough days. Nightly Recharge helps you make optimal choices in your everyday life to maintain overall well-being and reach your training goals.

### How to start using Nightly Recharge?



- Continuous heart rate tracking needs to be enabled for Nightly Recharge to function. To enable Continuous HR tracking go to Settings > General Settings > Continuous HR tracking and choose On or Night-time only.
- 2. Tighten the wristband firmly around your wrist and wear the watch when you sleep. The sensor on the back of the watch must be in constant touch with your skin. For more detailed wearing instructions, see Wrist-based heart rate measurement.
- 3. You need to wear your watch for **three nights** before you start to see the Nightly Recharge status on your watch. This is how long it takes to establish your usual level. Before you get your Nightly Recharge you can view your sleep and ANS measurement details (heart rate, heart rate variability and breathing rate). After three successful nightly measurements you can see your Nightly Recharge status on your watch.

### Nightly Recharge on your watch

Already awake? is shown on the Nightly Recharge watch face when your watch has detected a minimum of four hours of sleep. Confirm by tapping and the watch summarizes your Nightly Recharge instantly. The Nightly Recharge status tells you how restorative last night was. Scores for both ANS charge and sleep charge are taken into account when calculating your Nightly Recharge status. Nightly Recharge status has the following scale: very poor – poor – compromised – OK – good – very good.

In time view, swipe left or right to navigate to the Nightly Recharge watch face.








Scroll down to **ANS charge details/Sleep charge details** and press OK to see further information about your **ANS charge** and your **sleep charge**.




- 1. Nightly Recharge status graph
- 2. **Nightly Recharge status** Scale: very poor poor compromised OK good very good.
- 3. ANS charge graph
- 4. **ANS charge** The scale is from -10 to +10. Around zero is your usual level.
- 5. ANS charge status Scale: much below usual below usual usual above usual much above usual.
- 6. Heart rate bpm (4 h average)
- 7. Beat-to-beat interval ms (4 h average)
- 8. Heart rate variability ms (4 h average)
- 9. Breathing rate br./min (4 h average)
- 10. Sleep score graph
- 11. **Sleep score (1 100)** A score that summarizes your sleep time and sleep quality into a single number.
- 12. **Sleep charge status** = Sleep score compared to your usual level. Scale: much below usual below usual usual above usual much above usual.
- 13. Sleep data details. See "Sleep data on your watch" on page 43 for more detailed information.

### Nightly Recharge in the Flow app

You can compare and analyze your Nightly Recharge details from different nights in the Polar Flow app. Choose **Nightly Recharge** from the Flow app menu to see the details of your last night's Nightly Recharge. Swipe the display right to see the Nightly Recharge details for previous days. Tap the **ANS charge** or **sleep charge** box to open detailed view of ANS charge or sleep charge.

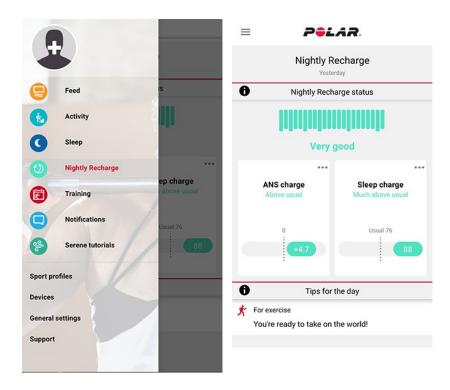

#### ANS charge details in the Flow app

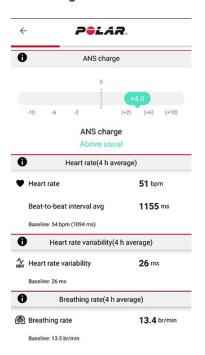

**ANS charge** gives you information on how well your autonomic nervous system (ANS) calmed down during the night. The scale is from -10 to +10. Around zero is your usual level. The ANS charge is formed by measuring your **heart rate**, **heart rate variability** and **breathing rate** during roughly the first four hours of sleep.

A normal **heart rate** value for adults can range between 40 and 100 bpm. It is common for your heart rate values to vary between nights. Mental or physical stress, exercising late at night, illness, or alcohol can keep your heart rate up during the early hours of your sleep. It's best to compare your last night's value to your usual level.

**Heart rate variability (HRV)** refers to the variation between successive heart beats. In general, high heart rate variability is linked to general good health, high cardiovascular fitness and resilience to stress. It can vary greatly from person to person, ranging from 20 to 150. It's best to compare your last night's value to your usual level.

**Breathing rate** shows your average breathing rate during roughly the first four hours of sleep. It is calculated from your beat-to-beat interval data. Your beat-to-beat intervals shorten when you breathe in and lengthen when you breathe out. During sleep, breathing rate slows down and varies mainly along with sleep stages. Typical values for a healthy adult at rest range from 12 to 20 breaths per minute. Higher values than usual may indicate a fever or impending illness.

#### Sleep charge details in Polar Flow

For sleep charge information in the Polar Flow app, see "Sleep data in the Flow app and web service" on page 44.

### Personalized tips in the Flow app

Based on what we've measured from you, you get personalized daily tips in the Polar Flow app on exercise, and tips on sleep and regulating your energy levels on those particularly rough days. Tips for the day are displayed on the opening view of Nightly Recharge in the Flow app.

#### For exercise

You get an exercise tip every day. It tells you if you should take it easy or go for it. The tips are based on:

- Nightly Recharge status
- ANS charge
- Sleep charge
- · Cardio load status


### For sleep

If you didn't sleep as well as usual, you get a sleep tip. It tells you how to improve the aspects of your sleep that weren't as good as usual. Besides parameters we measure from your sleep, we take into account:

- sleep rhythm over a longer period of time
- · Cardio load status
- exercise on the previous day

### For regulating energy levels

If your ANS charge status or sleep charge is particularly low, you get a tip that helps you get through the days with a lower recharge. They are practical tips on how to calm down when you're in overdrive, and how to energize when you need a boost.

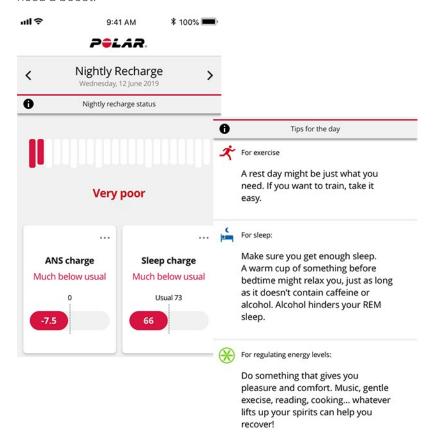

Learn more about the Nightly Recharge in this in-depth guide.


#### SLEEP PLUS STAGES™ SLEEP TRACKING

**Sleep Plus Stages** automatically tracks the **amount** and **quality** of your sleep and shows you how long you spent in each **sleep stage**. It gathers your sleep time and sleep quality components into one easily glanceable value, **sleep score**. Sleep score tells you how well you slept compared to the indicators of a good night's sleep based on the current sleep science.

Comparing the components of the sleep score to your own usual level help you recognize which aspects of your daily routine may affect your sleep and may need adjusting. Nightly breakdowns of your sleep are available on your watch and in the Polar Flow app. Long-term sleep data in the Polar Flow web service helps you analyze your sleep patterns in detail.

How to start tracking your sleep with Polar Sleep Plus Stages™

1. The first thing you need to do is set your preferred sleep time in the Polar Flow or on your watch. In the Flow app, tap your profile, and choose Your preferred sleep time. Choose your preferred time and tap Done. Or sign into your Flow account or create a new one at <u>flow.polar.com</u>, and choose Settings > Physical settings > Your preferred sleep time. Set your preferred time and choose Save. Set your preferred sleep time on your watch from Settings > Physical settings > Your preferred sleep time.

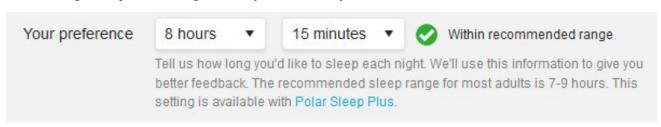

**Sleep time preference** is the amount of sleep you want to get each night. By default, it is set to the average recommendation for your age group (eight hours for adults from 18 to 64 years). If you feel that eight hours of sleep is too much or too little for you, we recommend you adjust your preferred sleep time to meet your individual needs. By doing this, you'll get accurate feedback on how much sleep you got in comparison to your preferred sleep time.

- 2. Continuous heart rate tracking needs to be enabled for Sleep Plus Stages to function. To enable Continuous HR tracking go to Settings > General Settings > Continuous HR tracking and select On or Night-time only. Tighten the wristband firmly around your wrist. The sensor on the back of the watch must be in constant touch with your skin. For more detailed wearing instructions, see Wrist-based heart rate measurement.
- 3. Your watch detects when you fall asleep, when you wake up and how long you spent sleeping. The Sleep Plus Stages measurement is based on recording the movements of your non-dominant hand with a built-in 3D acceleration sensor and recording your heart's beat-to-beat interval data from your wrist with an optical heart rate sensor.
- 4. In the morning you can see your **sleep score** (1-100) from your watch. You get sleep stages information (light sleep, deep sleep, REM sleep) and a sleep score after one night, including feedback on sleep themes (amount, solidity and regeneration). After the third night, you get a comparison to your usual level.
- 5. You can record your own perception of your sleep quality in the morning by rating it on your watch or in the Flow app. Your own rating is not taken into account in the sleep charge calculation, but you can record your own perception and compare it to the sleep charge assessment you get.

Sleep data on your watch



Nightly recharge
GOOD
ANS charge charge

-1.4 84

ANS charge details

Open
Sleep charge details

Open
Open



When you wake up you can access your sleep details via the <u>Nightly Recharge</u> watch face. Tap the display to open the Nightly recharge status details and then tap **Open** under **Sleep charge details**.

You can also stop the sleep tracking manually. **Already awake?** is shown on the sleep watch face when your watch has detected a minimum of four hours of sleep. Tap the **Already awake?** text to tell the watch that you're awake and it will ask you if you want to stop sleep tracking. Confirm by tapping and the watch summarizes your sleep instantly.

The sleep charge details view displays the following information:


- 1. Sleep score status graph
- 2. **Sleep score (1-100)** A score that summarizes your sleep time and sleep quality into a single number.
- 3. **Sleep charge** = Sleep score compared to your usual level. Scale: much below usual below usual above usual much above usual.
- 4. **Sleep time** tells you the total duration between when you fell asleep and when you woke up.
- 5. **Actual sleep (%)** tells the time spent asleep between the time you fell asleep and when you woke up. More specifically, it is your sleep time minus the interruptions. Only the time you actually spend asleep is included in actual sleep.
- 6. **Continuity (1-5)**: Sleep continuity is a rating of how continuous your sleep time was. Sleep continuity is evaluated on a scale from one to five: fragmented fairly fragmented fairly continuous continuous very continuous.
- 7. **Long interruptions (min)** tells the time you spent awake during the interruptions longer than one minute. During a normal night's sleep there are numerous short and long interruptions when you actually awaken from your sleep. Whether you remember these interruptions or not depends on their duration. The shorter ones we don't usually remember. The longer ones, for instance when one might get up for a sip of water, we can remember. Interruptions are illustrated as yellow bars on your sleep timeline.
- 8. **Sleep cycles**: A normal sleeper typically goes through 4-5 sleep cycles over the course of a night. This equals to a sleep time of approximately 8 hours.
- 9. REM sleep %: REM stands for rapid eye movement. REM sleep is also called paradoxical sleep as your brain is active but your muscles are inactive to avoid acting out dreams. Just as deep sleep restores your body, REM sleep restores your mind, and enhances memory and learning.
- 10. **Deep sleep** %: Deep sleep is the stage of sleep in which it is hard to be awakened since your body is less responsive to environmental stimuli. Most deep sleep occurs during the first half of the night. This sleep stage restores your body and supports your immune system. It also affects certain aspects of memory and learning. The stage of deep sleep is also called slow wave sleep.
- 11. **Light sleep** %: Light sleep serves as a transition stage between wakefulness and the deeper stages of sleep. You can be easily awoken from light sleep since your responsiveness to the environmental stimuli remains quite high. Light sleep also promotes mental and physical recovery, although REM and deep sleep are the most important sleep stages in that regard.

### Sleep data in the Flow app and web service


How you sleep is always individual — instead of comparing your sleep stats to others, follow your own long-term sleeping patterns to get a full understanding of how you sleep. Sync your watch with the Flow app after waking up to see your last night's sleep data in Polar Flow. Follow your sleep on a daily and weekly basis in the Flow app, and see

how your sleeping habits and activity during the day affect your sleep.


Choose **Sleep** from the Flow app menu to see your sleep data. In the Sleep structure view you see how your sleep has progressed through different sleep stages (light sleep, deep sleep and REM sleep) and any interruptions to your sleep. Usually sleep cycles proceed from light sleep into deep sleep and then to REM sleep. Typically, a night's sleep consists of 4 to 5 sleep cycles. This equals to approximately 8 hours of sleep. During a normal night's sleep there are numerous short and long interruptions. The long interruptions are displayed with the tall orange bars in the sleep structure graph.

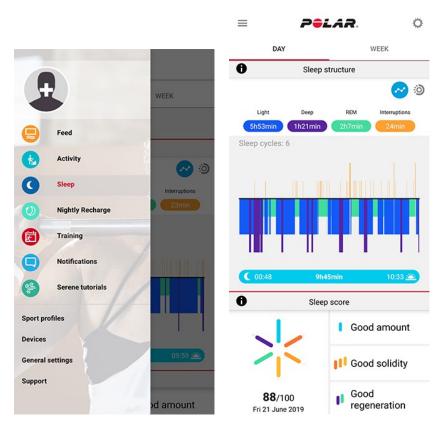

The six components of the sleep score are grouped under three themes: amount (sleep time), solidity (long interruptions, continuity and actual sleep) and regeneration (REM sleep and deep sleep). Each bar in the graph represents the score for each component. Sleep score is the average of these scores. By choosing the weekly view you can see how your sleep score and sleep quality (solidity and regeneration themes) vary during the week.

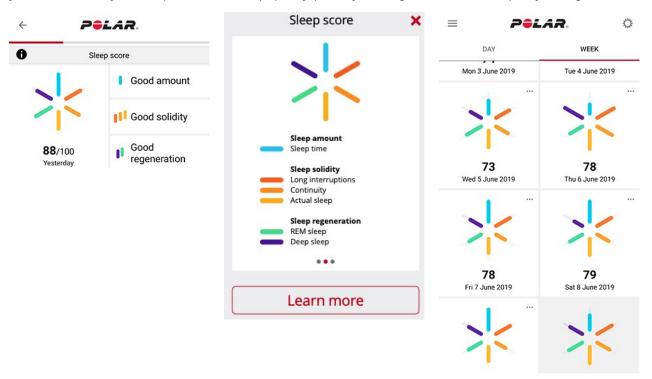

The Sleep rhythm section provides a weekly view of your sleep time and sleep stages.

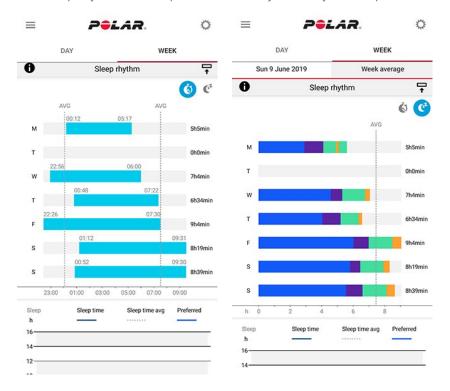

To view your long-term sleep data with sleep stages in the Flow web service go to **Progress**, and choose the **Sleep report** tab.

Sleep report gives you a long-term view to your sleep patterns. You can choose to view your sleep details for a 1-month, 3-month or 6-month period. You're able to see averages for the following sleep data: fell asleep, woke up, sleep time, REM sleep, deep sleep and interruptions to your sleep. You can view a nightly breakdown of your sleep data by hovering your mouse over the sleep graph.



Learn more about the Polar Sleep Plus Stages in this in-depth guide.

#### **SLEEPWISE™**

Polar SleepWiseTM helps you grasp how sleep contributes to your daytime alertness level and readiness to perform. In addition to the amount and quality of your recent sleep, we also take the effect of sleep rhythm into account. SleepWise shows how your recent sleep boosts your daytime alertness and readiness to perform. This is what we call **Boost from sleep**. It helps you reach and maintain a healthy sleep rhythm and it describes how your recent sleep affects your daytime alertness. Better alertness adds up to better readiness to perform by improving reaction time, accuracy, judgement and decision-making.


To ensure personalized feedback, please make sure that your **Preferred sleep time** setting matches your real sleep need

SleepWise is completely automatic and all you need to do is to track your sleep with Sleep Plus Stages compatible Polar watch. It is available in the Polar Flow app.


### **Daily Boost from sleep**

Note that you need to have at least five sleep results within the last seven days in order to see your Boost from sleep forecasts. In case you haven't worn your watch or if the sleep tracking was not successful, you can also add sleep times manually in the app to increase your sleep result count.


To see your Boost from sleep forecasts in the Polar Flow app, choose **Boost from sleep** from the menu or get a glance of the daily Boost from sleep forecast from the card in the **Diary**. Tapping the card opens the daily **Boost from sleep** view.

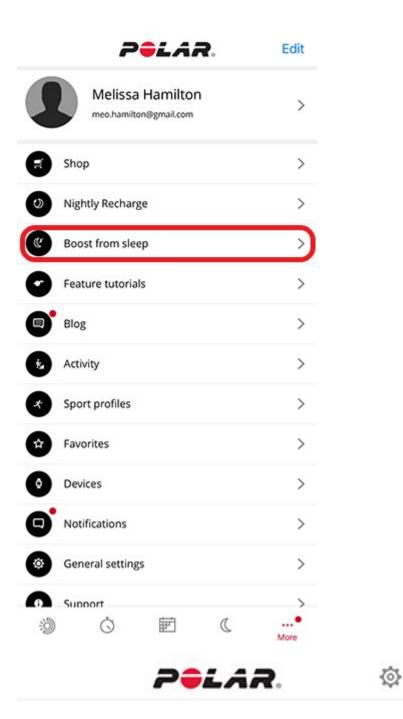

# Today

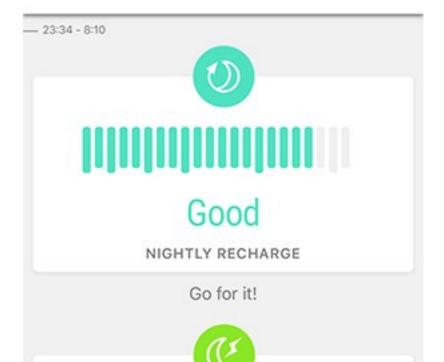

#### Boost from sleep view opens:

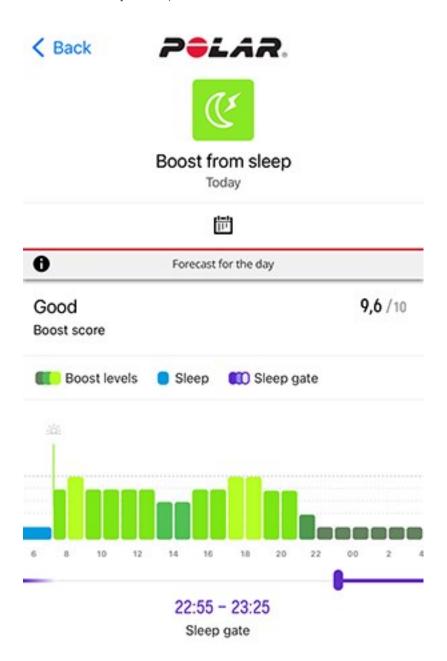

In the morning, you can see a forecast for how your sleep boost is expected to vary throughout the day, and plan alertness boosting activities accordingly (such as naps, coffee, or a walk outside). This provides simple visual and numeric feedback on any changes in your sleep rhythm. This way, you can easily recognize if the changes are for better or for worse. This helps helps you understand how the effects of sleep accumulate in the long run. It makes the impact of sleep debt and irregular sleep-wake rhythm visible.

**Boost score** summarizes the daily forecast into one number in order to make it easy to compare between days. Your boost score may be **excellent**, **good**, **fair**, or **modest**. Excellent boost score means that you get all the benefits of good sleep to support your day. Your boost score may be modest if you, for example, have a lot of sleep debt. You might see repeating patterns in the trend, for instance, because of weekends.

The daily **Forecast graph** shows how your recent sleep is expected to boost you throughout the day.

The lighter the shade and higher the bar, the higher the **boost level**. It means you're likely to feel sharp and ready to perform. The darker the shade and lower the boost. It means you may feel less alert – even drowsy.


#### **Boost levels**

Please notice that our forecast is based on sleep only. It doesn't react to anything else you might or might not do during the day. In other words, the graph won't react to the cups of coffee you might consume or the cold showers or brisk walks you might take. Inner motivation also plays a role in how sharp you feel. No matter how high your sleep-based boost level, you're likely to start feeling drowsy during the course of a very boring lecture. On the other hand, you might feel quite sharp even after a bad night's sleep, if you have a truly interesting task at hand. By following the daily forecast, you'll learn that your boost level tends to dip in the afternoon for some time and then go up again. There's no reason to worry about this afternoon slump though. It's regulated by your internal rhythm and is natural to all human beings. By studying the course of your past forecasts, you can learn how today's boost levels are not only affected by last night's sleep but also your recent sleep history. Staying up late on weekends, for example, can affect several days.

**Sleep gate** anticipates the time when your body is ready to fall asleep. However, your body's internal rhythm might not always align with your everyday commitments. That's why your sleep gate is not always your ideal bedtime in real life. This could be the case, for example, when you go back to work after a break – be it a longer vacation or just a weekend break.

### Weekly sleep

In the **Weekly sleep** view you can compare and analyze your Sleep details from different nights. Tap the calendar icon to access it.

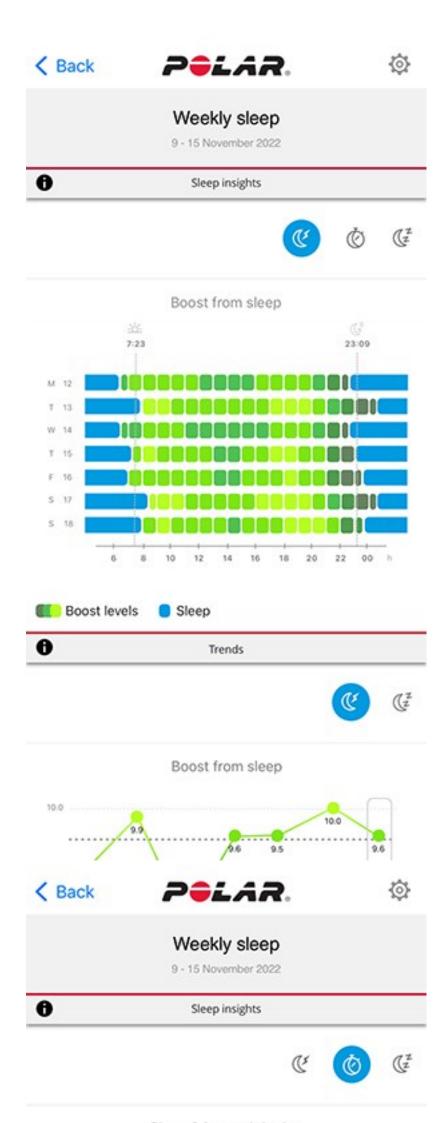

**Boost from sleep** graph shows how your sleep has affected your days lately. Based on this, you can consider making changes to your sleep schedule.

**Sleep & Internal rhythm** graph shows how much your actual sleep rhythm deviates from your body's internal circadian rhythm. Syncing these two rhythms – actual and internal – has many health benefits. Sticking to regular bedtimes and wake-up times can help you sync them. You can see how your behavior affects your internal rhythm. For example, staying up late on weekends or traveling over time zones may upset the sync of your rhythms.

**Sleep gate** anticipates the time when your body is ready to fall asleep. This may be clearly recognizable from your data or not. Irregular sleep rhythm or unusual sleeping hours can mess your internal rhythm and make sleep gate less prominent.

### Sleep gate recognizability

**3**/3 **1** 2/3 **1** 1/3

You can expect your sleep gate to be clearly recognizable (3/3), if your sleep rhythm is regular. In case your sleep rhythm changes drastically, your sleep gate is difficult to recognize.

### Internal rhythm



Your body's internal rhythm means there are times when your body naturally wants to be asleep or awake. The purple lines in the graph show your **sleep window** – the time span when your body would've naturally wanted to be asleep. The blue bars show your actual sleep rhythm. Syncing these two rhythms – actual and internal – has many health benefits. Sticking to regular bedtimes and wake-up times can help you sync them.

Many people working office hours tend to stay up late and sleep in on weekends. This is how they end up shifting their sleep gate towards staying up late on Sunday night as well. In this very typical case of social jet lag, trouble falling asleep on Sunday night may result in starting a new working week sleep-deprived. Going by the book, the trick to avoid Sunday insomnia and sleep-deprived Mondays is to go to bed and get up at the same time every day. However, if you've ended up staying up late, you should rather compensate that with a nice early afternoon nap instead of sleeping in.

### Scientific background

Polar SleepWise feature utilizes sleep tracking and biomathematical modeling for predicting daytime alertness based on how one has slept recently. To predict how sleep boosts one's alertness, Polar model evaluates sleep amount, quality, and timing against personal sleep need and one's body's internal circadian rhythm. The model predicts one's boost levels hour-by-hour, daily boost score, sleep gate, and sleep window. A sleep gate marks the start of one's sleep window - the time when one's body would naturally want to be asleep. It takes from 1 to 2 weeks for SleepWise to collect enough data to reach full reliability.

Biomathematical modeling is a generally accepted means to predict how different sleep schedules impact on alertness during waking hours. Several biomathematical models have been introduced in the scientific literature. While the details and terminology between the models differ, the models typically consider time awake, sleep-wake history, and the circadian rhythm. The outputs of the models have typically been validated against a psychomotor vigilance task after modest or severe sleep restrictions. The psychomotor vigilance task is a simple task where one presses a button as soon as the light appears on a screen. Results from such a task correlate with maintaining attention, problem solving, and decision making.

#### FITSPARK™ DAILY TRAINING GUIDE

The FitSpark™ training guide offers ready-made **daily on-demand workouts** available easily right on your watch. The workouts are built to match your fitness level, training history and your recovery and readiness, based on your <u>Nightly Recharge</u> status from the previous night. FitSpark gives you 2-4 different workout options every day: one that suits you best and 1-3 other options to choose from. You get a maximum of four suggestions per day and there are 19 different workouts in total. Suggestions include workouts from the **cardio**, **strength** and **supportive** training categories.

FitSpark workouts are ready-made <u>training targets</u> defined by Polar. The workouts include instructions on how to perform the exercises and real-time step-by-step guidance to ensure you exercise safely and with proper technique. All workouts are time-based, and they are adjusted based on your current fitness level, making the sessions suitable for everyone, regardless of fitness level. The FitSpark workout suggestions are updated after each training session (including training sessions done without FitSpark), at midnight and when you wake up. FitSpark keeps your training versatile with different types of daily workouts to choose from.

### How is your fitness level determined?

Your fitness level is determined for every workout suggestion based on your:

- Training history (average weekly heart rate zone realization from the previous 28 days)
- VO2max (from the Fitness test on your watch)
- Training background

You can start using the feature without any training history. However, FitSpark will work optimally after 7 days of use.



The higher the fitness level is, the longer the durations of the training targets are. The most demanding strength targets are not available at low fitness levels.

### What type of exercises are included in the training categories?

In cardio sessions you're guided to train in different heart rate zones for different durations. Sessions include time-based warm-up, work and cool-down phases. Cardio sessions can be completed with any sport profile on your watch.

Strength sessions are circuit training type workouts consisting of strength training exercises with time-based guidance. Bodyweight workouts can be done using your own body as resistance - there is no need for additional weights. In circuit training workouts you need a bumper plate, a kettlebell or dumbbells to perform the exercises.

Supportive sessions are circuit training type workouts consisting of strength **and** mobility exercises with time-based quidance.

### FitSpark on your watch

In time view, swipe left or right to navigate to the **FitSpark** watch face.

The **Fitspark** watch face includes the following views for different training categories:













**PROGRAM WATCH FACE:** If you have an active Running Program in Polar Flow your FitSpark suggestions are based on the Running Program training targets.

Tap the FitSpark watch face to see the most suitable workout for you based on your training history and fitness level. Tap the suggested workout to see detailed breakdown of the workout or tap **More** to see other optional workout suggestions. Swipe up to see the exercises included in the workout (strength and supportive workouts) and tap the individual exercise to see detailed instructions on how to perform the exercise. Tap **Start** to select the training target. Tap the sport profile to start the training target.









Box step-up

Rest

Sit-up

Kettlebell swing

Rest

Lat pull-down
1 min
Squat

Rest

Cool down

1 min

1 min

endurance.

Do each

exercise for 40 s, then rest until

the minute is

full. Choose and adjust your equipement so you can do the whole workout with a brisk


pace.



### **During training**

Your watch gives you guidance during training, which includes training information, time-based phases with heart rate zones for cardio targets and time-based phases with exercises for strength and supportive targets.

Strength training and supportive training sessions are based on ready-made workout plans with exercise animations and real-time step-by-step guidance. All sessions include timers and vibrations that let you know when it's time to switch to the next phase. Continue each movement for 40 seconds, then rest until the minute is full and start the next movement. When you've completed all rounds of the first set, start the next set manually. You can end a training session any time you like. You cannot skip or re-arrange training phases.

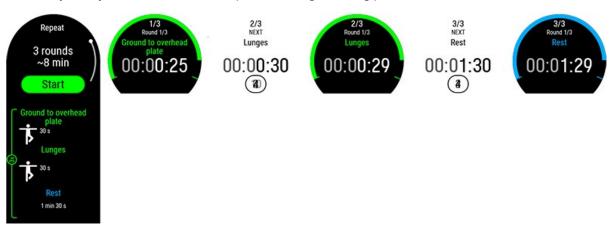




**Backlight always on during training:** Swipe down from the top of the display to pull down the **Quick settings** menu. Tap the Backlight icon to select **Always on** or **Automatic**. With always on the watch display will be illuminated throughout your training session. The backlight setting will default back to automatic after you finish your training session. Please note that selecting always on will drain your battery much faster than the default setting.

### Training results on your watch and in Polar Flow

You'll get a <u>summary</u> of your training session on your watch right after you've finished the session. You'll get a more detailed analysis in the Polar Flow app or in the Polar Flow web service. For cardio training targets you get a basic training result, which shows the phases of the session with heart rate data. For strength and supportive training targets you get detailed training results, which include your average heart rate and time spent on each exercise. These are displayed as a list, and each exercise is also displayed on the heart rate curve.

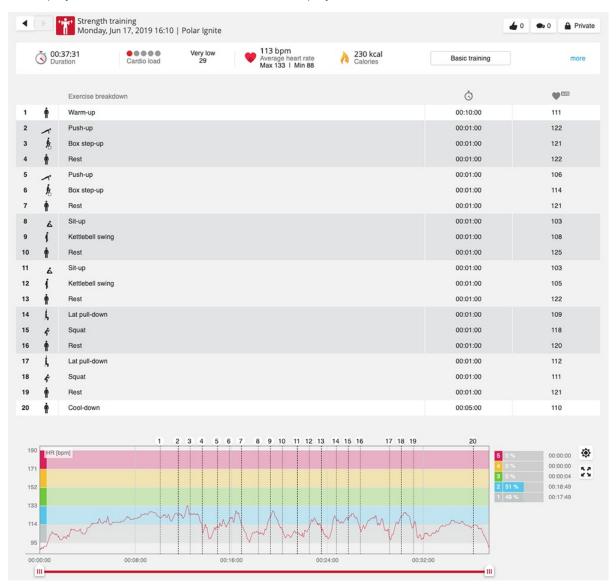



Training may include some risk. Before beginning a regular training program please read the <u>Minimizing</u> risks when training guidance.

#### SERENE™ GUIDED BREATHING EXERCISE

Serene<sup>™</sup> is a **guided deep breathing exercise** that helps you relax your body and mind and manage stress. Serene guides you to breathe at a slow, regular rhythm – **six breaths per minute**, which is the optimal breathing rate for **stress-relieving effects**. When you breathe slowly, your heart beat starts to synchronize with the rhythm of your breathing and your heart's beat-to-beat intervals start to vary more.

During the breathing exercise your watch helps you maintain a regular slow breathing rhythm with an animation on the watch display and by vibrating. Serene measures your body's response to the exercise and gives you real-time biofeedback on how you're doing. After the exercise, you get a summary of the time you spent on the three **serenity zones**. The higher the zone, the better the synchronization with the optimal rhythm was. The more time you spend in the higher zones, the more benefits you can expect to feel in the long-term. When you use the Serene breathing exercise regularly, it can help you **manage stress**, improve the **quality of your sleep** and give you a sense of improved **overall well-being**.

### Serene breathing exercise on your watch

The Serene breathing exercise guides you to **breathe deeply and slowly** to calm down the body and mind. When you breathe slowly, your heart beat starts to synchronize with the rhythm of your breathing. Your heart's beat-to-beat intervals vary more when your breathing is deeper and slower. Deep breathing produces measurable responses in the heart's beat-to-beat intervals. When you breath in, intervals between consecutive heart beats shorten (heart rate speeds up) and when you breath out, intervals between consecutive heart beats lengthen (heart rate slows down). The variance of your heart's beat-to-beat intervals is greatest when you are closest to the **6 breathing cycles per minute** rhythm (inhale + exhale = 10 seconds). This is the optimal rate for **stress-relieving effects**. This is why your success is measured not only from the synchronization, but also from how close you were to the optimal breathing rate.

The default duration of Serene breathing exercise is 3 minutes. You can adjust the duration of the breathing exercise in range between 2-20 minutes. You can also adjust inhale and exhale durations if needed. Fastest breathing frequency can be 3 seconds for inhale and 3 seconds for exhale resulting 10 breaths per minute. Slowest breathing frequency is 5 seconds for inhale and 7 seconds for exhale resulting 5 breaths per minute.





Check that your position allows you to keep your arms relaxed and your hands still throughout the entire breathing exercise. This allows you to relax properly and ensures that your Polar watch can accurately measure the effects of the session.

- 1. Wear your watch snugly just behind the wrist bone.
- 2. Sit or lie down comfortably.
- 3. On your watch, choose **Serene** and then choose **Start** to start breathing exercise. Exercise starts with a 15 seconds preparatory phase.
- 4. Follow the breathing guidance on the display or through the vibration.
- 5. You can end the exercise by pressing the button at any time.
- 6. The main guiding element in the animation **changes color** according to which serenity zone you're currently in.
- 7. After the exercise, you'll see your results displayed on your watch as time spent in the different serenity zones.







The **serenity zones** are Amethyst, Sapphire and Diamond. The serenity zones tell you how well your heartbeat and breathing are in sync and how close you are to the optimal breathing rate of six breaths per minute. The higher the zone, the better the synchronization with the optimal rhythm. For the highest serenity zone, Diamond, you need to sustain a slow target rhythm of around six breaths per minute, or slower. The more time you spend in the higher zones, the more benefits you can expect to feel in the long-term.

### Breathing exercise result

After the exercise, you get a summary of the time you spent on the three serenity zones.



Learn more about the Serene™ guided breathing exercise in this in-depth guide.

### FITNESS TEST WITH WRIST-BASED HEART RATE

The Polar Fitness Test with wrist-based heart rate is an easy, safe and quick way to estimate your aerobic (cardiovascular) fitness at rest. It's a simple 5-minute fitness level assessment that gives you an estimate of your maximal oxygen uptake (VO2max). The Fitness Test calculation is based on your resting heart rate, heart rate variability and your personal information: gender, age, height, weight, and self-assessment of your physical activity level called the training background. The Polar Fitness Test is developed for use by healthy adults.

Aerobic fitness relates to how well your cardiovascular system works to transport oxygen to your body. The better your aerobic fitness, the stronger and more efficient your heart is. Good aerobic fitness has many health benefits. For example, it helps in decreasing the risk of high blood pressure and your risk of cardiovascular diseases and stroke. If you want to improve your aerobic fitness it takes, on average, six weeks of regular training to see a noticeable change in your fitness test result. Less fit individuals see progress even more rapidly. The better your aerobic fitness, the smaller the improvements in your result.

Aerobic fitness is best improved by training types that use large muscle groups. Such activities include running, cycling, walking, rowing, swimming, skating, and cross-country skiing. To monitor your progress, start by performing the test a couple of times during the first two weeks in order to get a baseline value, and then repeat the test approximately once a month.

To make sure the test results are reliable, the following basic requirements apply:

- You can perform the test anywhere at home, at the office, at a health club provided the testing environment is peaceful. There should be no disturbing noises (e.g. television, radio, or telephone) and no other people talking to you.
- Always take the test in the same environment and at the same hour.
- Avoid eating a heavy meal or smoking 2-3 hours prior to testing.
- Avoid heavy physical exertion, alcohol, and pharmaceutical stimulants on the test day and the previous day.
- You should be relaxed and calm. Lie down and relax for 1-3 minutes before starting the test.

#### Before the test

Before starting the test, make sure your physical settings including training background are accurate in **Settings > Physical settings**.

Wear your watch snugly on top of your wrist, at least a finger's width up from the wrist bone. The heart rate sensor on the back of your watch must be in constant touch with your skin.

### Performing the test

To perform the fitness test, press the button and swipe down to find **Fitness Test**. First, tap **Fitness Test** and then on **Relax and start the test**.

- When heart rate is found, your current heart rate and **Lie down & relax** is shown on the display. Stay relaxed and limit body movements and communication with other people.
- You can interrupt the test in any phase by pressing the button. **Test canceled** is shown.

If the watch cannot receive your heart rate signal, the message **Test failed** is shown. In which case, you should check that the heart rate sensor on the back of the watch is in constant touch with your skin. See <u>Wrist-based heart rate</u> <u>measurement</u> for detailed instructions on wearing your watch when measuring heart rate from your wrist.

#### **Test results**

When the test is over, your watch notifies you by vibrating and shows a description of your fitness test result and your estimated  $VO_{2max}$ .

### Update to VO2<sub>2max</sub> to physical settings? is shown.

- Tap to save the value to your Physical settings.
- Tap x to cancel only if you know your recently measured VO<sub>2max</sub> value, and if it differs more than one fitness level class from the result.

Your latest test result is shown in **Tests > Fitness test > Latest result**. Only your most recently performed test result is shown.

For a visual analysis of your Fitness test results, go to the Flow web service and select the test from your Diary to view details from it.



Your watch syncs with the Flow app automatically after the test if your phone is within the Bluetooth range.

#### Fitness level classes

#### Men

Age / Years	Very low	Low	Fair	Moderate	Good	Very good	Elite
20-24	< 32	32-37	38-43	44-50	51-56	57-62	> 62
25-29	< 31	31-35	36-42	43-48	49-53	54-59	> 59
30-34	< 29	29-34	35-40	41-45	46-51	52-56	> 56
35-39	< 28	28-32	33-38	39-43	44-48	49-54	> 54
40-44	< 26	26-31	32-35	36-41	42-46	47-51	> 51
45-49	< 25	25-29	30-34	35-39	40-43	44-48	> 48
50-54	< 24	24-27	28-32	33-36	37-41	42-46	> 46
55-59	< 22	22-26	27-30	31-34	35-39	40-43	> 43

Age / Years	Very low	Low	Fair	Moderate	Good	Very good	Elite
60-65	< 21	21-24	25-28	29-32	33-36	37-40	> 40

#### Women

Age / Years	Very low	Low	Fair	Moderate	Good	Very good	Elite
20-24	< 27	27-31	32-36	37-41	42-46	47-51	> 51
25-29	< 26	26-30	31-35	36-40	41-44	45-49	> 49
30-34	< 25	25-29	30-33	34-37	38-42	43-46	> 46
35-39	< 24	24-27	28-31	32-35	36-40	41-44	> 44
40-44	< 22	22-25	26-29	30-33	34-37	38-41	> 41
45-49	< 21	21-23	24-27	28-31	32-35	36-38	> 38
50-54	< 19	19-22	23-25	26-29	30-32	33-36	> 36
55-59	< 18	18-20	21-23	24-27	28-30	31-33	> 33
60-65	< 16	16-18	19-21	22-24	25-27	28-30	> 30

The classification is based on a literature review of 62 studies where  $VO_{2max}$  was measured directly in healthy adult subjects in the USA, Canada and 7 European countries. Reference: Shvartz E, Reibold RC. Aerobic fitness norms for males and females aged 6 to 75 years: a review. Aviat Space Environ Med; 61:3-11, 1990.

# VO<sub>2max</sub>

A clear link exists between maximal oxygen consumption (VO2 $_{max}$ ) of the body and cardiorespiratory fitness because oxygen delivery to tissues is dependent on lung and heart function. VO2 $_{max}$  (maximal oxygen uptake, maximal aerobic power) is the maximal rate at which oxygen can be used by the body during maximal exercise; it is related directly to the maximal capacity of the heart to deliver blood to the muscles. VO2 $_{max}$  can be measured or predicted by fitness tests (e.g. maximal exercise tests, submaximal exercise tests, Polar Fitness Test). VO2 $_{max}$  is a good index of cardiorespiratory fitness and a good predictor of performance capability in endurance events such as distance running, cycling, cross-country skiing, and swimming.

 $VO2_{max}$  can be expressed either as milliliters per minute (ml/min = ml  $\blacksquare$  min-1) or this value can be divided by the person's body weight in kilograms (ml/kg/min = ml  $\blacksquare$  kg-1 $\blacksquare$  min-1).

### TRAINING LOAD PRO™

The Training Load Pro™ feature measures how your training sessions strain your body and helps to understand how it impacts your performance. The Training Load Pro gives you a training load level for your cardiovascular system **Cardio load**, and with **Perceived load** you can rate how strained you feel. When you know how strained each body system is, you can optimize your training by working the right system at the right time.

### Cardio load

Cardio load is based on training impulse calculation (TRIMP), a commonly accepted and scientifically proven method to quantify training load. Your Cardio load value tells you how much strain your training session put on your cardiovascular system. The higher the Cardio load, the more strenuous the training session was for the cardiovascular system. Cardio load is calculated after every workout from your heart rate data and session duration.

#### Perceived load

Your subjective feeling is one useful method of estimating training load for all sports. The **Perceived load** is a value that takes into account your own subjective experience of how demanding your training session was and the duration of your session. It's is quantified with **Rate of Perceived Exertion (RPE)**, a scientifically accepted method to quantify

subjective training load. Using the RPE scale is especially useful for sports where measuring training load based on heart rate alone has its limitations, for example strength training.




Rate your session in the Flow mobile app to get your **Perceived load** for the session. You can choose from a scale from 1-10, in which 1 is very, very easy and 10 is maximum effort.


### Training load from a single session

Your training load from a single session is shown in the summary of your training session on your watch, in the Flow app and in the Flow web service.

You'll get an absolute training load number for each measured load. The higher the load, the more strain it caused to your body. In addition, you can see a visual bullet scale interpretation and a verbal description of how hard your training load from the session was compared to your 90 days training load average.

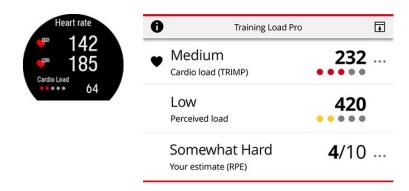

The scale of bullets and verbal descriptions adapts according to your progress: the smarter you train, the higher loads you tolerate. As your fitness and tolerance for training improves, a training load that was ranked worth 3 bullets (Medium) a couple of months ago, could rank for only 2 bullets (Low) later on. This adaptive scale reflects the fact that the same kind of training session can have a different impact on your body depending on your current condition.

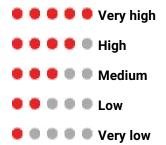

### Strain and Tolerance

In addition to the Cardio load from individual training sessions, the new Training Load Pro feature measures your short term Cardio load (Strain) and long term Cardio load (Tolerance).

**Strain** shows you how much you have strained yourself with training lately. It shows your average daily load from the past 7 days.

**Tolerance** describes how prepared you are to endure cardio training. It shows your average daily load from the past 28 days. To improve your tolerance for cardio training, you need to slowly increase your training over a longer period of time.


### Cardio load status


Cardio load status looks at the relation between your **Strain** and **Tolerance** and based on that shows you whether you are in a detraining, maintaining, productive or overreaching Cardio load status. Cardio load status guides you in evaluating the impact your training has on your body and how it affects your progress. Knowing how your past training affects your performance today allows you to keep your total training volume in control and optimize the timing of

training at different intensities. Seeing how your training status changes after a session helps you understand how much load was caused by the session.

### Long term analysis in the Flow app and web service

In the Flow app and web service you can follow how your Cardio Load builds up over time and see how your Cardio loads have varied over the past week or months. To view your Cardio Load Buildup in the Flow app, tap the vertical three dots icon in the training summary (Training Load Pro module).

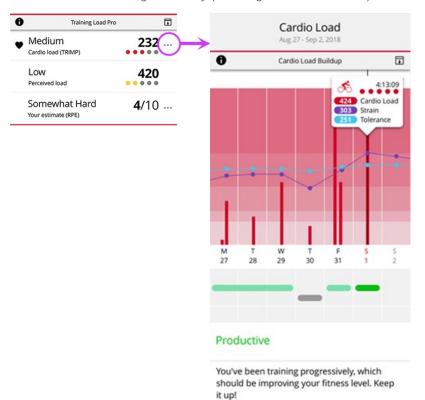

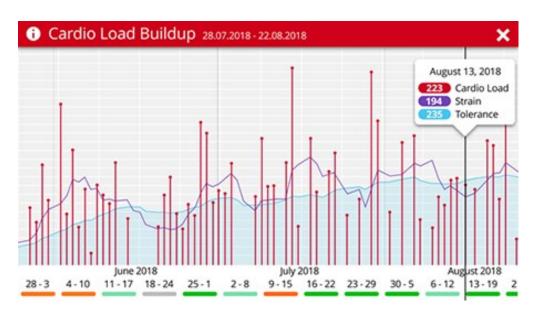

To view your Cardio load status and Cardio load buildup in the Flow web service, go to Progress > Cardio Load report.



#### **Cardio load status**

- Overreaching (Load much higher than usual):
- Productive (Load slowly increasing)
- Maintaining (Load slightly lower than usual)
- Detraining (Load way lower than usual)
- The red bars illustrate the cardio load from your training sessions. The higher the bar, the harder the session was on your cardio system.
- The background colors show how hard a session was compared to your session average from the past 90 days, just like the scale of five bullets and verbal descriptions (Very low, Low, Medium, High, Very high).
- **Strain** shows how much you have strained yourself with training lately. It shows your average daily cardio load from the past 7 days.
- **Tolerance** describes how prepared you are to endure cardio training. It shows your average daily cardio load from the past 28 days. To improve your tolerance for cardio training, slowly increase your training over a longer period of time.

### **POLAR RUNNING PROGRAM**

Polar Running program is a personalized program based on your fitness level, designed to make sure that you train right and avoid overreaching. It's intelligent, and adapts based on your development, and lets you know when it might be a good idea to cut back a little and when to step it up a notch. Each program is tailored for your event, taking your personal attributes, training background and preparation time into account. The program is free, and available in the Polar Flow web service at flow.polar.com.

Programs are available for 5k, 10k, half marathon and marathon events. Each program has three phases: Base building, Build-up and Tapering. These phases are designed to gradually develop your performance, and make sure you're ready on race day. Running training sessions are divided into five types: easy jog, medium run, long run, tempo run and interval. All sessions include warm-up, work, and cool-down phases for optimal results. In addition, you can choose to do strength, core, and mobility exercises to support your development. Each training week consists of two to five running sessions, and the total running training session duration per week varies from one to seven hours depending on your fitness level. The minimum duration for a program is 9 weeks, and the maximum is 20 months.

Learn more about the Polar Running Program in this <u>in-depth guide</u>. Or read more about how to <u>get started with the Running Program</u>.

To see a video, click on one of the following links:

### **Get Started**

#### How to use

## Create a Polar Running Program

- 1. Log into the Flow web service at flow.polar.com.
- 2. Choose **Programs** from the Tab.
- 3. Choose your event, name it, set the event date, and when you wish to start the program.
- 4. Fill in the physical activity level questions.\*
- 5. Choose if you want to include supporting exercises in the program.
- 6. Read and fill in the physical activity readiness questionnaire.
- 7. Review your program, and adjust any settings if necessary.
- 8. When you're done, choose **Start program**.

\*If four weeks of training history is available, these will be pre-filled.

### Start a running target

Before starting a session, make sure you've synced your training session target to your device. The sessions are synced to your device as training targets.

To start a training target scheduled for the current day:

- 1. Enter the pre-training mode by pressing first the button and then tapping Start training.
- 2. You'll be prompted to start a training target you've scheduled for the day.



- 3. Tap view the target information.
- 4. Press the button to return to pre-training mode, and choose the sport profile you want to use.
- 5. When the watch has found all the signals, tap the display. **Recording started** is displayed and you can start training.

### Follow your progress

Sync your training results from your device to the Flow web service via the USB cable or the Flow app. Follow your progress from the **Programs** tab. You'll see an overview of your current program, and how you've progressed.

### **RUNNING INDEX**

Running Index offers an easy way to monitor running performance changes. The Running index score is an estimate of your maximal aerobic running performance (VO2max). By recording your Running Index over time, you see how efficient your running is and how you improve your running performance. Improvement means that running at a given pace requires less of an effort, or that your pace is faster at a given level of exertion.

To receive the most accurate information on your performance, make sure you have set your HR<sub>may</sub> value.

Running Index is calculated during every training session when heart rate and the GPS function is on and when the following requirements apply:

- Sport profile used is a running type sport (Running, Road Running, Trail running etc.)
- Pace should be 6 km/h / 3.7 mph or faster and duration 12 minutes minimum.

Calculation begins when you start recording the session. During a session, you may stop twice, for example, at traffic lights without interrupting the calculation. After your session, your watch displays a Running Index value and stores the result in the training summary.



You can view your Running Index in the summary of your training session on your watch. Follow your progress and see race time estimations in the Polar Flow web service.

Compare your result to the table below.

### **Short-term analysis**

#### Men

Age/Years	Very low	Low	Fair	Moderate	Good	Very good	Elite
20-24	< 32	32-37	38-43	44-50	51-56	57-62	> 62
25-29	< 31	31-35	36-42	43-48	49-53	54-59	> 59
30-34	< 29	29-34	35-40	41-45	46-51	52-56	> 56
35-39	< 28	28-32	33-38	39-43	44-48	49-54	> 54
40-44	< 26	26-31	32-35	36-41	42-46	47-51	> 51
45-49	< 25	25-29	30-34	35-39	40-43	44-48	> 48
50-54	< 24	24-27	28-32	33-36	37-41	42-46	> 46
55-59	< 22	22-26	27-30	31-34	35-39	40-43	> 43
60-65	< 21	21-24	25-28	29-32	33-36	37-40	> 40

#### Women

Age/Years	Very low	Low	Fair	Moderate	Good	Very good	Elite
20-24	< 27	27-31	32-36	37-41	42-46	47-51	> 51
25-29	< 26	26-30	31-35	36-40	41-44	45-49	> 49
30-34	< 25	25-29	30-33	34-37	38-42	43-46	> 46
35-39	< 24	24-27	28-31	32-35	36-40	41-44	> 44
40-44	< 22	22-25	26-29	30-33	34-37	38-41	> 41
45-49	< 21	21-23	24-27	28-31	32-35	36-38	> 38
50-54	< 19	19-22	23-25	26-29	30-32	33-36	> 36
55-59	< 18	18-20	21-23	24-27	28-30	31-33	> 33
60-65	< 16	16-18	19-21	22-24	25-27	28-30	> 30

The classification is based on a literature review of 62 studies where  $VO_{2max}$  was measured directly in healthy adult subjects in the USA, Canada and 7 European countries. Reference: Shvartz E, Reibold RC. Aerobic fitness norms for males and females aged 6 to 75 years: a review. Aviat Space Environ Med; 61:3-11, 1990.

There may be some daily variation in the Running Indexes. Many factors influence Running Index. The value you receive on a given day is affected by changes in running circumstances, for example different surface, wind or temperature, in addition to other factors.

### Long-term analysis

The single Running Index values form a trend that predicts your success in running certain distances. You can find your Running Index report in the Polar Flow web service under the **PROGRESS** tab. The report shows you how your running performance has improved over a longer time period. If you're using the <u>Polar Running program</u> to train for a running event, you can follow your Running Index progress to see how your running is improving towards the goal.

The following chart estimates the duration that a runner can achieve in certain distances when performing maximally. Use your long-term Running Index average in the interpretation of the chart. The prediction is best for those Running Index values that have been received at speed and running circumstances similar to the target performance.

Running Index	Cooper test (m)	5 km (h:mm:ss)	10 km (h:mm:ss)	21.098 km (h:m- m:ss)	42.195 km (h:m- m:ss)
36	1800	0:36:20	1:15:10	2:48:00	5:43:00
38	1900	0:34:20	1:10:50	2:38:00	5:24:00
40	2000	0:32:20	1:07:00	2:29:30	5:06:00
42	2100	0:30:40	1:03:30	2:21:30	4:51:00
44	2200	0:29:10	1:00:20	2:14:30	4:37:00
46	2300	0:27:50	0:57:30	2:08:00	4:24:00
48	2400	0:26:30	0:55:00	2:02:00	4:12:00
50	2500	0:25:20	0:52:40	1:57:00	4:02:00
52	2600	0:24:20	0:50:30	1:52:00	3:52:00
54	2700	0:23:20	0:48:30	1:47:30	3:43:00
56	2800	0:22:30	0:46:40	1:43:30	3:35:00
58	2900	0:21:40	0:45:00	1:39:30	3:27:00
60	3000	0:20:50	0:43:20	1:36:00	3:20:00
62	3100	0:20:10	0:41:50	1:32:30	3:13:00
64	3200	0:19:30	0:40:30	1:29:30	3:07:00
66	3300	0:18:50	0:39:10	1:26:30	3:01:00
68	3350	0:18:20	0:38:00	1:24:00	2:55:00
70	3450	0:17:50	0:36:50	1:21:30	2:50:00
72	3550	0:17:10	0:35:50	1:19:00	2:45:00
74	3650	0:16:40	0:34:50	1:17:00	2:40:00
76	3750	0:16:20	0:33:50	1:14:30	2:36:00
78	3850	0:15:50	0:33:00	1:12:30	2:32:00

### TRAINING BENEFIT

Training Benefit gives you textual feedback on the effect of each training session helping you to better understand the effectiveness of your training. **You can see the feedback in Flow app and Flow web service.** To get the feedback, you need to have trained at least a total of 10 minutes in the heart rate zones.

Training Benefit feedback is based on heart rate zones. It reads into how much time you spend and how many calories you burn in each zone.

The descriptions of different training benefit options are listed in the table below

Feedback	Benefit  What a session! You improved your sprint speed and the nervous system of your muscles, which make you more efficient. This session also increased your resistance to fatigue.						
Maximum training+							
Maximum training	What a session! You improved your sprint speed and the nervous system of your muscles, which make you more efficient.						
Maximum & Tempo training	What a session! You improved your speed and efficiency. This session also significantly developed your aerobic fitness and your ability to sustain high intensity effort for longer.						
Tempo & Maximum train- ing	What a session! You significantly improved your aerobic fitness and your ability to sustain high intensity effort for longer. This session also developed your speed and efficiency.						
Tempo training+	Great pace in a long session! You improved your aerobic fitness, speed, and ability to sustain high intensity effort for longer. This session also increased your resistance to fatigue.						
Tempo training	Great pace! You improved your aerobic fitness, speed, and ability to sustain high intensity effort for longer.						
Tempo & Steady state training	Good pace! You improved your ability to sustain high intensity effort for longer. This session also developed your aerobic fitness and the endurance of your muscles.						
Steady state & Tempo training	Good pace! You improved your aerobic fitness and the endurance of your muscles. This session also developed your ability to sustain high intensity effort for longer.						
Steady state training +	Excellent! This long session improved the endurance of your muscles and your aerobic fitness. It also increased your resistance to fatigue.						
Steady state training	Excellent! You improved the endurance of your muscles and your aerobic fitness.						
Steady state & Basic training, long	Excellent! This long session improved the endurance of your muscles and your aerobic fitness. It also developed your basic endurance and your body's ability to burn fat during exercise.						
Steady state & Basic training	Excellent! You improved the endurance of your muscles and your aerobic fitness. This session also developed your basic endurance and your body's ability to burn fat during exercise.						
Basic & Steady state training, long	Great! This long session improved your basic endurance and your body's ability to burn fat during exercise. It also developed the endurance of your muscles and your aerobic fitness.						
Basic & Steady state training	Great! You improved your basic endurance and your body's ability to burn fat during exercise. This session also developed the endurance of your muscles and your aerobic fitness.						
Basic training, long	Great! This long, low intensity session improved your basic endurance and your body's ability to burn fat during exercise.						
Basic training	Well done! This low intensity session improved your basic endurance and your body's ability to burn fat during exercise.						
Recovery training	Very nice session for your recovery. Light exercise like this allows your body to adapt to your training.						

#### **SMART CALORIES**

The most accurate calorie counter on the market calculates the number of calories burned based on your individual data:

- · Body weight, height, age, gender
- Individual maximum heart rate (HR<sub>max</sub>)
- The intensity of your training or activity
- Individual maximal oxygen uptake (VO2<sub>max</sub>)

The calorie calculation is based on an intelligent combination of acceleration and heart rate data. The calorie calculation measures your training calories accurately.

You can see your cumulative energy expenditure (in kilocalories, kcal) during training sessions, and your total kilocalories of the session afterwards. You can also follow your total daily calories.

### **CONTINUOUS HEART RATE**

The Continuous heart rate feature measures your heart rate around the clock. It enables a more accurate measurement of daily calorie consumption and your overall activity because also physical activities with very little wrist movement, such as cycling, can now be tracked.

### Continuous heart rate on your watch

You can turn the Continuous heart rate feature on, off or to night-time only mode on your watch in **Settings > General settings > Continuous HR tracking**. If you choose Night-time only mode, set heart rate tracking to begin at the earliest time you might go to bed.



The feature is **on** by default. Keeping the Continuous Heart Rate feature on in your watch will drain the battery quicker. Continuous heart rate tracking needs to be enabled for Nightly Recharge to function. If you want to save battery and still use Nightly Recharge, set the continuous heart rate tracking to be on only at night.

In time view, swipe left or right to navigate to the heart rate watch face. Tap the display to open detailed view.





When the feature is on, the watch continuously measures your heart rate and displays it on the Heart rate watch face. When opening the details, you can check your highest and lowest heart rate readings of the day and also view what your lowest heart rate reading of the previous night was.


The watch tracks your heart rate in 5-minute intervals and records the data for later analysis in the Flow app or web service. If the watch detects that your heart rate is elevated, it starts to record your heart rate continuously. Continuous recording can also start based on your wrist movements, for example, when you're walking with a fast enough pace for at least one minute. The continuous recording of your heart rate stops automatically when your activity level drops low enough. When your watch detects that your arm is not moving or when your heart rate is not elevated it tracks your heart rate in 5-minute cycles to find your lowest reading of the day.

In some cases, it is possible that you've seen a higher or lower heart rate on your watch during the day than is shown in the continuous heart rate summary as the highest or lowest reading of your day. This can happen if the reading you've seen falls outside the tracking interval.



The LEDs on the back of your watch are always on when the continuous heart rate feature is on and the sensor on the back is in touch with your skin. For instructions on how to wear your watch for accurate heart rate readings from the wrist, see <a href="Wrist-based heart rate measurement">Wrist-based heart rate measurement</a>.

You can follow the Continuous Heart Rate data in more detail and in longer periods in Polar Flow, either in web or in the mobile app. Learn more about the Continuous Heart Rate feature in this in-depth guide.

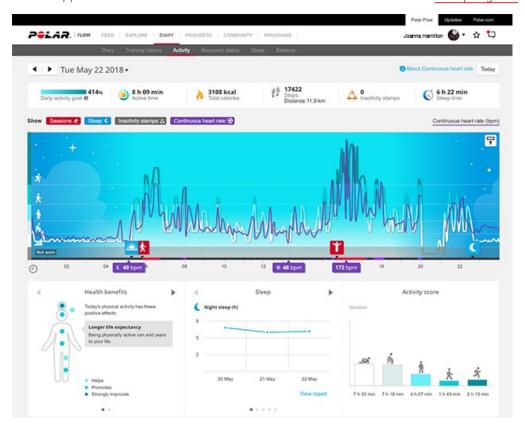

### 24/7 ACTIVITY TRACKING

Your watch tracks your activity with an internal 3D accelerometer that records your wrist movements. It analyzes the frequency, intensity and regularity of your movements together with your physical information, allowing you to see how active you really are in your everyday life, on top of your regular training. You should wear your watch on your non-dominant hand to ensure you get the most accurate activity tracking.

### **Activity Goal**

You'll get your personal activity goal when you set up your watch. The activity goal is based on your personal data and activity level setting, which you can find on your watch (**Settings > Physical settings > Activity level**), in the Polar Flow app or in the <u>Polar Flow web service</u>.

If you want to change your goal, open your Flow app, tap your name/profile photo in the menu view, and swipe down to see **Activity goal**. Or go to <u>flow.polar.com</u> and sign in to your Polar account. Then click your name > **Settings** > **Activity goal**. Choose one of the three activity levels that best describes your typical day and activity. Below the selection area, you can see how active you need to be to reach your daily activity goal on the chosen level.

The time you need to be active during the day to reach your activity goal depends on the level you have chosen and the intensity of your activities. Meet your goal faster with more intense activities or stay active at a slightly more moderate pace throughout the day. Age and gender also affect the intensity you need to reach your activity goal. The younger you are, the more intense your activity needs to be.

### Activity data on your watch

In time view, swipe left or right to navigate to the Activity watch face.



The circle around the watch face and the percentage below time and date show your progress towards your daily activity goal. The circle fills with light blue color as you are active.



In addition, you can see the following details of your day's accumulated activity:

- Steps you've taken so far. The amount and type of body movements are registered and turned into an estimation of steps.
- Active time tells you the cumulative time of body movements that benefit your health.
- Calories you've burned through training, activity and BMR (Basal metabolic rate: the minimum metabolic activity required to maintain life).



It's widely known that physical activity is a major factor in maintaining health. In addition to being physically active, it's important to avoid prolonged sitting. Sitting for long periods of time is bad for your health, even on those days when you train and gain enough daily activity. Your watch spots if you're being inactive for too long during your day and this way helps you to break up your sitting to avoid the negative effects it has on your health.

If you've been still for 55 minutes, you'll get an inactivity alert: **It's time to move** is shown along with a small vibration. Stand up and find your own way to be active. Take a short walk, stretch, or do some other light activity. The message goes away when you start moving or press the button. If you don't get active in five minutes, you'll get an inactivity stamp, which you can see on the Flow app and Flow web service after syncing. The Flow app and Flow web service show you the whole history of how many inactivity stamps you have received. This way you can check back on your daily routine and make changes towards a more active life.

### Activity data in the Flow App and web service

With the Flow app you can follow and analyze your activity data on the go and sync it wirelessly from your watch to the Flow web service. The Flow web service gives you the most detailed insight into your activity information. With the help of the activity reports (under the **REPORTS** tab), you can follow the long-term trend of your daily activity. You can choose to view either daily, weekly or monthly reports.

Learn more about the 24/7 Activity tracking feature in this <u>in-depth guide</u>.

### **ACTIVITY GUIDE**

The Activity Guide feature shows how active you've been during the day, and tells you how much you need to still do to reach the recommendations for physical activity per day. You can check how you're doing in reaching your activity goal for the day either from your watch, from the Polar Flow app or web service.


For more information, see 24/7 Activity Tracking.

### **ACTIVITY BENEFIT**

Activity benefit gives you feedback on the health benefits that being active has given you, and also on what kind of unwanted effects sitting for too long has caused to your health. The feedback is based on international guidelines and

research on the health effects of physical activity and sitting behavior. The core idea is: the more active you are, the more benefits you get!

Both the Flow app and Flow web service show the activity benefit of your daily activity. You can view the activity benefit on daily, weekly and monthly basis. In the Flow web service, you can also view the detailed information on health benefits.

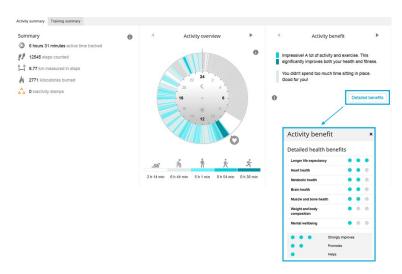

For more information, see 24/7 Activity Tracking.

# POSITIONING SATELLITES

Your watch has built-in GPS (GNSS) that provides speed, pace, distance and altitude measurement for a range of outdoor sports, and allows you to see your route on map in the Flow app and web service after your session.

You can change the satellite navigation system your watch uses in addition to GPS. The setting is located on your watch in **General settings** > **Positioning satellites**. You can choose **GPS + GLONASS**, **GPS + Galileo** or **GPS + QZSS**. The default setting is **GPS + GLONASS**. These options give you the possibility to test different satellite navigation systems and find out if they can give you improved performance in areas covered by them.

**GPS + GLONASS** is a Russian global satellite navigation system. It is the default setting as its global

satellite visibility and reliability is the best of these three, and in general we recommend using it.

**GPS + Galileo** Galileo is a global navigation satellite system created by the European Union.

**GPS + QZSS** is a four-satellite regional time transfer system and a satellite-based augmentation system

developed to enhance GPS in the Asia-Oceania regions, with a focus on Japan.

### **ASSISTED GPS**

The watch uses Assisted GPS (A-GPS) to acquire a fast satellite fix. The A-GPS data tells your watch the predicted positions of the GPS satellites. This way the watch knows where to search for the satellites and thus makes defining your initial location faster.

The A-GPS data updates once a day. The latest A-GPS data file is automatically updated to your watch each time you sync it with the Flow web service via FlowSync software or via the Flow app.

### A-GPS expiry date

The A-GPS data file is valid for up to 14 days. Positioning accuracy is relatively high during the first three days, and progressively decreases during the remaining days. Regular updates help to ensure a high level of positioning accuracy.

You can check the expiry date for the current A-GPS data file from your watch. Go to **Settings > General settings > About your watch > Assisted GPS expires**. If the data file has expired, sync your watch with the Flow web service via FlowSync software or with the Flow app to update A-GPS data.

Once the A-GPS data file has expired, more time may be required for acquiring your current position.



For best GPS performance, wear the watch on your wrist with the display facing up. Due to the location of the GPS antenna on the watch, it is not recommended to wear it with the display on the underside of your wrist. When wearing it on the handlebars of a bike, make sure the display is facing up.

# SPORT PROFILES

Sport profiles are the sport choices you have on your watch. We have created four default sport profiles to your watch, but you can add new sport profiles in the Polar Flow app or web service and sync them to your watch, and this way create a list of all your favorite sports.

You can also define specific settings for each sport profile. For example, you can create tailored **training views** for each sport you do and choose what data you want to see when you train: just your heart rate or just speed and distance—whatever suits you and your training needs and requirements best.

You can have a maximum of 20 sport profiles on your watch at a time. The number of sport profiles in Polar Flow mobile app and Polar Flow web service is not limited.

For more information, see **Sport Profiles in Flow**.

Using the sport profiles makes it possible for you to keep up with what you've done and to see the progress you've made in different sports. See your training history and follow your progress in the Flow web service.



You can use Polar Ignite 2 with <u>Polar Club</u> during group exercise classes in fitness clubs. Select one of the indoor sport profiles for the training session and make sure that the Heart rate visible to other device feature is set on in the <u>sport profile settings</u>.



Please note that in a number of indoor sports, group sports and team sports profiles the **HR visible to other devices** setting is enabled by default. This means that compatible devices using Bluetooth Smart
wireless technology, e.g. gym equipment, can detect your heart rate. You can check which sport profiles
have Bluetooth broadcasting enabled by default from the <u>Polar Sport profiles list</u>. You can enable or disable
Bluetooth broadcasting from <u>sport profile settings</u>.

# **HEART RATE ZONES**

The range between 50% and 100% of your maximum heart rate is divided into five heart rate zones. By keeping your heart rate within a certain heart rate zone you can easily control the intensity level of your workout. Each heart rate zone carries its own main benefits, and understanding these benefits will help you achieve the effect you want from your workout.

Learn more about the Heart Rate Zones: What are Heart Rate Zones?.

# **SPEED ZONES**

With the speed/pace zones you can easily monitor speed or pace during your session, and adjust your speed/pace to achieve the targeted training effect. The zones can be used to guide the efficiency of your training during sessions, and help you mix up your training with different training intensities for optimal effects.

### **SPEED ZONES SETTINGS**

The speed zone settings can be adjusted in the Flow web service. There are five different zones, and zone limits can be manually adjusted or you can use the default ones. They are sport specific, allowing you to adjust the zones to best suit each sport. The zones are available in running sports (including team sports that involve running), cycling sports as well as rowing and canoeing.

#### **Default**

If you choose **Default**, you cannot change the limits. The default zones are an example of speed/pace zones for a person with a relatively high fitness level.

#### Free

If you choose **Free**, all limits can be changed. For example, if you have tested your actual thresholds, such as anaerobic and aerobic thresholds, or upper and lower lactate thresholds, you can train with zones based on your individual threshold speed or pace. We recommend that you set your anaerobic threshold speed and pace as the minimum for zone 5. If you also use aerobic threshold, set that as the minimum of zone 3.

### TRAINING TARGET WITH SPEED ZONES

You can create training targets based on speed/pace zones. After synchronizing the targets via FlowSync, you'll receive guidance from your training device during training.

### **DURING TRAINING**

During your training you can view which zone you are currently training in and the time spent in each zone.

### **AFTER TRAINING**

In the training summary on your watch, you'll see an overview of the time spent in each speed zone. After syncing, detailed visual speed zone information can be viewed in the Flow web service.

# SPEED AND DISTANCE FROM THE WRIST

Your watch measures speed and distance from your wrist movements with a built-in accelerometer. This feature comes in handy when running indoors or in places with limited GPS signals. For maximum accuracy make sure you've set your handedness and height correctly. Speed and distance from the wrist works best when running at a pace that is natural and feels comfortable for you.

Wear your watch snugly on your wrist to avoid any shaking. To get consistent readings it should always be worn on the same position on your wrist. Avoid wearing any other devices like watches, activity trackers or phone armbands on the same arm. In addition, do not hold anything in the same hand like a map or a phone.

Speed and distance from the wrist is available in the following running type sports: Walking, Running, Jogging, Road running, Trail running, Treadmill running, Track and field running and Ultra running. To see speed and distance during a training session, make sure you have speed and distance added to the training view of the sport profile you use when running. This can be done in Sport Profiles in the Polar Flow mobile app or in the Flow web service.

# **SWIMMING METRICS**

Swimming metrics help you analyze each swimming session, and follow your performance and progress in the long run.



To get the most accurate information, make sure your have set which hand you wear your watch on. You can check that you've set which hand you wear your watch from the product settings in Flow.

#### **POOL SWIMMING**

When using the Swimming or Pool swimming profile, the watch records your swim distance, time and pace, stroke rate, rest times and also identifies your swimming style. In addition, with the help of the SWOLF score you can keep track of your development.

**Swimming Styles**: Your watch recognizes your swimming style, and calculates style specific metrics as well as totals for your whole session. Styles the watch recognizes:

- Freestyle
- Backstroke

- Breaststroke
- Butterfly

**Pace and Distance**: Once the watch has recognized your swimming style as one of the four swimming styles mentioned above, it will be able to detect your turns and use this information to give you accurate pace and distance. The pace and distance measurements are based on detected turns and the set pool length. Every time you turn, one pool length gets added to the total distance swam.

**Strokes**: Your watch tells you how many strokes you take in a minute or per pool length. This information can be used to find out more about your swimming technique, rhythm and timing.

**SWOLF** (short for swimming and golf) is an indirect measure of efficiency. SWOLF is calculated by adding together your time and the amount of strokes it takes you to swim a pool length. For instance, 30 seconds and 10 strokes to swim the length of a pool will equal a SWOLF score of 40. Generally, the lower your SWOLF is for a certain distance and style, the more efficient you are.

SWOLF is highly individual, and thus should not be compared to SWOLF scores other people have swam. It's rather a personal tool that can help you improve and fine-tune your technique, and find an optimal efficiency for different styles.

### **Pool Length setting**

It's important that you choose the correct pool length, as it affects pace, distance and stroke calculation, as well as your SWOLF score. The default lengths are 25 meters, 50 meters and 25 yards, but you can also set it manually to a custom length. The minimum length that can be chosen is 20 meters/yards.

The chosen pool length is shown in pre-training mode. To change the pool length, tap the quick menu icon access the **Pool length** setting and set the correct length.



### **OPEN WATER SWIMMING**

When using the Open water swimming profile, the watch records your swim distance, time and pace, stroke rate for freestyle as well as your route.

**(i)** 

Freestyle is the only style that the open water swimming profile recognizes.

Pace and Distance: Your watch uses GPS to calculate pace and distance during your swim.

**Stroke rate for freestyle**: Your watch records your average and maximum stroke rates (how many strokes you take per minute) for your session.

**Route**: Your route is recorded with GPS, and you can view it on a map after your swim in the Flow app and web service. GPS does not work underwater, and because of this your route is filtered from GPS data acquired when your hand is out of the water or very close to the water surface. External factors such as water conditions and satellite positions can affect the accuracy of the GPS data, and as a result data from the same route can vary from day to day.

### **MEASURING HEART RATE IN WATER**

Your watch automatically measures your heart rate from your wrist with the new Polar Precision Prime sensor fusion technology, offering an easy and comfortable way to measure your heart rate while swimming. Although water may prevent the wrist-based heart rate measurement from working optimally, the accuracy of Polar Precision Prime is sufficient to allow you monitor your average heart rate and heart rate zones during your swimming sessions, get accurate calorie burn readings, your Training Load from the session and the Training Benefit feedback based on your heart rate zones.

To ensure the best possible accuracy of your heart rate data, it's important to wear the watch snugly on your wrist (even more snugly than in other sports). See <u>Training with wrist based heart rate</u> for instructions on wearing your watch during training.



Note that you can't use a Polar heart rate sensor with a chest strap with your watch when swimming because Bluetooth doesn't work under water.

#### START A SWIMMING SESSION

- 1. Press the button to enter the main menu, choose **Start training**, and then browse to the **Swimming**, **Pool** swimming or Open water swimming profile.
- 2. When using the Swimming/Pool swimming profile, check that the pool length is correct (shown on the display).

To change the pool length, tap the quick menu icon and tap **Pool length** and set the correct length.





Do not start the training session recording until you are in the pool, however, do avoid pushing the button under water.

3. Tap the display to start training recording.

### **DURING YOUR SWIM**

You can customize what is shown on the display in the sport profiles section in the Flow web service. The default training views in the swimming sport profiles the following information:

- · Your heart rate and the heart rate ZonePointer
- Distance
- Duration
- Rest time (Swimming and Pool swimming)
- Pace (Open water swimming)
- Heart rate graph
- Average heart rate
- Maximum heart rate
- Time of day

### **AFTER YOUR SWIM**

An overview of your swimming data is available in the training summary on your watch right after your session. You can see the following information:



The date and time when your session started

The duration of the session

Swimming distance



Average heart rate

Maximum heart rate

Cardio Load



Heart rate zones



Calories

Fat burn % of calories



Average pace

Maximum pace



Stroke rate (how many strokes you take per minute)

- Average stroke rate
- Maximum stroke rate

Sync your watch with Flow for a more detailed visual representation of your swim including a detailed breakdown of your pool swimming sessions, your heart rate, pace and stroke rate curves.

### WEATHER

The weather watch face brings the current day's hourly forecast, as well as tomorrow's 3-hour and the day after tomorrow's 6-hour forecast to your wrist. Other weather information provided includes wind speed, wind direction, humidity and the chance of rain.

Weather information can only be found from the weather watch face. In time view, swipe left or right until you reach it.

To use the weather feature you need to have Flow app on your mobile, and your watch needs to be paired with it. Location Services (iOS) or Location Settings (Android) need also to be set on to get weather information.

### Today's forecast





- Location of forecast
- When updated last
- Refresh (shown if weather info needs to updated for example because your location has changed or if it's been a while since it was last updated)
- Current temperature
- Feels like
- Rain
- Wind speed
- Wind direction
- Humidity
- Hourly forecast

Note that weather history including information on what the weather was during training sessions is not available.

### Tomorrow's forecast



• Forecast low/high for each 3-hour period

### The day after tomorrow's forecast

• Forecast low/high for each 6-hour period



### **POWER SAVE SETTINGS**

The power save settings allow you to extend your training time by changing the GPS recording rate or setting wrist-based heart rate off. These settings let you optimize battery usage and get more training time for extra long sessions or when the battery is running low.

The power save settings are found in the quick menu. You can access the quick menu from pre-training mode, during a

session when paused and during transition mode in multisport sessions by tapping the quick menu icon





After setting on any of the power save settings, you'll see their effect on the estimated training time in pre-training mode. Note that the power save settings are set on for each session separately. The settings are not stored.



Note that the temperature affects the estimated training time. When training in cold conditions the actual training time can be less than what is indicated when starting the session.

### **GPS** recording rate

Set the GPS recording rate to a less frequent interval (1 minute or 2 minutes). Handy in ultra-long sessions when long battery life is essential.



Note that changing the GPS recording rate to a less frequent interval may reduce the accuracy of other measurements, such as speed/pace and distance, depending on the sport profile and sensors used.

### Wrist-based heart rate

Set wrist-based heart rate off. Set it off to save power when you don't necessarily need heart rate data. When using a heart rate monitor with a chest strap wrist-based heart rate is set off by default.

## **ENERGY SOURCES**

The energy sources breakdown shows how much of different energy sources (fats, carbohydrates, proteins) you used during your session. On your watch, you can see it in the training summary right after finishing your session. More detailed information can be viewed in the Flow mobile app after syncing your data.

During physical activity, your body uses carbohydrates and fat as main sources of energy. The higher your training intensity, the more carbs you use in proportion to fat, and vice versa. The role of protein is usually quite small, but during high intensity activity and during long sessions your body can use about 5 to 10 % of its energy from protein.

We calculate the use of different energy sources based on your heart rate, but we also take your physical settings into account. These include your age, gender, height, weight, maximum heart rate, resting heart rate, VO2max, aerobic

threshold and anaerobic threshold. It's important that you've set these settings as precisely as possible so you'll get the most accurate energy source consumption data.

### **ENERGY SOURCES SUMMARY**

After your session, you'll see the following information the training summary:



Carbs, protein and fat you've used during your session.



Note that you shouldn't interpret the used energy sources and their amounts as guidelines when eating after your session.

### DETAILED ANALYSIS IN THE FLOW MOBILE APP

In the Flow app you can also view how much of these sources you used at each point of your session and how they accumulated throughout it. The graph shows how your body makes use of different energy sources at different training intensities, and also at different stages of your training session. You can also compare the breakdown from similar sessions over time, and see how your ability to use fat as the primary energy source develops.



Learn more about energy sources

### PHONE NOTIFICATIONS

The phone notifications feature allows you to get alerts about incoming calls, messages and notifications from apps onto your watch. You'll get the same notifications on your watch that you get on your phone screen. Phone notifications are available for iOS and Android phones.

To use phone notifications, you need to have the Flow app running on your phone, and it also needs to be paired with your watch. For instructions, see <u>Pairing a mobile device with your watch</u>.

### Set phone notifications on

On your watch go to **Settings** > **General settings** > **Phone notifications** to set them on. Set phone notifications **Off** or **On, when not training**. Note that you will not receive any notifications during training sessions.

You can also set the phone notifications on in the Flow app device settings. After setting the notifications on sync your watch with the Flow app.



Please note that when phone notifications are set on, the battery of your watch and phone will run out faster because Bluetooth is continuously on.

### Do not disturb

If you want to disable notifications and call alerts for a certain period of time, set do not disturb on. When it is on, you will not receive any notifications or call alerts during the time period you have set.

On your watch go to **Settings** > **General settings** > **Do not disturb**. Choose **Off**, **On** or **On (22.00 - 7.00)**, and the period when do not disturb is on. Choose when it **Starts at** and **Ends at**.

### **VIEW NOTIFICATIONS**

Whenever you receive a notification your watch will vibrate and a red dot will appear at the bottom of the display. View the notification by swiping up from the bottom of the display or by turning your wrist to look at the watch immediately after the watch vibrates.

When receiving a call your watch will vibrate and show the caller. You can also answer or decline the call with your watch.



Phone notifications may function differently depending on the model of your Android phone.

### MUSIC CONTROLS

Control music and media playing on your phone with your watch during training sessions as well as from the **Music** controls watch face when not training. Set the music controls on from **Settings > General settings > Music controls**. You can control music from the training display, from the watch face, or both. Choose **Training display** to control music during your training sessions and **Watch face** to access the controls when not training from the watch face.

Music controls are available for iOS and Android phones. To use the music controls you need to have the Flow app running on your phone, and it also needs to be paired with your watch. For instructions, see <a href="Pairing a mobile device with your watch">Pairing a mobile device with your watch</a>. The music controls setting becomes visible after pairing your watch with your phone via the Flow app. If you did the setup for your watch via the Flow app your watch is already paired with your phone.

### MUSIC CONTROLS WATCH FACE



- Swipe left or right to choose the Music controls watch face.
- Tap the watch face to access the music controls



- Pause/play or switch between songs with the controls.
- Tap to access the volume controls

#### **DURING TRAINING**



• Swipe right or left to scroll to the music controls training view during a training session.

### MUSIC CONTROLS SETTINGS IN POLAR FLOW APP



You can adjust the Music controls settings also from the Polar Flow app **Devices** menu:

- Tap the button next to Music controls to set the Music controls feature on or off
- **Always on:** You can control music from both the training display and the Music controls watch face.
- **Training: On:** You can control music from the training display.
- Training: Off: You can control music from the Music controls watch face.



If you change your settings remember to sync your watch with the Flow app.

## HR SENSOR MODE

In heart rate sensor mode you can turn your Polar Ignite 2 into a heart rate sensor and share your heart rate with other Bluetooth devices like training apps, gym equipment or cycling computers. To use Ignite 2 in HR sensor mode, you first need to pair it with the receiving external device. Refer to receiving device's user guide for detailed pairing instructions.

### To turn on the HR sensor mode:

- 1. Press the button to enter the main menu and tap **Start training**.
- 2. Swipe left or right to choose a sport profile.



In pre-training mode, open the quick menu by tapping the quick menu icon





Choose Share HR with other devices.



Choose Add a new device

- 3. Activate the external device's pairing mode.
- 4. Choose Ignite 2 from the external device.
- 5. Accept pairing Ignite 2 with the external device.
- 6. You should be able to see your heart rate in both Ignite 2 and the external device. When you're ready, just start your session from the external device. To record your training session with your watch, return to pre-training mode and start training recording by tapping the display.

### To stop sharing HR:



Choose **Stop sharing**. HR sharing stops also when you exit pre-training mode or stop the training recording.

If you pair your Polar watch with a wrong external device (for example iPhone) tap **With iPhone**, tap to stop sharing with iPhone and then choose **Add a new device** again.



## CHANGEABLE WRISTBANDS


The changeable wristbands let you personalize your watch to match every situation and style so you can wear it all the time and make the best use of the 24/7 activity tracking, continuous heart rate measurement and sleep tracking.

You can choose your favorite wristband from <u>Polar's selection</u> or use any other watch band that uses 20 mm spring bars.

### **CHANGING THE WRISTBAND**

The wristband of your watch is quick and simple to change.

- 1. To detach a band, pull the quick-release knob inwards and pull the band away from the watch.
- 2. To attach a band, insert the pin (the opposite side of the quick-release knob) into the pin hole on the watch.
- 3. Pull the quick-release knob inwards and align the other end of the pin with the hole on the watch.
- 4. Release the knob to lock the band in place.

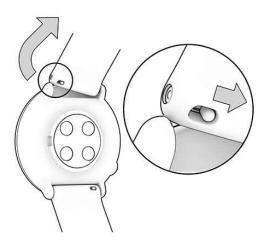

### **COMPATIBLE SENSORS**

Enhance your training experience, and achieve a more complete understanding of your performance with compatible Bluetooth® sensors.

### View a full list of compatible Polar sensors and accessories

Before taking a new sensor into use, it has to be paired with your watch. Pairing only takes a few seconds, and ensures that your watch receives signals from your sensors only, and allows disturbance-free training in a group. Before entering an event or race, make sure that you do the pairing at home to prevent interference due to data transmission. For instructions, see Pairing sensors with your watch.

### POLAR OH1 OPTICAL HEART RATE SENSOR

Polar OH1 is a compact optical heart rate sensor that measures heart rate from your arm or temple. It's versatile and offers a great option to heart rate chest straps and wrist-based heart rate devices. With Polar OH1 you can broadcast your real-time heart rate to your sports watch, smart watch or Polar Beat or other fitness app via Bluetooth, and simultaneously to ANT+ devices. Polar OH1 has an inbuilt memory so you can start your workout with OH1 alone and transfer the training data to your phone afterwards. It comes with a comfortable machine-washable armband and a swimming goggle strap clip (in Polar OH1 + product package).

It can also be used with Polar Club, Polar GoFit and Polar Team app.

#### **POLAR VERITY SENSE**

Polar Verity Sense is a versatile high-quality optical heart rate sensor that measures heart rate from your arm or temple. Polar Verity Sense is a great alternative to heart rate chest straps and wrist-based devices. You can use it with the product's armband, swimming goggle strap clip or just place it anywhere snug and firm against your skin. Polar Verity Sense allows maximum freedom of movement and works in countless different sports. As a highlight, Polar Verity Sense records heart rate, distance, pace and turns when you swim in the pool. You can record your workouts in the internal memory and transfer workout data to your phone afterwards or you can connect it to a compatible device and follow your heart rate in real time during your workout.

### **POLAR H10 HEART RATE SENSOR**

Monitor your heart rate with maximum precision with the Polar H10 heart rate sensor with a chest strap.

Although the Polar Precision Prime is the most accurate optical heart rate measurement technology there is and works pretty much anywhere, in sports where it's more challenging to keep the sensor stationary on your wrist or where you have pressure or movement in muscles or tendons near the sensor, the Polar 10 heart rate sensor gives you the best heart rate accuracy. The Polar H10 heart rate sensor is more responsive to rapidly increasing or decreasing heart rate, so it's the ideal option also for interval type of training with quick sprints.

The Polar H10 heart rate sensor has an internal memory that allows you to record one training session with it without a connected training device or a mobile training app close by. You just need to pair the H10 heart rate sensor with the Polar Beat app and start the training session with the app. This way, you can for example record your heart rate from your swimming sessions with the Polar H10 heart rate sensor. For more information see the support pages for Polar Beat and Polar H10 heart rate sensor.

When using the Polar H10 heart rate sensor during your cycling sessions, you can have your watch mounted to your bike's handlebars to easily view your training data while riding.

### **POLAR H9 HEART RATE SENSOR**

Polar H9 is a high quality heart rate sensor for your everyday sports. It comes with the Polar Soft Strap and tracks your heart rate accurately. Polar H9 is ideal with the Polar Beat app as well as many 3rd party apps: you can turn your phone into a fitness tracker easily. Further, Bluetooth®, ANT+™ and 5 kHz technologies ensure connections to a large variety of sports devices and gym equipment. Thanks to chest strap measurement Polar H9 reacts instantaneously to what happens in your body and gives you accurate calorie burn.

The latest version of this user manual and video tutorials can be found at support.polar.com/en/h9-heart-rate-sensor.


### PAIRING SENSORS WITH YOUR WATCH

### Pair a heart rate sensor with your watch



When you're wearing a Polar heart rate sensor that's paired with your watch, the watch does not measure heart rate from the wrist.

- 1. Moisten the electrode areas of the strap.
- 2. Attach the connector to the strap.
- 3. Fasten the strap around your chest and adjust the strap to fit snugly.
- 4. On your watch, go to Settings > General Settings > Pair and sync and Tap Pair sensor or other device.
- 5. Once the heart rate sensor is found, the device ID, for example, **Polar H10 xxxxxxxx** is displayed. Tap to start pairing.
- 6. **Pairing done** is displayed when you are done.

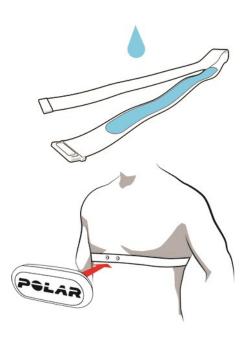

# **POLAR FLOW**

### POLAR FLOW APP

In the Polar Flow mobile app, you can see an instant visual interpretation of your training and activity data. You can also plan your training in the app.

### TRAINING DATA

With the Polar Flow app, you can easily access the information of your past and planned training sessions and create new training targets. You can choose to create a quick target or a phased target.

Get a quick overview of your training, and analyze every detail of your performance right away. See weekly summaries of your training in the training diary. You can also share the highlights of you training with your friends with the <a href="mage">Image</a> sharing function.

### **ACTIVITY DATA**

See details of your 24/7 activity. Find out how much you're missing from your daily activity goal and how to reach it. See steps, covered distance based on steps and burned calories.

### **SLEEP DATA**

Follow your sleeping patterns to see if they're affected by any changes in your daily life and find the right balance between rest, daily activity and training. With the Polar Flow app, you can view the timing, amount, and quality of your sleep.

You can set your preferred sleep time to define how long you aim to sleep every night. You can also rate your sleep. You'll receive feedback on how you sleep based on your sleep data, your preferred sleep time and your sleep rating.

#### **SPORT PROFILES**

You can add, edit, remove and reorganize sport profiles easily in the Flow app. You can have up to 20 sport profiles active in Flow app and in your watch.

For more information, see Sport profiles in Polar Flow.

### **IMAGE SHARING**

With Flow app's image sharing function you can share images with your training data on them to most common social media channels, like Facebook and Instagram. You can either share an existing photo or take a new one and customize it with your training data. If you had GPS recording on during your training session, you can also share a snapshot of your training route.

To see a video, click on the following link:

Polar Flow app | Sharing training results with a photo

### START USING THE FLOW APP

You can set up your watch using a mobile device and the Flow app.

To start using the Flow app, download it from the App Store or Google Play onto your mobile device. For support and more information about using the Polar Flow app, go to support.polar.com/en/support/Flow\_app.

Before taking a new mobile device (smartphone, tablet) into use, it has to be paired with your watch. See <u>Pairing</u> for more details.

Your watch syncs your training data to the Flow app automatically after your session. If your phone has an internet connection, your activity and training data are also synced automatically to the Flow web service. Using the Flow app is the easiest way to sync your training data from your watch with the web service. For information on syncing, see <a href="Syncing">Syncing</a>.

For more information and instructions on Flow app features, visit Polar Flow app product support page.

## POLAR FLOW WEB SERVICE

In the Polar Flow web service, you can plan and analyze your training in detail and learn more about your performance. Set up and customize your watch to perfectly fit your training needs by adding sport profiles and editing their settings. You can also share your training sessions with your friends, sign up for your club's classes and get a personalized training program for a running event.

The Polar Flow web service also shows your daily activity goal completion percentage and the details of your activity, and helps you understand how your daily habits and choices affect your well-being.

You can <u>set up your watch</u> with your computer at <u>flow.polar.com/start</u>. There you are guided to download and install the FlowSync software for syncing data between your watch and the web service, and to create a user account for the web service. If you did the setup using a mobile device and the Flow app, you can log into the Flow web service with the credentials you created in the setup.

### **DIARY**

In **Diary** you can see your daily activity, sleep, planned training sessions (training targets), as well as review past training results.

#### **REPORTS**

In Reports you can follow your development.

Training reports are a handy way to follow your progress in training over longer periods. In week, month and year reports you can choose the sport for the report. In custom period, you can choose both the period and the sport. Choose the time period and sport for report from the drop-down lists, and press the wheel icon to choose what data you want to view in the report graph.

With the help of the activity reports, you can follow the long-term trend of your daily activity. You can choose to view either daily, weekly or monthly reports. In the activity report you can also see your best days regarding daily activity, steps, calories and sleep from your chosen time period.

### **PROGRAMS**

The Polar Running Program is tailored for your goal, based on Polar heart rate zones, taking your personal attributes and training background into account. The program is intelligent, it adapts along the way based on your development. The Polar Running Programs are available for 5k, 10k, half marathon and marathon events, and consist of two to five running exercises per week depending on the program. It's super simple!

For support and more information about using the Flow web service, go to, support.polar.com/en/support/flow.

### SPORT PROFILES IN POLAR FLOW

There are 14 default sport profiles on your watch. In the Polar Flow app or web service, you can add new sport profiles to your sports list and edit their settings. Your watch can contain a maximum of 20 sport profiles. If you have over 20 sport profiles in the Polar Flow app and web service, the first 20 in the list are transferred to your watch when syncing.

You can change the order of your sport profiles by dragging and dropping them. Choose the sport you want to move and drag it into the place you want to put it in the list.

To see a video, click on one of the following links:


Polar Flow app | Sport profile editing

Polar Flow web service | Sport Profiles

### ADD A SPORT PROFILE

In the Polar Flow mobile app:

- 1. Go to Sport profiles.
- 2. Tap the plus sign in the upper right corner.
- 3. Choose a sport from the list. Tap Done on Android app. The sport is added to your sport profiles list.

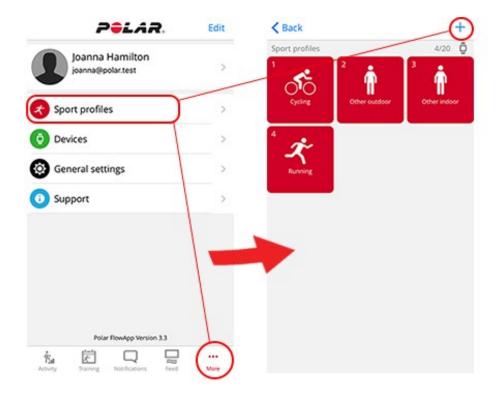

In the Polar Flow web service:

- 1. Click your name/profile photo in the upper right corner.
- 2. Choose Sport Profiles.
- 3. Click Add sport profile, and choose the sport from the list.
- 4. The sport is added to your sport list.




You can't create new sports yourself. The sports list is controlled by Polar, because each sport has certain default settings and values, which affect, for example, the calorie calculation and the training load and recovery feature.

### **EDIT A SPORT PROFILE**

In the Polar Flow mobile app:

- 1. Go to **Sport profiles.**
- 2. Choose a sport and tap Change settings.
- 3. When you're ready, tap Done. Remember to sync the settings to your watch.

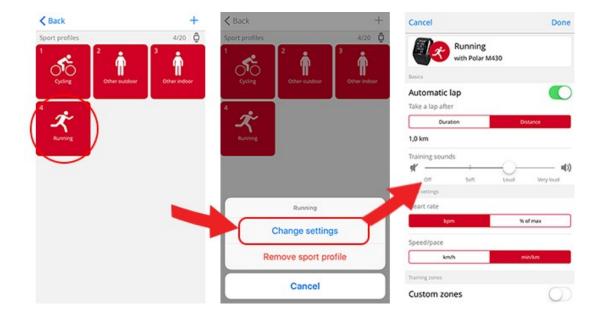

In the Flow web service:

- 1. Click your name/profile photo in the upper right corner.
- 2. Choose Sport Profiles.
- 3. Click **Edit** under the sport you want to edit.

In each sport profile, you can edit the following information:

#### **Basics**

• Automatic lap (Can be set to duration or distance-based or turned off)

#### **Heart Rate**

- Heart rate view (Beats per minute or % of maximum)
- Heart rate visible to other devices (This means that compatible devices using Bluetooth Smart wireless technology, e.g. gym equipment, can detect your heart rate. You can also use your watch during Polar Club classes to broadcast your heart rate to the Polar Club system.)
- Heart rate zone settings (With the heart rate zones you can easily select and monitor training intensities. If you choose Default, you cannot change heart rate limits. If you choose Free, all limits can be changed. Default heart rate zone limits are calculated from your maximum heart rate.)

### Speed/Pace settings

- Speed/Pace view (Choose speed km/h / mph or pace min/km / min/mi)
- Speed/pace zone settings (With the speed/pace zones you can easily select and monitor your speed or pace, depending on your selection. Default zones are an example of speed/pace zones for a person with a relatively high fitness level. If you choose Default, you can't change the limits. If you choose Free, all limits can be changed.)

### **Training views**

Choose what information you see on your training views during your sessions. You can have a total of eight different training views for each sport profile. Each training view can have a maximum of four different data fields.

Click the pencil icon on an existing view to edit it, or click **Add new view**.

### **Gestures and feedback**

• Vibration feedback (You can choose to have vibration on or off)

#### **GPS** and altitude

- Automatic pause: To use Automatic pause during training, you need to have GPS set to High Accuracy or a
  Polar stride sensor in use. Your sessions pause automatically when you stop, and continue automatically when
  you start.
- · Choose the GPS recording rate.

When you're done with the sport profile settings, click **Save**. Remember to sync the settings to your watch.




Please note that in a number of indoor sports, group sports and team sports profiles the **HR visible to other devices** setting is enabled by default. This means that compatible devices using Bluetooth Smart
wireless technology, e.g. gym equipment, can detect your heart rate. You can check which sport profiles
have Bluetooth broadcasting enabled by default from the <u>Polar Sport profiles list</u>. You can enable or disable
Bluetooth broadcasting from sport profile settings.

## PLANNING YOUR TRAINING

You can plan your training and create personal training targets for yourself in the Polar Flow web service or in the Polar Flow app.

### CREATE A TRAINING PLAN WITH THE SEASON PLANNER

The <u>Season Planner</u> in the Flow web service is a great tool for creating a tailored annual training plan. No matter what your training goal is, Polar Flow helps you create a comprehensive plan to reach it. You can find the Season Planner tool from the **Programs** tab in the Polar Flow web service.

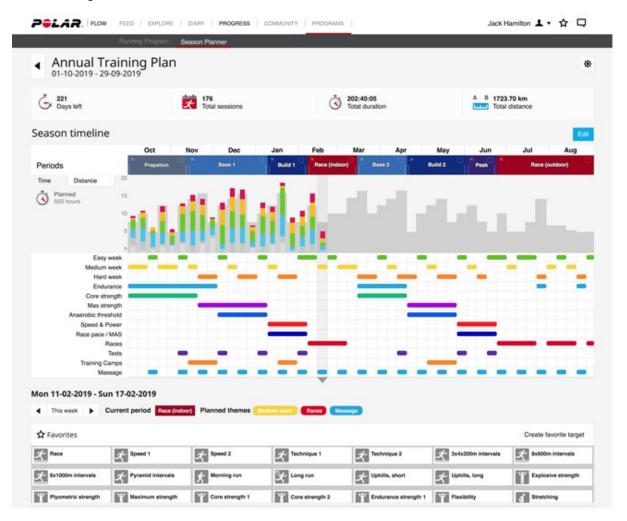



<u>Polar Flow for Coach</u> is a free remote coaching platform that allows your coach plan every detail of your training from full season plans to individual workouts.

### CREATE A TRAINING TARGET IN THE POLAR FLOW WEB SERVICE

Note that the training targets need to be synced to your watch with FlowSync or via Flow app before you can use them. Your watch will guide you towards completing your target during training.

To create a training target in the Polar Flow web service:

1. Go to Diary, and click Add > Training target.



2. In the **Add training target**, choose **Sport**, enter **Target name** (maximum 45 digits), **Date** and **Start time** and any **Notes** (optional) you want to add.

Then choose the type of your training target from the following:

### **Duration target**

- 1. Choose **Duration**.
- 2. Enter the duration.
- 3. Click **Add to favorites** to add the target to your list of favorites, if you want.
- 4. Click **Add to Diary** to add the target to your **Diary**.

### Distance target

- 1. Choose Distance.
- 2. Enter the distance.
- 3. Click **Add to favorites** to add the target to your list of favorites, if you want.
- 4. Click Add to Diary to add the target to your Diary.

### Calories target

- 1. Choose Calorie.
- 2. Enter the amount of calories.
- 3. Click **Add to favorites** to add the target to your list of favorites, if you want.
- 4. Click **Add to Diary** to add the target to your **Diary**.


### Race Pace target

- 1. Choose Race Pace.
- 2. Fill in two of the following values: **Duration**, **Distance** or **Race Pace**. You get the third one automatically.
- 3. Click **Add to favorites** to add the target to your list of favorites, if you want.
- 4. Click Add to Diary to add the target to your Diary.

Please note that Race Pace can only be synced with Grit X, Grit X Pro, Pacer, Pacer Pro, V800, Vantage M, Vantage M2, Vantage V and Vantage V2.

### Phased target

- 1. Choose Phased.
- 2. Add phases to your target. Click **Duration** to add a phase based on duration or click **Distance** to add a phase based on distance. Choose **Name** and **Duration/Distance** for each phase.
- 3. Tick the box **Start next phase automatically** for automatic change of phases. If left unchecked, you will have to change phases manually.
- 4. Choose the intensity of the phase based on heart rate, speed or power.

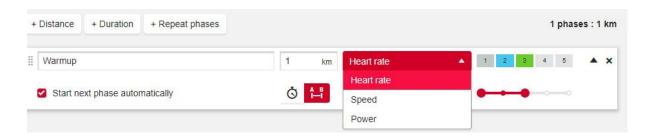



Power-based phased training targets are currently supported only by Grit X, Grit X Pro, Pacer, Pacer Pro and Vantage V2.

5. If you wish to repeat a phase, choose **+ Repeat phases** and drag phases you want to repeat to the Repeat section.




- 6. Click Add to favorites to add the target to your list of favorites.
- 7. Click **Add to Diary** to add the target to your **Diary**.

### Create a target based on a favorite training target

If you have created a target and added it to your favorites, you can use it as a template for similar targets. This makes training target creation easier. You don't need to create, for example, a complicated phased training target every time from the scratch.

To use an existing Favorite as a template for a training target, follow these steps:

- 1. Hover your mouse over a date on the **Diary**.
- 2. Click +Add > Favorite target and then choose a target from the Favorites list.

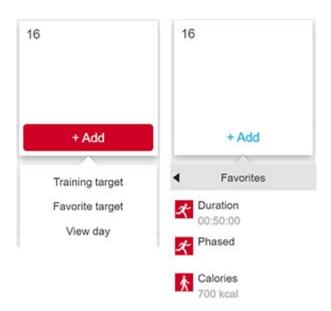

- 3. The Favorite is added to your diary as a scheduled target for the day. The default scheduled time for the training target is at 18.00/6pm.
- 4. Click the target in your Diary and modify it to your liking. Editing the target in this view won't change the original Favorite target.
- 5. Click Save to update the changes.



You can edit your favorite training targets and create new ones also via Favorites page. Click in top menu to access the Favorites page.

### SYNC THE TARGETS TO YOUR WATCH

Remember to sync the training targets to your watch from the Flow web service via FlowSync or Flow App. If you don't sync them, they are only visible in your Flow web service Diary or Favorites list.

For information on starting a training target session, see Start a training session.

### CREATE A TRAINING TARGET IN THE POLAR FLOW APP

To create a training target in the Polar Flow app:


- 1. Go to **Training**, and click on top of the page.
- 2. Then choose the type of your training target from the following:

### Favorite target

- 1. Choose **Favorite target**.
- 2. Choose one the existing favorite training targets or **Add new** favorite target.
- 3. Tap on ext to the existing target to add it to your Diary.
- 4. The training target you chose is added to your training calendar for today. Open the training target from the diary to edit the time for the training target.
- 5. If you choose Add new you can create a new favorite **Quick target**, **Phased target**, **Strava Live Segment** or **Komoot route**.




Komoot route is available only in Grit X, Grit X Pro, Pacer Pro and Vantage V2. Strava Live Segment is available in Grit X, Grit X Pro, M460, Pacer, Pacer Pro, V650, V800, Vantage V and Vantage V2.

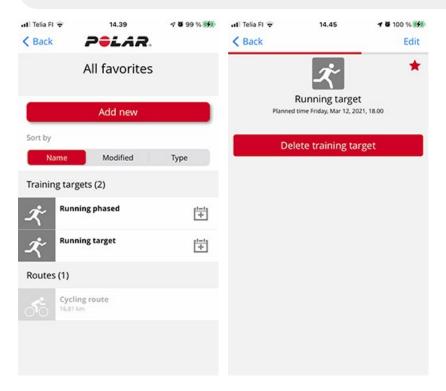


### Quick target

- 1. Choose Quick target.
- 2. Choose if the quick target is based on distance, duration or calories.
- 3. Add sport.
- 4. Give a name to the target.
- 5. Set the target distance, duration or amount of calories.
- 6. Tap **Done** to add the target to your Training diary

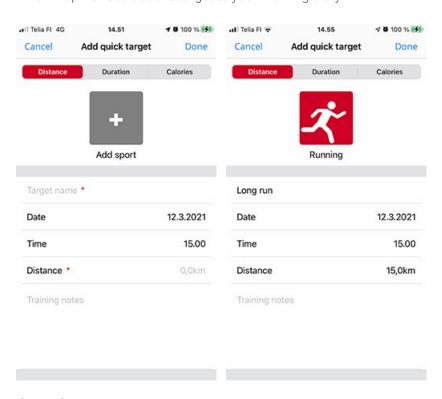

### Phased target

- 1. Choose Phased target.
- 2. Add sport.
- 3. Give a name to the target.
- 4. Set the Time and Date for the target.
- 5. Tap the icon next to phase to edit phase settings.
- 6. Tap Create target to add the target to your Training diary.

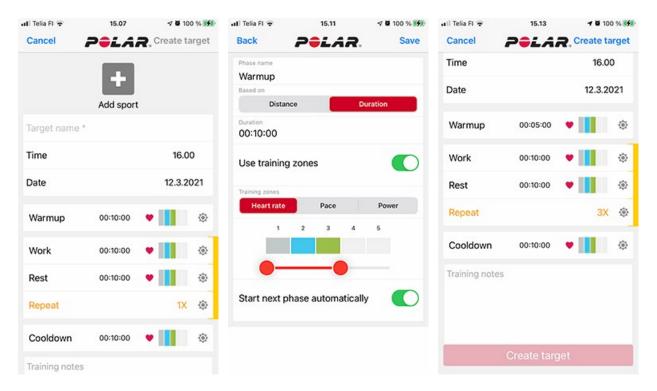

Sync your watch with Flow app to move the training targets to your watch.

## **FAVORITES**

In **Favorites**, you can store and manage your favorite training targets in the Flow web service and the Flow mobile app. You can use your favorites as scheduled targets on your watch. For more information, see <a href="Plan your training in the Flow web service">Plan your training in the Flow web service</a>.

You can see the maximum number of your watch. The number of favorites in the Flow web service is not limited. If you have over 20 favorites in the Flow web service, the first 20 in the list are transferred to your watch when syncing. You can change the order of your favorites by dragging and dropping them. Choose the favorite you want to move and drag it into the place you want to put it in the list.

### ADD A TRAINING TARGET TO FAVORITES:

- 1. Create a training target.
- 2. Click the favorites icon on the lower right corner of the page.
- 3. The target is added to your favorites.

or

- 1. Open an existing target you've created from your **Diary**.
- 2. Click the favorites icon  $\mathbf{\hat{x}}$  on the lower right corner of the page.
- 3. The target is added to your favorites.

### **EDIT A FAVORITE**

- 1. Click the favorites icon on the upper right corner next to your name. All your favorite training targets are shown.
- 2. Click the favorite you want to edit, then click Edit.
- 3. You can change the sport, the target name and add notes, as well as alter the training details of the target. For more information, see the chapter on <u>planning your training</u>. After you've done all the needed changes, click **Update changes**.

### **REMOVE A FAVORITE**

- 1. Click the favorites icon  $\hat{\mathbf{x}}$  on the upper right corner next to your name. All your favorite training targets are shown
- 2. Click the delete icon in upper right corner of the training target to remove it from the favorites list.

### SYNCING

You can transfer data from your watch to the Polar Flow app wirelessly via Bluetooth connection. Or, you can sync your watch with the Polar Flow web service by using a USB port and the FlowSync software. To be able to sync data between your watch and the Flow app you need to have a Polar account. If you want to sync data from your watch directly to the web service, in addition to a Polar account, you need the FlowSync software. If you've set up your watch, you have created a Polar account. If you set up your watch using a computer, you have the FlowSync software on your computer.

Remember to sync and keep your data up-to-date between your watch, the web service and the mobile app wherever you are.

### SYNC WITH FLOW MOBILE APP

Before syncing make sure:

- You have a Polar account and Flow app.
- Your mobile device has Bluetooth turned on, and airplane mode/flight mode is not turned on.
- You have paired your watch with your mobile. For more information, see Pairing.

#### Sync your data:

- 1. Sign in to the Flow app, and press and hold the button on your watch until **Connecting to phone** is displayed on your watch.
- 2. **Connecting to Polar Flow app** is displayed on your watch.
- 3. **Syncing completed** is displayed on your watch when you are done.



Your watch automatically syncs with the Polar Flow app once an hour if your phone is within the Bluetooth range. The automatic sync is done also when you finish a training session or change the settings on your watch. When your watch syncs with the Flow app, your activity and training data are also synced automatically via an internet connection to the Flow web service.

For support and more information about using the Polar Flow app, go to <a href="support.polar.com/en/support/Flow\_app">support.polar.com/en/support/Flow\_app</a>.

### SYNC WITH FLOW WEB SERVICE VIA FLOWSYNC

To sync data with the Flow web service you need the FlowSync software. Go to <u>flow.polar.com/start</u>, and download and install it before trying to sync.

- 1. Plug your watch to your computer. Make sure FlowSync software is running.
- 2. The FlowSync window opens on your computer, and the syncing starts.
- 3. Completed is displayed when you are done.

Every time you plug in your watch to your computer, the Polar FlowSync software will transfer your data to the Polar Flow web service and sync any settings you may have changed. If the syncing does not automatically start, start FlowSync from the desktop icon (Windows) or from the applications folder (Mac OS X). Every time a firmware update is available, FlowSync will notify you, and request you to install it.



If you change settings in the Flow web service while your watch is plugged into your computer, press the synchronize button on FlowSync to transfer to the settings to your watch.

For support and more information about using the Flow web service, go to <a href="mailto:support.polar.com/en/support/flow">support.polar.com/en/support/flow</a>.

For support and more information about using FlowSync software, go to <a href="mailto:support.polar.com/en/support/FlowSync">support.polar.com/en/support/FlowSync</a>.

# IMPORTANT INFORMATION

### **BATTERY**

At the end of the working life of the product Polar encourages you to minimize possible effects of waste on the environment and human health by following local waste disposal regulations and, where possible, utilizing separate collection of electronic devices. Do not dispose of this product as unsorted municipal waste.

### **OPERATING TIME**

The Ignite 2 has a 165 mAh Li-pol rechargeable battery. The battery operating time is:

- up to 20 hours training with GPS and optical heart rate, or
- 5 days activity tracking with Continuous heart rate tracking.
- the power save options bring you up to 100 hours in training mode (OHR off, 2 min GPS)

For more information, see What is the battery lifetime and operational time of my Ignite 2?

### **CHARGING THE BATTERY**



Before charging, please make sure there's no moisture, dust or dirt on the charging contacts of your watch and cable. Gently wipe off any dirt or moisture. Do not charge the watch when it's wet.

Your watch has an internal, rechargeable battery. Rechargeable batteries have a limited number of charge cycles. You can charge and discharge the battery over 500 times before a notable decrease in its capacity. The number of charge cycles also varies according to use and operating conditions.



Do not charge the battery in temperatures under 0  $^{\circ}$ C/ +32  $^{\circ}$ F or over +40  $^{\circ}$ C/ +104  $^{\circ}$ F or when the USB port is wet


Use the USB cable included in the product set to charge it via the USB port on your computer. You can also charge the battery via a wall outlet. When charging via a wall outlet, use a USB power adapter (not included in the product set).

You can charge the battery via a wall outlet. When charging via a wall outlet, use a USB power adapter (not included in the product set). If you use a USB power adapter, make sure that the adapter is marked with "output 5Vdc" and that it provides a minimum of 500mA. Only use an adequately safety approved USB power adapter (marked with "LPS", "Limited Power Supply", "UL listed" or "CE").



To charge with your computer, just plug your watch to your computer, and at the same time, you can have it synced it with FlowSync.

1. To charge your watch, plug it into a powered USB port or a USB charger with the custom cable that came in the box. The cable magnetically snaps into place, just make sure to align the ledge on the cable with the slot on your watch (marked with red).

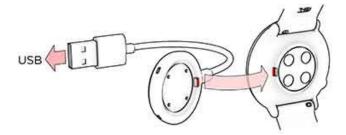

- 2. **Charging** appears on the display.
- 3. When the battery icon is full, the watch is fully charged.



Don't leave the battery fully discharged for a long period of time or keep it fully charged all the time, because it may affect the battery life time.

### **CHARGING DURING TRAINING**

Do not attempt to charge your watch during a training session with a portable charger such as a power bank. If you plug your watch into a power source during a training session the battery is not charged. When connected to the charging cable during training sweat and moisture can cause corrosion and damage the charging cable and watch. Also, if you start a training session while charging the watch, charging is stopped.

### **BATTERY STATUS AND NOTIFICATIONS**

### **Battery status icon**



The battery status icon is shown when you turn your wrist to look at the watch, press the button in time view, or return to time view from the menu. The battery status icon shows how much charge is left on the battery as a percentage.

### **Battery notifications**

- When the battery charge is low, **Battery low. Charge** is show in time mode. It is recommended to charge the watch
- Charge before training is shown if the charge is too low for recording a training session.

Low battery notifications during training:

- **Battery low** is shown when the battery charge is getting low. The notification is repeated if the charge gets too low for measuring heart rate and GPS data and the heart rate measurement and GPS are switched off.
- When the battery is critically low, **Recording ended** is shown. Your watch stops the training recording and saves the training data.

When the display is blank, the battery is empty and your watch has gone to sleep mode. Charge your watch. If the battery is totally drained, it may take a while for the charging animation to appear on the display.

The operating time depends on many factors, such as the temperature of the environment in which you use your watch, the features and sensors you use, and battery aging. Frequent syncing with Flow app will also decrease the battery life. The operating time is significantly reduced in temperatures well below freezing. Wearing the watch under your overcoat helps to keep it warmer and to increase the operating time.

### CARING FOR YOUR WATCH

Like any electronic device, your Polar watch should be kept clean and treated with care. The instructions below will help you fulfill the guarantee obligations, keep the device in peak condition and avoid any issues in charging or syncing.

### **KEEP YOUR WATCH CLEAN**

Wash the watch under running water with a mild soap and water solution after each training session. Wipe it dry with a soft towel.

### Keep the charging contacts of your watch and cable clean to ensure smooth charging and syncing.

Before charging, please make sure there's no moisture, dust or dirt on the charging contacts of your watch and cable. Gently wipe off any dirt or moisture. **Do not charge the watch when it's wet or sweaty**.

Keep the charging contacts of your watch clean to effectively protect your watch from oxidation and other possible damage caused by dirt and salt water (e.g. sweat or sea water). The best way to keep the charging contacts clean is to rinse the watch after each training session with lukewarm tap water. The watch is water resistant and you can rinse it under running water without damaging the electronic components.

### Take good care of the optical heart rate sensor

Keep the optical sensor area on the back cover scratch-free. Scratches and dirt will reduce the performance of the wrist-based heart rate measurement.

Avoid using perfume, lotion, suntan/sunscreen or insect repellent on the area where you wear your watch. If the watch comes into contact with these or any other chemicals, wash it with a mild soap and water solution and rinse well under running water.

### **STORING**

Keep your training device in a cool and dry place. Do not keep it in a damp environment, in non-breathable material (a plastic bag or a sports bag) nor with conductive material (a wet towel). Do not expose the training device to direct sunlight for extended periods, such as by leaving it in a car or mounted on the bike mount. It is recommended to store the training device partially or fully charged. The battery slowly loses its charge when it is stored. If you are going to store the training device for several months, it is recommended to recharge it after a few months. This will prolong the battery lifetime.

Do not leave the device in extreme cold (below -10 °C/14 °F) and heat (above 50 °C/120 °F) or under direct sunlight.

### **SERVICE**

During the two-year guarantee/warranty period we recommend that you have service done by an authorized Polar Service Center only. The warranty does not cover damage or consequential damage caused by service not authorized by Polar Electro. For further information, see Limited International Polar Guarantee.

For contact information and all Polar Service Center addresses, visit support.polar.com and country-specific websites.

## **PRECAUTIONS**

Polar products (training devices, activity trackers and accessories) are designed to indicate the level of physiological strain and recovery during and after exercise session. The Polar training devices and activity trackers measure heart rate and/or tell your activity. The Polar training devices with an integrated GPS show speed, distance and location. See <a href="https://www.polar.com/en/products/accessories">www.polar.com/en/products/accessories</a> for a complete list of compatible accessories. The Polar training devices with a barometric pressure sensor measure altitude and other variables. No other use is intended or implied. The Polar training device should not be used for obtaining environmental measurements that require professional or industrial precision.

#### INTERFERENCE DURING TRAINING

**Electromagnetic Interference and Training Equipment** 

Disturbance may occur near electrical devices. Also WLAN base stations may cause interference when training with the training device. To avoid erratic reading or misbehavior, move away from possible sources of disturbance.

Training equipment with electronic or electrical components such as LED displays, motors and electrical brakes may cause interfering stray signals. To solve these problems, try the following:

- 1. Remove the heart rate sensor strap from your chest and use the training equipment as you would normally.
- 2. Move the training device around until you find an area in which it displays no stray reading or does not flash the heart symbol. Interference is often worst directly in front of the display panel of the equipment, while the left or right side of the display is relatively free of disturbance.
- 3. Put the heart rate sensor strap back on your chest and keep the training device in this interference-free area as much as possible.

If the training device still does not work with the training equipment, it may be electrically too noisy for wireless heart rate measurement.

### **HEALTH AND TRAINING**

Training may include some risk. Before beginning a regular training program, it is recommended that you answer the following questions concerning your health status. If you answer yes to any of these questions, we recommend that you consult a doctor before starting any training program.

- Have you been physically inactive for the past 5 years?
- Do you have high blood pressure or high blood cholesterol?
- Are you taking any blood pressure or heart medication?
- Do you have a history of breathing problems?
- Do you have symptoms of any disease?
- Are you recovering from a serious illness or medical treatment?
- Do you use a pacemaker or other implanted electronic device?
- Do you smoke?
- Are you pregnant?

Note that in addition to training intensity, medications for heart conditions, blood pressure, psychological conditions, asthma, breathing, etc., as well as some energy drinks, alcohol, and nicotine may also affect heart rate.

It is important to be sensitive to your body's responses during training. If you feel unexpected pain or excessive fatigue when training, it is recommended that you stop the training or continue at a lighter intensity.

**Note!** If you are using a pacemaker or other implanted electronic device, you can use Polar products. In theory interference to pacemaker caused by Polar products should not be possible. In practice no reports exist to suggest anyone ever having experienced interference. We cannot however issue an official guarantee on our products' suitability with all pacemakers or other implanted devices due to the variety of devices available. If you have any doubts, or if you experience any unusual sensations while using Polar products, please consult your physician or contact the implanted electronic device manufacturer to determine safety in your case.

If you are allergic to any substance that comes into contact with your skin or if you suspect an allergic reaction due to using the product, check the listed materials in <u>Technical Specifications</u>. If you experience any skin reaction, stop using the product and consult your physician. Also inform Polar Customer Care about your skin reaction. To avoid any skin reaction to the heart rate sensor, wear it over a shirt, but moisten the shirt well under the electrodes to ensure flawless operation.



The combined impact of moisture and intense abrasion may cause color to come off the heart rate sensor's or wristband's surface, possibly staining light-colored clothes. It may also cause a darker color to come off clothing, possibly staining lighter-colored training devices. To keep a light-colored training device glowing for years to come, please make sure the clothing you wear while training does not bleed color. If you use perfume, lotion, suntan/sunscreen or insect repellent on your skin, you must ensure that it does not come into contact with the training device or the heart rate sensor. If you train in cold conditions (-20 °C to -10 °C / -4 °F to 14 °F) we recommend that you wear the training device under the sleeve of your jacket, directly on your skin.

### **WARNING - KEEP BATTERIES OUT OF REACH OF CHILDREN**

Polar heart rate sensors (for example H10 and H9) contain a button cell battery. If the button cell battery is swallowed, it can cause severe internal burns in as little as 2 hours and can lead to death. **Keep new and used batteries away from children.** If the battery compartment does not close securely, stop using the product and keep it away from children. **If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.** 

Your safety is important to us. The shape of the Polar stride sensor Bluetooth® Smart is designed to minimize the possibility of if getting caught in something. In any case, be careful when running with the stride sensor in brushwood, for example.

## **HOW TO USE YOUR POLAR PRODUCT SECURELY**

Polar offers a minimum of five years of product support service to its customers from the sales start of the product. Product support service includes necessary firmware updates to Polar devices and fixes for critical vulnerability as required. Polar constantly monitors the releases of known vulnerabilities. Please update your Polar product regularly, and as soon as the Polar Flow mobile application or Polar FlowSync computer software informs you about the availability of a new firmware version.

Training session data and other data saved on your Polar device include sensitive information about you such as your name, physical information, overall health and location. Location data can be used to track you when you are out training and to find out what your usual routes are. For these reasons use extra caution when storing your device when not using it.

If you use phone notifications on your wrist device, be aware that messages from certain applications will be projected on the wrist device display. Your latest messages can also be viewed from the device menu. To ensure the confidentiality of your private messages, refrain from using the phone notifications feature.

Before handing the device over to a third party for testing or before selling it, it is necessary to perform a factory reset on the device, and to remove the device from your Polar Flow account. A factory reset can be performed with the FlowSync software on your computer. A factory reset will clear the device memory, and the device cannot be linked to your data anymore. To remove the device from your Polar Flow account, sign into the Polar Flow web service, choose products and click the "Remove" button next to the product you wish to remove.

The same training sessions are also stored on your mobile device with the Polar Flow application. For extra security, various security enhancing options can be enabled on your mobile device such as strong authentication and device encryption. Consult the user manual of your mobile device for instructions on enabling these options.

When using the Polar Flow web service, we recommend using a password that is no less than 12 characters in length. If using the Polar Flow web service on a public computer, please remember to clear the cache and browsing history in order to prevent others from accessing your account. In addition, do not allow a computer's browser to store or remember your password for the Polar Flow web service if it is not your private computer.

Any security issues can be reported to security(a)polar.com or to Polar Customer Care.

## **TECHNICAL SPECIFICATION**

### **POLAR IGNITE 2**

Battery type:	165 mAh Li-pol rechargeable battery		
Operating time:	In continuous use:		
	Up to 20 hours training with GPS and optical heart rate		
	5 days activity tracking with		

	continuous heart rate measurement		
Operating temperature:	-10 °C to +50 °C / 14 °F to 122 °F		
Device materials:	Device: ABS+GF, GLASS (Anti-Finger-print coating), PMMA, STAINLESS STEEL  Wristband: SILICONE OR RECYCLED PET, STAINLESS STEEL BUCKLE		
Accessory wristband materials:	See Polar Accessories.		
Accessory wristbaria materials.	See Foldi Accessories.		
USB cable materials:	BRASS, PA66+PA6, PC, TPE, CARBON STEEL, NYLON		
GNSS accuracy:	Average route accuracy: 5m  These are values that are achieved in open area satellite conditions when there are no apartment buildings or trees blocking the satellite view. In urban or forest areas these values are achievable but may sometimes vary.		
Water resistance:	30 m (ISO 22810, suitable for swimming)		
Memory capacity:	Up to 90 hours of training with GPS and heart rate depending on your language settings		
Resolution	240 x 204		

Uses wireless Bluetooth® technology.

The radio equipment operates 2.402 - 2.480 GHz ISM frequency band(s) and 5 mW maximum power.

The Polar Precision Prime optical heart rate sensor fusion technology uses a very small, safe amount of electric current on the skin to measure the contact of the device to your wrist to enhance accuracy.

### POLAR FLOWSYNC SOFTWARE

To use FlowSync software you need a computer with Microsoft Windows or Mac operating system with an internet connection and a free USB port.

Check the latest compatibility information from support.polar.com.

### POLAR FLOW MOBILE APPLICATION COMPATIBILITY

Check the latest compatibility information from support.polar.com.

### WATER RESISTANCE OF POLAR PRODUCTS

Most Polar products can be worn when swimming. They are not, however, diving instruments. To maintain water resistance, do not press the buttons of the device under water.

**Polar devices with wrist-based heart rate measurement** are suitable for swimming and bathing. They will collect your activity data from your wrist movements also when swimming. In our tests, however, we found that the wrist-based heart rate measurement doesn't work optimally in water, so we cannot recommend wrist-based heart rate measurement for swimming.

In the watch industry, water resistance is generally indicated as meters, which means the static water pressure of that depth. Polar uses this same indication system. Water resistance of Polar products is tested according to International Standard **ISO 22810** or **IEC60529**. Every Polar device that has water resistance indication is tested before the delivery to stand water pressure.

Polar products are divided into four different categories according to their water resistance. Check the back of your Polar product for the water resistance category, and compare it to the chart below. Please note that these definitions do not necessarily apply to products of other manufacturers.

When performing any underwater activity, the dynamic pressure generated by moving in water is greater than the static pressure. This means that moving the product under water subjects it to a greater pressure than if the product were stationary.

Marking on the back of the product	Wash splashes, sweat, rain- drops etc.	Bathing and swimming	Skin diving with snorkel (no air tanks)	SCUBA diving (with air tanks)	Water resistant characteristics
Water resistant IPX7	OK	-	-	-	Do not wash with a pressure washer. Protected against splashes, raindrops etc. Reference standard: IEC60529.
Water resistant IPX8	OK	OK	-	-	Minimum for bathing and swimming. Reference standard: IEC60529.
Water resistant Water resistant 20/30/50 meters Suitable for swimming	OK	OK	-	-	Minimum for bathing and swimming. Reference standard: ISO22810.
Water resistant 100 meters	OK	OK	OK	-	For frequent use in water but not SCUBA diving. Reference standard: ISO22810.

## REGULATORY INFORMATION



This product is compliant with Directives 2014/53/EU, 2011/65/EU and 2015/863/EU. The relevant Declaration of Conformity and other regulatory information for each product are available at <a href="https://www.polar.com/en/regulatory\_information">www.polar.com/en/regulatory\_information</a>.



This crossed out wheeled bin marking shows that Polar products are electronic devices and are in the scope of Directive 2012/19/EU of the European Parliament and of the Council on waste electrical and electronic equipment (WEEE) and batteries and accumulators used in products are in the scope of Directive 2006/66/EC of the European Parliament and of the Council of 6 September 2006 on batteries and accumulators and waste batteries and accumulators. These products and batteries/accumulators inside Polar products should thus be disposed of separately in EU countries. Polar encourages you to minimize possible effects of waste on the environment and human health also outside the European Union by following local waste disposal regulations and, where possible, utilize separate collection of electronic devices for products, and battery and accumulator collection for batteries and accumulators.

To see the Polar Ignite 2-specific regulatory labels, go to **Settings > General settings > About your watch**.

### LIMITED INTERNATIONAL POLAR GUARANTEE

- Polar Electro Oy issues a limited international guarantee for Polar products. For products which have been sold in the USA or Canada, guarantee is issued by Polar Electro, Inc.
- Polar Electro Oy/Polar Electro Inc. guarantees the original consumer/purchaser of the Polar product that the product will be free from defects in material or workmanship for two (2) years from the date of purchase, with the exception of wristbands made of silicone or plastic, which are subject to a guarantee period of one (1) year from the date of purchase.
- The guarantee does not cover normal wear and tear of the battery, or other normal wear and tear, damage due to misuse, abuse, accidents or non-compliance with the precautions; improper maintenance, commercial use, cracked, broken or scratched cases/displays, textile armband or textile or leather wristband, elastic strap (e.g. heart rate sensor chest strap) and Polar apparel.
- The guarantee does also not cover any damage/s, losses, costs or expenses, direct, indirect or incidental, consequential or special, arising out of, or related to the product.
- Guarantee does not cover products which have been purchased second hand.
- During the guarantee period, the product will be either repaired or replaced at any authorized Polar Central Service regardless of the country of purchase.
- Guarantee issued by Polar Electro Oy/Inc. does not affect the consumer's statutory rights under applicable national or state laws in force, or the consumer's rights against the dealer arising from their sales/purchase contract
- You should keep the receipt as a proof of purchase!
- Guarantee with respect to any product will be limited to countries where the product has been initially marketed by Polar Electro Oy/Inc.

Manufactured by Polar Electro Oy, Professorintie 5, 90440 KEMPELE, Finland www.polar.com.

Polar Electro Oy is a ISO 9001:2015 certified company.

© 2022 Polar Electro Oy, 90440 KEMPELE, Finland. All rights reserved. No part of this manual may be used or reproduced in any form or by any means without prior written permission of Polar Electro Oy.

The names and logos in this user manual or in the package of this product are trademarks of Polar Electro Oy. The names and logos marked with a ® symbol in this user manual or in the package of this product are registered trademarks of Polar Electro Oy. Windows is a registered trademark of Microsoft Corporation and Mac OS is a registered trademark of Apple Inc. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Polar Electro Oy is under license.

### DISCLAIMER

- The material in this manual is for informational purposes only. The products it describes are subject to change without prior notice, due to the manufacturer's continuous development program.
- Polar Electro Inc./Polar Electro Oy makes no representations or warranties with respect to this manual or with respect to the products described herein.

• Polar Electro Inc./Polar Electro Oy shall not be liable for any damages, losses, costs or expenses, direct, indirect or incidental, consequential or special, arising out of, or related to the use of this material or the products described herein.

1.0 EN 04/2021