

POLAR V800



USER MANUAL

V800 TABLE OF CONTENTS

/800 Table of Contents	2
Get Started	8
Polar V800 User Manual	13
Introduction	13
V800	14
H7 Heart Rate Sensor*	14
USB Cable	14
Polar Flow App	14
Polar FlowSync Software	15
Polar Flow Web Service	15
Charge the Battery	15
Battery Operating Time	16
Low Battery Notifications	16
Basic Settings	17
Button Functions, Gestures and Menu Structure	18
Button Functions	18
Time View and Menu	18
Pre-Training Mode	19
During training	19
Tap gestures	20
HeartTouch	20
Menu Structure	20
Status	21
Today's Activity	21
Diary	21
Settings	22
Tests	22
Timers	22
Favorites	22
Compatible Sensors	22
Polar Stride Sensor Bluetooth® Smart	22
Polar Speed sensor Bluetooth® Smart	23
Polar Cadence Sensor Bluetooth® Smart	23
Polar LOOK Kéo Power	23
Pairing	23
Pair a Heart Rate Sensor with V800	23
Pair a Stride, Speed or Cadence Sensor with V800	24
Pair Polar Balance Scale with V800	25
Pair a Mobile Device with V800	25
Delete a Pairing	26
Syncing	26
Sync with Flow App	26

Sync With Flow Web Service Via FlowSYnc	27
Settings	28
Sport Profile Settings	28
Settings	29
Physical Settings	31
Weight	31
Height	31
Date of Birth	31
Sex	31
Training background	31
Maximum Heart Rate	32
Resting Heart Rate	32
Vo2max	32
General Settings	32
Pair and Sync	33
Flight mode	33
Button Sounds	33
Button Lock	33
Time Mode Tap Sensitivity	33
Units	34
Language	34
I Wear my Product on	34
Training View Color	34
About Your Product	34
Watch Settings	
Alarm	
Time	
Date	
Week's Starting Day	
Watch Face	
Quick Menu	
Time View	35
Training View	
Firmware Update	
How to Update Firmware	
Reset V800	
Polar Flow Web Service and App	
Polar Flow App	
Polar Flow Web Service	
Training Targets	
Create a Training Target	
Quick Target	
Race Pace Target	
Phased target	
Favorites	40

Favorites	41
Add a Route to Favorites	41
Add a Training Target to Favorites:	41
Edit a Favorite	42
Remove a favorite	42
Training	43
Wear Heart Rate Sensor	43
Pair Heart Rate Sensor	44
Start a Training Session	44
Start a Multisport Training Session	46
Start a session with Training Target	46
Start a Session with Route Guidance	47
Start a Session with Race Pace	47
Start a Session with Interval Timer	47
Functions During Training	48
Switch Sport During a Multisport Session	48
Take a Lap	48
Lock a Heart Rate Zone	48
Change Sport Specific Tap Sensitivity	48
Change Phase During a Phased Session	48
View Quick Menu	48
Set Constant Backlight On	48
Set Location Guide On	48
Save POI (point of interest)	49
Countdown Timer	49
Interval Timer	49
Automatic Pause	49
HeartTouch	49
Pause/Stop a training session	49
Delete a Training Session	50
After Training	
Training Summary on Your V800	50
Single Sport Summary	51
Multisport Summary	53
Polar Flow App	
Polar Flow Web Service	
Status	54
Recovery status	
Features	55
GPS	
Back to start	
Route Guidance	
Guidance on the Display	
Adding a Route to V800	
Race Pace	58

Barometer	58
Smart Coaching	59
Training Load	59
Recovery Status	60
View Your Recovery Status	61
View Your Daily Calories	61
Activity Tracking	62
Activity data	62
Training Benefit	63
How does it work?	63
Jump test	65
Squat Jump	66
Performing the Squat Jump	66
Test Results	
Countermovement Jump	66
Performing the Countermovement Jump	
Test Results	
Continuous Jump	
Performing the Continuous Jump	
Test Results	
Fitness Test	
Before the test	
Performing the Test	
Test Results	
Fitness Level Classes	
Men	
Women	
Orthostatic Test	
Before The Test	
Performing the test	
Test Results	
Running Index	
Short-term analysis	
Men	
Women	
Long-term analysis	
Heart Rate Zones	
Smart Calories	
Smart Notifications	
Cadence from the Wrist	
Polar Running Program	
Create a Polar Running Program	
Start a running target	
Follow your progress	
50eea / 0nes	80

Speed Zones Settings	80
Training Target with Speed Zones	81
During Training	81
After Training	81
Sport Profiles	81
Add a Sport profile	81
Edit a Sport Profile	81
Related to Sport	82
Basics	82
Heart Rate	82
Related to Device	82
Training Views	82
Gestures and Feedback	
GPS and Altitude	83
Multisport	84
Swimming	84
Swimming Metrics (Pool Swimming)	84
Swimming Styles	85
Pace and Distance	85
Strokes	85
Swolf	85
Choose Pool Length	85
Start a pool swimming session	86
During your Swim	86
After your Swim	86
R-R Recording	86
Performing R-R recording	87
Test results	87
Sensors	88
Polar Stride Sensor Bluetooth® Smart	88
Pair a Stride Sensor with V800	88
Calibrate the Stride Sensor	88
Manual Calibration	89
Set Correct Lap Distance	89
Set Factor	89
Automatic Calibration	89
Running Cadence and Stride Length	90
Polar Speed Sensor Bluetooth® Smart	90
Pair a Speed Sensor with V800	90
Measuring Wheel Size	91
Polar Cadence Sensor Bluetooth® Smart	92
Pair A Cadence Sensor with V800	
Polar LOOK Kéo Power Sensor Bluetooth® Smart	93
Pair Kéo Power with V800	93
Power Settings on V800	93

Calibrate Kéo Power	93
Important Information	95
Caring for Your V800	95
V800	95
Heart rate sensor	96
Stride Sensor Bluetooth® Smart, Speed Sensor Bluetooth® Smart and Cadence Sensor	
Bluetooth® Smart	96
Storing	96
Service	96
Technical Specification	97
V800	97
Heart Rate Sensor	98
Polar FlowSync Software	98
Polar Flow mobile application compatibility	98
Water resistance of Polar products	99
Batteries	100
Changing Heart Rate Sensor Battery	100
H7	101
H10	101
Precautions	102
Interference During Training	
Minimizing Risks When Training	
Limited International Polar Guarantee	
Compliance Statement	
Compliance Statement	
Disclaimer	106

GET STARTED

/800 Table of Contents	2
Get Started	8
Polar V800 User Manual	13
Introduction	13
V800	14
H7 Heart Rate Sensor*	14
USB Cable	14
Polar Flow App	14
Polar FlowSync Software	15
Polar Flow Web Service	15
Charge the Battery	15
Battery Operating Time	16
Low Battery Notifications	16
Basic Settings	17
Button Functions, Gestures and Menu Structure	18
Button Functions	18
Time View and Menu	18
Pre-Training Mode	19
During training	19
Tap gestures	20
HeartTouch	20
Menu Structure	20
Status	21
Today's Activity	21
Diary	21
Settings	22
Tests	22
Timers	22
Favorites	22
Compatible Sensors	22
Polar Stride Sensor Bluetooth® Smart	22
Polar Speed sensor Bluetooth® Smart	23
Polar Cadence Sensor Bluetooth® Smart	23
Polar LOOK Kéo Power	23
Pairing	23
Pair a Heart Rate Sensor with V800	23
Pair a Stride, Speed or Cadence Sensor with V800	24
Pair Polar Balance Scale with V800	
Pair a Mobile Device with V800	
Delete a Pairing	
Syncing	
Sync with Flow App	26

Sync With Flow Web Service Via FlowSYnc	27
Settings	28
Sport Profile Settings	28
Settings	29
Physical Settings	31
Weight	31
Height	31
Date of Birth	31
Sex	31
Training background	31
Maximum Heart Rate	32
Resting Heart Rate	32
Vo2max	32
General Settings	32
Pair and Sync	33
Flight mode	33
Button Sounds	33
Button Lock	33
Time Mode Tap Sensitivity	33
Units	34
Language	34
I Wear my Product on	34
Training View Color	34
About Your Product	34
Watch Settings	
Alarm	
Time	
Date	
Week's Starting Day	
Watch Face	
Quick Menu	
Time View	35
Training View	
Firmware Update	
How to Update Firmware	
Reset V800	
Polar Flow Web Service and App	
Polar Flow App	
Polar Flow Web Service	
Training Targets	
Create a Training Target	
Quick Target	
Race Pace Target	
Phased target	
Favorites	40

Favorites	41
Add a Route to Favorites	41
Add a Training Target to Favorites:	41
Edit a Favorite	42
Remove a favorite	42
Training	43
Wear Heart Rate Sensor	43
Pair Heart Rate Sensor	44
Start a Training Session	44
Start a Multisport Training Session	46
Start a session with Training Target	46
Start a Session with Route Guidance	47
Start a Session with Race Pace	47
Start a Session with Interval Timer	47
Functions During Training	
Switch Sport During a Multisport Session	48
Take a Lap	48
Lock a Heart Rate Zone	48
Change Sport Specific Tap Sensitivity	48
Change Phase During a Phased Session	48
View Quick Menu	48
Set Constant Backlight On	48
Set Location Guide On	48
Save POI (point of interest)	49
Countdown Timer	49
Interval Timer	49
Automatic Pause	49
HeartTouch	49
Pause/Stop a training session	49
Delete a Training Session	50
After Training	50
Training Summary on Your V800	50
Single Sport Summary	51
Multisport Summary	53
Polar Flow App	53
Polar Flow Web Service	53
Status	54
Recovery status	54
Features	55
GPS	56
Back to start	57
Route Guidance	57
Guidance on the Display	57
Adding a Route to V800	58
Race Pace	58

Barometer	58
Smart Coaching	59
Training Load	59
Recovery Status	60
View Your Recovery Status	61
View Your Daily Calories	61
Activity Tracking	62
Activity data	62
Training Benefit	63
How does it work?	63
Jump test	65
Squat Jump	66
Performing the Squat Jump	66
Test Results	
Countermovement Jump	66
Performing the Countermovement Jump	
Test Results	
Continuous Jump	67
Performing the Continuous Jump	
Test Results	
Fitness Test	68
Before the test	69
Performing the Test	
Test Results	
Fitness Level Classes	7C
Men	
Women	
Orthostatic Test	
Before The Test	
Performing the test	
Test Results	
Running Index	
Short-term analysis	
Men	
Women	
Long-term analysis	
Heart Rate Zones	
Smart Calories	
Smart Notifications	
Cadence from the Wrist	
Polar Running Program	
Create a Polar Running Program	
Start a running target	
Follow your progress	
Speed Zones	80

Speed Zones Settings	80
Training Target with Speed Zones	81
During Training	81
After Training	81
Sport Profiles	81
Add a Sport profile	81
Edit a Sport Profile	81
Related to Sport	82
Basics	82
Heart Rate	82
Related to Device	82
Training Views	82
Gestures and Feedback	83
GPS and Altitude	83
Multisport	84
Swimming	84
Swimming Metrics (Pool Swimming)	84
Swimming Styles	85
Pace and Distance	85
Strokes	85
Swolf	85
Choose Pool Length	85
Start a pool swimming session	86
During your Swim	86
After your Swim	86
R-R Recording	86
Performing R-R recording	87
Test results	87
Sensors	
Polar Stride Sensor Bluetooth® Smart	88
Pair a Stride Sensor with V800	88
Calibrate the Stride Sensor	88
Manual Calibration	89
Set Correct Lap Distance	89
Set Factor	89
Automatic Calibration	89
Running Cadence and Stride Length	90
Polar Speed Sensor Bluetooth® Smart	90
Pair a Speed Sensor with V800	90
Measuring Wheel Size	
Polar Cadence Sensor Bluetooth® Smart	
Pair A Cadence Sensor with V800	
Polar LOOK Kéo Power Sensor Bluetooth® Smart	
Pair Kéo Power with V800	
Power Settings on V800	93

Calibrate Kéo Power	93
Important Information	95
Caring for Your V800	95
V800	95
Heart rate sensor	96
Stride Sensor Bluetooth® Smart, Speed Sensor Bluetooth® Smart and Cadence Sensor	
Bluetooth® Smart	96
Storing	96
Service	96
Technical Specification	97
V800	97
Heart Rate Sensor	98
Polar FlowSync Software	98
Polar Flow mobile application compatibility	98
Water resistance of Polar products	99
Batteries	100
Changing Heart Rate Sensor Battery	100
H7	101
H10	101
Precautions	102
Interference During Training	102
Minimizing Risks When Training	102
Limited International Polar Guarantee	103
Compliance Statement	105
Compliance Statement	105
Disclaimer	106

POLAR V800 USER MANUAL

INTRODUCTION

Congratulations on your new V800! Designed for demanding athletes and sports, the V800 with GPS, Smart Coaching and 24/7 activity measurement helps you reach your peak performance. Get an instant overview of your training straight after your session with Flow app, and plan and analyze your training in detail with the Flow web service.

This user manual helps you get started with your new training companion. To check the video tutorials and the latest version of this user manual, go to www.polar.com/en/support/v800.



V800

Monitor your training data, such as heart rate, speed, distance and route, and even the smallest activities in your everyday life.

H7 HEART RATE SENSOR*

See live, accurate heart rate on your V800 during training, also when swimming. Your heart rate is information used to analyze how your session went.

USB CABLE

Use the custom USB cable to charge the battery, and to sync data between your V800 and the Polar Flow web service via FlowSync software.

POLAR FLOW APP

View your training data at a glance after every session. Flow app syncs your training data wirelessly to the Polar Flow web service. Download it from the App Store or Google Play.

POLAR FLOWSYNC SOFTWARE

Flowsync software allows you to sync data between your V800 and the Flow web service on your computer via the USB cable. Go to www.flow.polar.com/start to download and install Polar FlowSync software.

POLAR FLOW WEB SERVICE

Plan and analyze every detail of your training, customize your device and learn more about your performance at polar.com/flow.

*Only included in V800 with heart rate sensor sets. If you bought a set that does not include a heart rate sensor, not to worry, you can always buy one later.

CHARGE THE BATTERY

After unboxing your V800, the first thing you need to do is charge the battery. Let your V800 fully charge before taking it into use for the first time.

The V800 has an internal, rechargeable battery. Use the custom USB cable included in the product set to charge it via the USB port on your computer. You can also charge the battery via a wall outlet. When charging via a wall outlet use a USB power adapter (not included in the product set). If you use an AC adapter, make sure that the adapter is marked with "output 5Vdc 0.5A - 2A max". Only use an AC adapter which is adequately safety approved (marked with "LPS", "Limited Power Supply" or "UL listed"). Do not charge the battery in temperatures under -10 °C or over +50 °C.

You can charge the battery via a wall outlet. When charging via a wall outlet, use a USB power adapter (not included in the product set). If you use a USB power adapter, make sure that the adapter is marked with "output 5Vdc" and that it provides a minimum of 500mA. Only use an adequately safety approved USB power adapter (marked with "LPS", "Limited Power Supply", "UL listed" or "CE").






Do not charge Polar products with a 9 volt charger. Using a 9 volt charger can damage your Polar product.

- 1. Snap the custom USB connector onto your V800.
- 2. Plug the other end of the cable into your computer's USB port.

- 3. **Charging** appears on the display.
- 4. When V800 is fully charged, **Charging completed** is displayed.

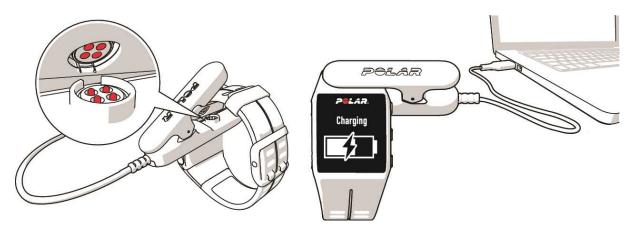


Make sure the USB connector snaps firmly into place, and that the Polar logo on the USB connector and V800 are facing the same direction.

BATTERY OPERATING TIME

In continuous use	In time mode with daily activity monitoring
With high accuracy GPS recording and heart rate: up to 13 hours	Anagorija stalu 20 daga
With medium accuracy GPS recording and heart rate: up to 20 hours	
With GPS power save mode and heart rate: up to 50 hours	Approximately 30 days
With GPS recording off and heart rate on: up to 100 h	

Battery operating time depends on many factors, such as the temperature of the environment in which you use your training device, the features and sensors you use, and battery aging. The operating time is significantly reduced in temperatures well below freezing. Wearing the training device under your overcoat helps to keep it warmer and to increase the operating time.

LOW BATTERY NOTIFICATIONS

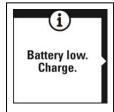


Battery low. Charge

The battery charge is low. It is recommended to charge V800.



Charge before training

The charge is too low for recording a training session. A new training session cannot be started before charging V800.

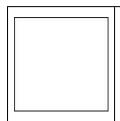

When the display is blank, the battery is empty and V800 has gone to sleep mode. Charge your V800. If the battery is totally drained, it may take a while for the charging animation to appear on the display.

BASIC SETTINGS

To make sure you get to enjoy your V800 at its best, please go to flow.polar.com/start where simple instructions will guide you through setting up your V800, downloading the latest firmware and taking the Flow web service into use. If you already have a Polar Account, you don't need to register a new account in the Flow web service. You can sign in with the same username and password you are using e.g. with polarpersonaltrainer.com.

After charging your V800, it's time to enter the basic settings. To get the most accurate and personal training data, it's important that you're precise with physical settings like your training background, age, weight and sex, as they have an effect on calorie calculation, your training load as well as other Smart Coaching features.

Choose language is displayed. Press start to choose **English**.

If you choose a language other than **English**, you will be guided to go to <u>polar.com/flow</u> to get the language. When taking V800 into use with the Flow web service, you can add another language during the setup. To add another language later, go to <u>polar.com/flow</u> and sign in. Click your name/profile photo in the upper right corner, choose Products, and then V800 Settings. Choose the language you want from the list, and sync with your V800. The languages you can choose are: **Dansk**, **Deutsch**, **English**, **Español**, **Français**, **Italiano**, 日本語, **Nederlands**, **Norsk**, **Português**, 简体中文, **Suomi** or **Svenska**.

If you choose English, **Set up your Polar V800** is displayed. Set the following data, and confirm each selection with the **Start** button. If at any point you want to return and change a setting, press **Back** until you reach the setting you want to change.

- 1. **Time format**: Choose **12 h** or **24 h**. With **12 h**, select **AM** or **PM**. Then set the local time.
- 2. **Date**: Enter the current date.
- 3. Units: Choose metric (kg, cm, °C) or imperial (lb, ft, °F) units.
- 4. I wear my product on: Choose Left hand or Right hand.
- 5. **Weight**: Enter your weight.
- 6. Height: Enter your height.
- 7. **Date of birth**: Enter your date of birth.
- 8. **Sex**: Select **Male** or **Female**.
- 9. Training background: Occasional (0-1 h/week), Regular (1-3 h/week), Frequent (3-5 h/week), Heavy (5-8 h/week), Semi-Pro (8-12 h/week), Pro (12+ h/week). For more information on training background, see "Physical Settings" on page 31
- 10. **Ready to go!** is displayed when you're done with the settings, and V800 goes to time view.

BUTTON FUNCTIONS, GESTURES AND MENU STRUCTURE

V800 has five buttons that have different functionalities depending on the situation of use. In addition to these, V800 also includes taps gestures. They're performed by tapping the display of your V800, and allow you to view information on the display or perform functions during training.

See the tables below to find out what functionalities the buttons have in different modes.

BUTTON FUNCTIONS



TIME VIEW AND MENU

LIGHT	 Illuminate the display Press and hold to enter Quick menu
ВАСК	 Exit the menu Return to the previous level Leave settings unchanged Cancel selections Press and hold to return to time view from menu Press and hold to sync with Flow app in time view
START	 Confirm selections Enter pre-training mode Confirm the selection shown on the display
UP	 Move through selection lists Adjust a selected value Press and hold to change the watch face
DOWN	 Move through selection lists Adjust a selected value
TAP	Check your recovery status in Time View

PRE-TRAINING MODE

LIGHT	Press and hold to enter sport profile settings
ВАСК	Return to time view
START	Start a training session
UP	Move through sports list
DOWN	Move through sports list
TAP	

DURING TRAINING

LIGHT	 Illuminate the display Press and hold to enter Training Quick Menu
ВАСК	 Pause training by pressing once Press and hold for 3 seconds to stop training recording Enter transition mode in multisport training


START	 Press and hold to set zone lock on/off Continue training recording when paused Press to take a lap
UP	Change training view
DOWN	Change training view
TAP	Take a lap/Change training view/ Activate backlight

TAP GESTURES

The tap gesture allows you to view information on the display or perform functions during training. With the tap gesture, you can view your recovery status in time mode or take a lap, change the training view or activate the backlight during training. The gestures are performed by firmly tapping the display. Just gently touching it is not enough. The display can be tapped with two fingers using a reasonable amount of force, the glass will not break with a solid tap.

The sport specific tap sensitivity setting allows you to adjust the sensitivity to best suit different sports. To change the sport specific tap sensitivity (how hard you have to tap during a session), go to **Settings** > **Sport profiles**, and under the sport you want to edit choose **Sport specific tap sensitivity**. To change the time mode tap sensitivity (how hard you have to tap to view your recovery status), go to **Settings** > **General settings** > **Time mode tap sensitivity**. Try out different sensitivities to find out which works best for you in different sports, and which setting is best for use in time mode. The sensitivity can be set to **Light tap**, **Normal tap**, **Strong tap**, **Very strong tap** or **Off**.

The sport specific tap sensitivity can also be changed during a session from **Quick menu**. Press and hold LIGHT and choose **Sport specific tap sensitivity**.

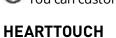


① You can customize the tap functions in your Sport Profile settings in the Polar Flow web service.

Use the HeartTouch function to easily show the time, activate backlight or show your previous lap. Just touch your heart rate sensor with your V800. No buttons needed. You can edit the HeartTouch functions in the Sport Profile Settings in the Flow web service. For more information, see "Sport Profiles" on page 81

MENU STRUCTURE

Enter and browse through the menu by pressing UP or DOWN. Confirm selections with the START button, and return with the BACK button.

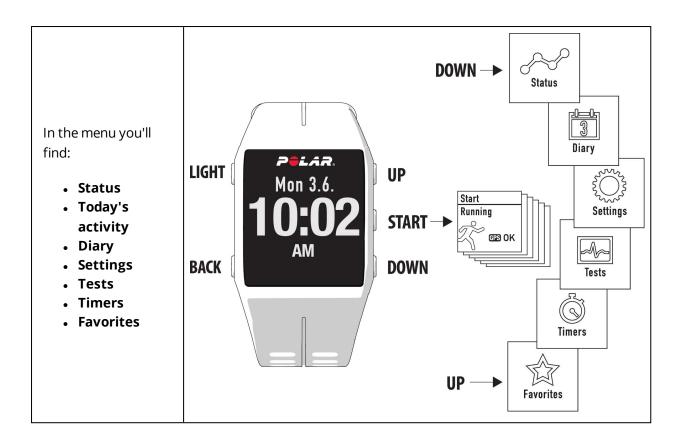

STATUS

In Status you'll find:

• **Recovery status**: Shows your recovery level. For more information, "Recovery Status" on page 60

For more information, see "Status" on page 54

TODAY'S ACTIVITY

The daily activity goal you get from Polar V800 is based on your personal data and activity level setting, which you can find in the Daily Activity Goal settings in the Flow web service.

Your daily activity goal is visualized with an activity bar. The activity bar fills up as you reach your daily goal. In Today's activity you'll see details of your activity (active time, calories and steps) and options for reaching your daily activity goal.

For more information, see "Activity Tracking" on page 62

DIARY

In **Diary** you'll see the current week, past four weeks and next four weeks. Select a day to see all the sessions from that day, and the training summary of each session and the tests you have done. You can also see your planned training sessions.

SETTINGS

In **Settings** you can edit:

- Sport profiles
- Physical settings
- General settings
- Watch settings

For more information, see "Settings" on page 28

TESTS

In **Tests** you'll find:

- Orthostatic test
- Fitness test
- Jump test
- · RR recording

For more information, see "Features" on page 55

TIMERS

In **Timers** you'll find:

- Stopwatch
- Countdown timer
- Interval timer

FAVORITES

In **Favorites** you'll find:

• Race Pace, routes and training targets that you have saved as favorites in the Flow web service.

For more information, see "Race Pace" on page 58

COMPATIBLE SENSORS

Enhance your training experience, and achieve a more complete understanding of your performance with *Bluetooth*® Smart sensors.

POLAR STRIDE SENSOR BLUETOOTH® SMART

The Stride Sensor *Bluetooth*® Smart is for runners who want to improve their technique and performance. It allows you to see speed and distance information, whether you are running on a treadmill or on the muddiest trail.

- Measures each stride you take to show running speed and distance
- Helps improve your running technique by showing your running cadence and stride length

- Allows you to perform the Jump Test
- Small sensor fits firmly onto your shoelaces
- Shock and water resistant, to handle even the most demanding runs

POLAR SPEED SENSOR BLUETOOTH® SMART

There are a range of factors that can affect your cycling speed. Obviously fitness is one of them, however, weather conditions and the varying gradients of the road play a huge part too. The most advanced way of measuring how these factors affect your performance speed is with the aerodynamic speed sensor.

- Measures your current, average and maximum speeds
- Track your average speed to see your progress and performance improve
- · Light yet tough, and easy to attach

POLAR CADENCE SENSOR BLUETOOTH® SMART

The most practical way of measuring your cycling session is with our advanced wireless cadence sensor. It measures your real-time, average and maximum cycling cadence as revolutions per minute so you can compare the technique of your ride against previous rides.

- Improves your cycling technique and identifies your optimal cadence
- Interference-free cadence data lets you evaluate your individual performance
- Designed to be aerodynamic and light

POLAR LOOK KÉO POWER

Truly develop your cycling performance and technique. Perfect for ambitious cyclists, this system uses Bluetooth® Smart technology and consumes only a little energy.

- Gives instant feedback by measuring accurate power output in watts
- Displays your left and right balance as well as the current and average cadence
- Shows how you use force against the pedal with the force vector feature
- · Easy to set up and switch between bikes

PAIRING

Sensors compatible with V800 use *Bluetooth* Smart ® wireless technology. Before taking a new heart rate sensor, running sensor, cycling sensor or mobile device (smartphone, tablet) into use, it has to be paired with your V800. Pairing only takes a few seconds, and ensures that your V800 receives signals from your sensors and devices only, and allows disturbance-free training in a group. Before entering an event or race, make sure that you do the pairing at home to prevent interference due to data transmission.

PAIR A HEART RATE SENSOR WITH V800

There are two ways to pair a heart rate sensor with your V800:

- 1. Wear your heart rate sensor, and press START in time view to enter pre-training mode.
- 2. **To pair, touch your sensor with V800 is displayed**, touch your heart rate sensor with V800, and wait for it to be found.
- 3. The device ID **Pair Polar H7 xxxxxxxx** is displayed. Choose **Yes**.
- 4. **Pairing completed** is shown when you are done.

or

- 1. Go to **General Settings > Pair and sync > Pair other device** and press START.
- 2. V800 starts searching for your heart rate sensor.
- 3. Once the heart rate sensor is found, the device ID **Polar H7 xxxxxxxx** is displayed.
- 4. Press START, **Pairing** is displayed.
- 5. **Pairing completed** is displayed when you are done.

When using a H7 heart rate sensor, V800 may detect your heart rate via GymLink transmission before you have paired it. Make sure you have paired your heart rate sensor before starting training. GymLink transmission is optimized to be used in swimming, therefore your heart rate is shown in gray in other sport profiles if you haven't paired your heart rate sensor via Bluetooth®.

PAIR A STRIDE, SPEED OR CADENCE SENSOR WITH V800

Before pairing a stride sensor, cadence sensor or speed sensor, make sure they have been correctly installed. For more information on installing the sensors see their user manuals.

There are two ways to pair a sensor with your V800:

- 1. Press START in time view to enter pre-training mode.
- 2. V800 starts searching for your sensor.
 - Stride sensor: Touch your stride sensor with V800, and wait for it to be found.
 - Cadence sensor: Rotate the crank a few times to activate the sensor. The flashing red light in the sensor indicates that the sensor is activated.
 - Speed sensor: Rotate the wheel a few times to activate the sensor. The flashing red light in the sensor indicates that the sensor is activated.
- 3. The device ID Pair Polar RUN/CAD/SPD xxxxxxxx is displayed. Choose Yes.
- 4. Pairing completed is shown when you are done.

or

- 1. Go to **General Settings > Pair and sync > Pair other device** and press START.
- 2. V800 starts searching for your sensor.
- 3. Once the sensor is found, the device ID **Polar RUN/CAD/SPD xxxxxxxx** is displayed.
- 4. Press START, **Pairing** is displayed.
- 5. **Pairing completed** is displayed when you are done.

For more information on pairing specific sensors, "Sensors" on page 88

PAIR POLAR BALANCE SCALE WITH V800

There are two ways to pair a Polar Balance scale with your V800:

- 1. Step on the scale. The display shows your weight.
- 2. After a beep sound, the Bluetooth icon on the scale display starts flashing, which means that the connection is now on. The scale is ready to be paired with your V800.
- 3. Press and hold the BACK button for 2 seconds on your V800 and wait until the display indicates the pairing is complete.

or

- 1. Go to General Settings > Pair and sync > Pair other device and press START.
- 2. V800 starts searching for your scale.
- 3. Step on the scale. The display shows your weight.
- 4. Once the scale is found, the device ID **Polar scale xxxxxxx** is displayed on your V800.
- 5. Press START, **Pairing** is displayed.
- 6. Pairing completed is shown when you are done.

The scale can be paired with 7 different Polar devices. When the number of paired devices exceeds 7, the first pairing will be removed and replaced.

PAIR A MOBILE DEVICE WITH V800

Before pairing a mobile device, create a Polar account if you do not already have one, and download Flow app from the App Store or Google Play. Make sure you have also downloaded and installed FlowSync software onto your computer from flow.polar.com/start, and registered your V800 in the Flow web service.

Before trying to pair, make sure your mobile device has *Bluetooth* turned on, and airplane mode/flight mode is not turned on.

To pair a mobile device:

- 1. On your mobile device, open Flow app and sign in with your Polar account.
- 2. Wait for the Connect product view to appear on your mobile device (**Searching for Polar V800**) is displayed.
- 3. In V800 time mode, press and hold BACK.
- 4. Connecting to device is displayed, followed by Connecting to app.
- 5. Accept the Bluetooth pairing request on your mobile device and type in the pin code shown on your V800.
- 6. **Pairing completed** is displayed when you are done.

or

- 1. On your mobile device, open Flow app and sign in with your Polar account.
- 2. Wait for the Connect product view to appear on your mobile device (**Waiting for V800**) is displayed.
- 3. On V800, go to **Settings > General settings > Pair and sync > Pair and sync mobile device** and press START
- 4. Press START, **Connecting to device** is displayed, followed by **Connecting to app**.
- 5. Accept the Bluetooth pairing request on your mobile device and type in the pin code shown on your V800.
- 6. Pairing completed is displayed when you are done.

DELETE A PAIRING

To delete a pairing with a sensor or mobile device:

- 1. Go to **Settings > General settings > Pair and sync > Paired devices** and press START.
- 2. Choose the device you want to remove from the list and press START.
- 3. **Delete pairing?** is displayed, choose **Yes** and press START.
- 4. **Pairing deleted** is displayed when you are done.

SYNCING

You can transfer data from your V800 via the USB cable with FlowSync software or wirelessly via Bluetooth Smart® with the Polar Flow app. To be able sync data between your V800 and the Flow web service and app, you need to have a Polar account and FlowSync software. Go to flow.polar.com/start, and create your Polar account in the Polar Flow web service and download and install FlowSync software onto your PC. Download Flow app onto your mobile from the App Store or Google Play.

Remember to sync and keep your data up-to-date between your V800, the web service and the mobile app wherever you are.

SYNC WITH FLOW APP

Before syncing make sure:

- You have a Polar account and Flow app
- You have registered your V800 in the Flow web service and synced data via FlowSync software at least once.
- Your mobile device has Bluetooth turned on, and airplane mode/flight mode is not turned on.
- You have paired your V800 with your mobile. For more information, see "Pairing" on page 23

There are two ways to sync your data:

- 1. Sign into Flow app and press and hold the BACK button on your V800.
- 2. **Connecting to device** is displayed, followed by **Connecting to app**.
- 3. **Syncing completed** is displayed when you are done.

or

- 1. Sign into Flow app and go to **Settings > General settings > Pair and sync mobile device** and press the START button on your V800.
- 2. **Connecting to device** is displayed, followed by **Connecting to app**.
- 3. **Syncing completed** is displayed when you are done.

When you sync your V800 with the Flow app, your training and activity data are also synced automatically via an internet connection to the Flow web service.

For support and more information about using Polar Flow app, go to www.polar.com/en/support/Flow_app
app

SYNC WITH FLOW WEB SERVICE VIA FLOWSYNC

To sync data with the Flow web service you need FlowSync software. Go to <u>flow.polar.com/start</u>, and download and install it before trying to sync.

- 1. Plug the USB cable into your computer and snap the connector onto your V800. Make sure FlowSync software is running.
- 2. The FlowSync window opens on your computer, and the syncing starts.
- 3. Completed is displayed when you are done.

Every time you plug in your V800 to your computer, the Polar FlowSync software will transfer your data to the Polar Flow web service and sync any settings you may have changed. If the syncing does not automatically start, start FlowSync from the desktop icon (Windows) or from the applications folder (Mac OS X). Every time a firmware update is available, FlowSync will notify you, and request you to install it.

If you change settings in the Flow web service while your V800 is plugged into your computer, press the synchronize button on FlowSync to transfer to the settings to your V800.

For support and more information about using the Flow web service, go to www.polar.com/en/support/flow

For support and more information about using FlowSync software, go to www.polar.com/en/support/FlowSync

SETTINGS

Sport Profile Settings	28
Settings	29
Physical Settings	31
Weight	31
Height	31
Date of Birth	31
Sex	31
Training background	31
Maximum Heart Rate	32
Resting Heart Rate	32
Vo2max	32
General Settings	32
Pair and Sync	33
Flight mode	33
Button Sounds	33
Button Lock	33
Time Mode Tap Sensitivity	33
Units	34
Language	34
I Wear my Product on	34
Training View Color	34
About Your Product	34
Watch Settings	34
Alarm	34
Time	34
Date	35
Week's Starting Day	35
Watch Face	35
Quick Menu	35
Time View	35
Training View	35
Firmware Update	36
How to Update Firmware	36
Reset V800	37

SPORT PROFILE SETTINGS

Adjust the sport profile settings to best suit your training needs. In V800 you can edit certain sport profiles settings in **Settings > Sport profiles**. You can, for example, set the GPS on or off in different sports.

A wider range of customization options is available in the Flow web service. For more information, see "Sport Profiles" on page 81

There are seven sport profiles shown in the pre-training mode by default. In the Flow web service you can add new sports to your list, and sync them to your V800. You can have a maximum of 20 sports on your V800 at a time. The number of sport profiles in the Flow web service is not limited.

By default, in the **Sport profiles** you'll find:

- Running
- Cycling
- Swimming
- · Other outdoor
- Other indoor
- Triathlon
- Free multisport

If you have edited your sport profiles in the Flow web service before your first training session, and synced them to your V800, the sport profile list will contain the edited sport profiles.

SETTINGS

To view or modify sport profile settings, go to **Settings > Sport profiles** and choose the profile you want to edit. You can also access sport profile settings from pre-training mode by pressing and holding LIGHT. In sport profiles, that include multiple sports (e.g. triathlon and biathlon) the settings for each sport can be modified. For example, in triathlon you can modify the settings for swimming, cycling and running.

- Training sounds: Choose Off, Soft, Loud or Very loud.
- **Vibration feedback**: Choose **On** or **Off**. When set on, V800 vibrates, for example, when you start or stop a training session, GPS signal is found or you reach a training target.
- Heart rate settings: Heart rate view: Choose Beats per minute (bpm), % of maximum or % of Hr reserve. Check HR zone limits: Check the limits for each heart rate zone. HR visible to other device: Choose On or Off. If you choose On, other compatible devices (e.g. gym equipment) can detect your heart rate.
- Bike power settings: Choose Power view, Power, rolling average, Set FTP value or Check power zone limits. Set how you want to view your power, how frequently data points of your power are recorded, set your FTP value or view your power zone limits.
- Bike power settings are visible only if Kéo Power has been paired.
 - GPS recording: Choose Off, High accuracy, Medium accuracy or Power save, long session.

When using power save mode or medium accuracy GPS, location-based automatic lap, automatic pause and route guidance cannot be used.

- When using power save mode in cycling your current speed is not shown.
 - Sport specific tap sensitivity: Choose Off, Light tap, Normal tap, Strong tap or Very strong tap. Set how hard you have to tap the display when using tap gestures.
 - Stride sensor: Choose Calibration or Choose sensor for speed. In Calibration, choose
 Automatic or Manual. In Choose sensor for speed, set the source for speed data: Stride
 sensor or GPS. For more information on Stride sensor calibration, "Polar Stride Sensor
 Bluetooth® Smart" on page 88
- ① Stride sensor is visible only if a stride sensor has been paired.
 - **Calibrate altitude**: Set the correct altitude. It is recommended to always manually calibrate altitude when you know your current altitude.
- Altitude calibration is only visible when accessing sport profile settings from pre-training mode.
 - **Speed View**: Choose **km/h** (kilometers per hour) or **min/km**(minutes per kilometer). If you have chosen imperial units, choose **mph** (miles per hour) or **min/mi** (minutes per mile).
 - **Automatic pause**: Choose **On** or **Off**. If you set the **automatic pauseOn**, your session is automatically paused when you stop moving.
- GPS recording must be set to high accuracy to use automatic pause.
 - Automatic lap: Choose Off, Lap distance, Lap duration or Location- based. If you choose Lap distance, set the distance after which each lap is taken. If you choose Lap duration, set the duration after each lap is taken. If you choose Location- based, a lap will always be taken at the starting point of your session.
- GPS recording must be set to high accuracy to use location-based automatic lap. Location-based automatic lap is activated if the GPS fix is ready when starting a training session (and location-based automatic lap is set on in sport profile settings and GPS is set to High Accuracy). POI's added later are NOT taken into account (regarding automatic lap). There can be several POI's during one session but only one location triggers the automatic lap (that point is the starting point), and you need to pass outside the 10 meter range of starting point and return into it to get the automatic lap saved.



Please note that in a number of indoor sports, group sports and team sports profiles the **HR visible to other devices** setting is enabled by default. This means that compatible devices using Bluetooth Smart wireless technology, e.g. gym equipment, can detect your heart rate. You can check which sport profiles have Bluetooth broadcasting enabled by default from the <u>Polar Sport profiles list</u>. You can enable or disable Bluetooth broadcasting from sport profile settings.

PHYSICAL SETTINGS

To view and edit your physical settings, go to **Settings > Physical settings**. It is important that you are precise with the physical settings, especially when setting your weight, height, date of birth and sex, as they have an impact on the accuracy of the measuring values, such as the heart rate zone limits and calorie expenditure.

In Physical settings you'll find:

- · Weight
- Height
- Date of birth
- Sex
- · Training background
- Maximum heart rate
- · Resting heart rate
- VO2_{max}

WEIGHT

Set your weight in kilograms (kg) or pounds (lbs).

HEIGHT

Set your height in centimeters (metric) or in feet and inches (imperial).

DATE OF BIRTH

Set your birthday. The order in which the date settings are depends on which time and date format you have chosen (24h: day - month - year / 12h: month - day - year).

SEX

Select Male or Female.

TRAINING BACKGROUND

Training background is an assessment of your long-term physical activity level. Select the alternative that best describes the overall amount and intensity of your physical activity during the past three months.

- Occasional (0-1h/week): You do not participate regularly in programmed recreational sport or heavy physical activity, e.g. you walk only for pleasure or exercise hard enough to cause heavy breathing or perspiration only occasionally.
- **Regular (1-3h/week)**: You participate regularly in recreational sports, e.g. you run 5-10 km or 3-6 miles per week or spend 1-3 hours per week in comparable physical activity, or your work requires modest physical activity.
- **Frequent (3-5h/week)**: You participate at least 3 times a week in heavy physical exercise, e.g. you run 20-50 km/12-31 miles per week or spend 3-5 hours per week in comparable physical activity.

- **Heavy (5-8h/week)**: You participate in heavy physical exercise at least 5 times a week, and you may sometimes take part in mass sports events.
- **Semi-pro (8-12h/week)**: You participate in heavy physical exercise almost daily, and you exercise to improve performance for competitive purposes.
- **Pro (>12h/week)**: You are an endurance athlete. You participate in heavy physical exercise to improve your performance for competitive purposes.

MAXIMUM HEART RATE

Set your maximum heart rate, if you know your current maximum heart rate value. Your age-predicted maximum heart rate value (220-age) is displayed as a default setting when you set this value for the first time.

 ${\rm HR}_{\rm max}$ is used to estimate energy expenditure. ${\rm HR}_{\rm max}$ is the highest number of heartbeats per minute during maximum physical exertion. The most accurate method for determining your individual ${\rm HR}_{\rm max}$ is to perform a maximal exercise stress test in a laboratory. ${\rm HR}_{\rm max}$ is also crucial when determining training intensity. It is individual and depends on age and hereditary factors.

RESTING HEART RATE

Set your resting heart rate.

A person's resting heart rate (HR_{rest}) is the lowest number of heart beats per minute (bpm) when fully relaxed and without distractions. Age, fitness level, genetics, health status and gender affect HR_{rest} . HR_{rest} is decreased as the result of cardiovascular conditioning. A normal value for an adult is 60-80 bpm, but for top athletes it can even be below 40 bpm.

VO_{2MAX}

Set your VO2_{max}.

A clear link exists between maximal oxygen consumption (VO2 $_{\rm max}$) of the body and cardiorespiratory fitness because oxygen delivery to tissues is dependent on lung and heart function. VO2 $_{\rm max}$ (maximal oxygen uptake, maximal aerobic power) is the maximal rate at which oxygen can be used by the body during maximal exercise; it is related directly to the maximal capacity of the heart to deliver blood to the muscles. VO2 $_{\rm max}$ can be measured or predicted by fitness tests (e.g. maximal exercise tests, submaximal exercise tests, Polar Fitness Test). VO2 $_{\rm max}$ is a good index of cardiorespiratory fitness and a good predictor of performance capability in endurance events such as distance running, cycling, cross-country skiing, and swimming.

 $VO2_{max}$ can be expressed either as milliliters per minute (ml/min = ml \blacksquare min-1) or this value can be divided by the person's body weight in kilograms (ml/kg/min = ml \blacksquare kg-1 \blacksquare min-1).

GENERAL SETTINGS

To view and edit your general settings, go to **Settings > General settings**

In General settings you'll find:

- Pair and sync
- Flight mode
- Button sounds
- Button lock
- Time mode tap sensitivity
- Units
- Language
- I wear my product on
- · Training view color
- · About your product

PAIR AND SYNC

- **Pair other device**: Pair heart rate sensors, running sensors, cycling sensors or mobile devices with your V800.
- **Paired devices**: View all the devices you have paired with your V800. These can include heart rate sensors, running sensors, cycling sensors and mobile devices.
- **Sync Data**: Sync data with Flow app. **Sync data** becomes visible after you have paired your V800 with a mobile device.

FLIGHT MODE

Choose On or Off

Flight mode cuts off all wireless communication from the device. You can still use it to collect activity, but you cannott use it in training sessions with a heart rate sensor nor sync your data to the Polar Flow mobile app because *Bluetooth*® Smart is disabled.

BUTTON SOUNDS

Set the button sounds **On** or **Off**.

Please note that this selection does not modify training sounds. Training sounds are modified in sport profile settings. For more information, see "Sport Profile Settings" on page 28

BUTTON LOCK

Choose **Manual lock** or **Automatic lock**. In **Manual lock** you can lock the buttons by manually from the **Quick menu**. In **Automatic Lock** the button lock automatically goes on after 60 seconds.

The tap function can be used when button lock is on.

TIME MODE TAP SENSITIVITY

Choose **Off**, **Light tap**, **Normal tap**, **Strong tap** or **Very strong tap**. Set how hard you have to tap the display when using tap gestures.

UNITS

Choose metric (kg, cm, °C) or imperial (lb, ft,°F). Set the units used to measure weight, height, distance, speed and temperature.

LANGUAGE

By default, V800 only comes in English. Other languages can added in the Flow web service. To add another language, go to polar.com/flow and sign in. Click your name/profile photo in the upper right corner, choose **Products**, and then V800 **Settings**. Choose the language you want from the list, and sync with your V800. The languages you can choose are: **Dansk**, **Deutsch**, **English**, **Español**, **Français**, **Italiano**, 日本語, **Nederlands**, **Norsk**, **Português**, 简体中文, **Suomi** or **Svenska**.

I WEAR MY PRODUCT ON

Choose Left hand or Right hand.

TRAINING VIEW COLOR

Choose **Dark** or **Light**. Change the display color of your training view. When **Light** is chosen, the training view has a light background with dark numbers and letters. When **Dark** is chosen, the training view has a dark background with light numbers and letters.

ABOUT YOUR PRODUCT

Check the device ID of your V800, as well as the firmware version and HW model.

WATCH SETTINGS

To view and edit your watch settings, go to **Settings > Watch settings**

In Watch settings you'll find:

- Alarm
- Time
- Date
- Week's starting day
- Watch face

ALARM

Set alarm repetition: **Off, Once, Monday to Friday** or **Every day**. If you choose **Once, Monday to Friday** or **Every day**, also set the time for the alarm.

 $oldsymbol{\emptyset}$ When the alarm is set on, a clock icon is displayed in the upper right corner in the time view.

TIME

Set the time format: **24 h** or **12 h**. Then set the time of day.

When syncing with the Flow app and web service, the time of day is automatically updated from the service.

DATE

Set the date. Also set the **Date format**, you can choose **mm/dd/yyyy, dd/mm/yyyy, yyyy/mm/dd, dd-mm-yyyy, yyyy-mm-dd, dd.mm.yyyy** or **yyyy.mm.dd**.

When syncing with the Flow app and web service, the date is automatically updated from the service.

WEEK'S STARTING DAY

Choose the starting day of each week. Choose Monday, Saturday or Sunday.

When syncing with the Flow app and web service, the week's starting day is automatically updated from the service.

WATCH FACE

Choose the watch face: Date and time, Your name and time, Analog or Big.

QUICK MENU

Certain settings can be modified with a shortcut button. You can enter the **Quick menu** by pressing and holding LIGHT in time view or training view. **Quick menu** will contain different settings depending on which view you enter it from.

TIME VIEW

In time view, press and hold LIGHT to enter **Quick menu**. In the time view **Quick menu** you can:

- Lock buttons: Press START to lock buttons. To unlock, press and hold LIGHT.
- Alarm: Set Off, Once, Monday to Friday or Every day. If you choose Once, Monday to Friday or Every day, also set the time for the alarm.
- Flight mode: Set On or Off.

TRAINING VIEW

In training view, press and hold LIGHT to enter **Quick menu**. In the training view **Quick menu** you can:

- Lock buttons: Press START to lock buttons. To unlock, press and hold LIGHT.
- ② Please note that tap gestures can be performed when the buttons are locked.
 - Set backlight: Set On or Off.
 - Sport specific tap sensitivity: Choose Off, Light tap, Normal tap, Strong tap or Very strong tap. Set how hard you have to tap the display when using tap gestures in the sport profile you are currently using.

- **Search sensor**: Search for a heart rate sensor, running or cycling sensor.
- Stride sensor: Choose Calibration or Choose sensor for speed. In Calibration, choose
 Automatic or Manual. In Choose sensor for speed, set the source for speed data: Stride
 sensor or GPS.
- **Calibrate altitude**: Set the correct altitude. It is recommended to always manually calibrate altitude when you know your current altitude.
- **Countdown timer**: Set the countdown timer on. The countdown timer is shown in its own training view when set on.
- **Interval timer**: Create time and/or distance based interval timers to precisely time work and recovery phases in your interval training sessions.
- Current location info: This selection is only available if GPS is set on for the sport profile.
- By selecting Set location guide on, Set target point is displayed. Choose Starting point
 (default). Location guide is used by the Back to start feature, that guides to your starting point
 or a POI.

You can change the target point by returning to the **Quick menu**, and choosing **Change target point**.

When **Location guide** is set on, **Save new POI** is added to the **Quick menu**.

• Press START when **Save new POI** is displayed to save your current location as a point of interest.

FIRMWARE UPDATE

The firmware of your V800 can be updated. Any time a new firmware version is available, FlowSync will notify you when connecting V800 to your computer with the USB cable. The firmware updates are downloaded via the USB cable and FlowSync software. Flow app will also notify you when new firmware is available.

Firmware updates are performed to improve the functionality of your V800. To make sure your V800 always works at its best, we recommend that you update the firmware every time a new version available. Updates can include improvements to existing features, completely new features or bug fixes, for example.

HOW TO UPDATE FIRMWARE

To update the firmware of your V800, you must have:

- A Flow web service account
- Installed FlowSync software
- Registered your V800 in the Flow web service

Go to <u>flow.polar.com/start</u>, and create your Polar account in the Polar Flow web service and download and install FlowSync software onto your PC.

To update the firmware:

- 1. Snap the custom USB connector onto your V800, and plug the other end of the cable into your PC.
- 2. FlowSync starts syncing your data.
- 3. After syncing, you are asked to update the firmware.
- 4. Choose Yes. New firmware is installed (this may take some time), and V800 reboots.

Before updating the firmware, the most important data from your V800 is synced to the Flow web service. Therefore you will not lose important data when updating.

RESET V800

Like any electronic device, V800 is recommended to be switched off every now and then. If you experience problems with your V800, try resetting it. Reset your V800 by pressing and holding the UP, DOWN, BACK and LIGHT buttons simultaneously for five seconds until the Polar animation is shown on the display. This is called a soft reset, and it will not erase your data.

POLAR FLOW WEB SERVICE AND APP

Polar Flow App	38
Polar Flow Web Service	
Training Targets	39
Favorites	

POLAR FLOW APP

Polar Flow app allows you to see an instant visual interpretation of your training data offline straight after your session. It lets you easily access your training targets and view test results. Flow app is the easiest way to sync your training data from your V800 with the Flow web service.

With Flow app you'll see:

- Route view on a map
- Training Load and recovery time
- Training Benefit
- Start time and duration of your session
- Average and maximum speed/pace, distance, running index
- Average and maximum heart rate, cumulative heart rate zones
- Calories and fat burn % of calories
- Maximum altitude, ascent and descent
- Lap details
- Average and maximum cadence (running and cycling)

To start using the Flow app, download it from the App Store or Google Play onto your mobile. For support and more information about using Polar Flow app, go to www.polar.com/en/support/Flow_app

To see your training data in Flow app, you must sync your V800 with it after your session. For information on syncing V800 with Flow app, see "Syncing" on page 26

POLAR FLOW WEB SERVICE

The Polar Flow web service allows you to plan and analyze every detail of your training and learn more about your performance. Set up and customize V800 to perfectly fit your training needs by adding sports and tailoring settings and training views. Follow and visually analyze your progress, create training targets, and add them and your favorite routes to your favorites.

With the Flow web service you can:

- Analyze all of your training details with visual graphs and a route view
- Compare specific data with others like laps or speed vs. heart rate
- · Analyze sports specific data in multisport training
- See how your training load affects your cumulative recovery status
- See long-term progress by following the trends and details which matter to you the most

- Follow your progress with sports specific weekly or monthly reports
- Share highlights with your followers
- · Relive your and other users' sessions afterward

To start using the Flow web service, go to <u>flow.polar.com/start</u>, and create your Polar account if you do not already have one. Download and install FlowSync software from the same place to allow you to sync data between V800 and Flow web service. Also get the Flow app for your mobile for instant analysis and data sync to the web service.

Feed

In **Feed** you can see what you've been up to lately, plus you can see your friends' activities and comments.

Explore

In **Explore** you can discover training sessions and routes by browsing the map, add them to your favorites and sync them to your V800. See public training sessions that other users have shared, and relive your own or other people's routes and see where the highlights happened.

Diary

In **Diary** you can see your scheduled training sessions, as well as review past results. Information shown includes: training plans in day, week or month view, individual sessions, tests and weekly summaries.

Progress

In **Progress** you can follow your development with reports. Reports are a handy way to follow your progress in training over longer periods. In week, month and year reports you can choose the sport for the report. In custom period, you can choose both the period and the sport. Choose the time period and sport for report from the drop down lists, and press the wheel icon to choose what data you want to view in the report graph.

For support and more information about using the Flow web service, go to, www.polar.com/en/support/flow

TRAINING TARGETS

Create detailed training targets in the Flow web service and sync them to your V800 via Flowsync software or Flow app. During training you can easily follow the guidance on your device.

- Quick Target: Fill in one value. Choose a duration, distance or calorie target.
- Race Pace Target: Challenge yourself and try to hit your target time for a set distance for example run 10 km in 45 minutes or aim at keeping a steady pace. Fill in two of the values and you get the third one automatically.
- Phased Target: You can split your training into phases and create a different target duration or
 distance and intensity for each of them. This one is for e.g. creating an interval training session,
 and adding proper warmup and cool down phases to it.

• **Favorites**: Create a target, and add it to **Favorites** to easily access it every time want to perform it again.

Remember to sync your training targets to your V800 from the Flow web service via FlowSync or Flow App. If you do not sync them, they are only visible in your Flow web service Diary or Favorites list.

CREATE A TRAINING TARGET

- 1. Go to **Diary**, and click **Add** > **Training target**.
- 2. In the Add training target view, choose Quick, Race Pace, Phased or Favorite.

Quick Target

- 1. Choose **Quick**
- Choose Sport, enter Target name (required), Date (optional) and Time(optional) and any Notes (optional) you want to add.
- 3. Fill in one of the following values: duration, distance or calories . You can only fill in one of the values.
- 4. Click **Save** to add the target to your **Diary**, or the favorites icon to add it to your **Favorites**.

Race Pace Target

- 1. Choose Race Pace
- Choose Sport, enter Target name (required), Date (optional) and Time(optional) and any Notes (optional) you want to add.
- 3. Fill in two of the following values: duration, distance or Race Pace.
- 4. Click **Save** to add the target to your **Diary**, or the favorites icon to add it to your **Favorites**.

Phased target

- 1. Choose **Phased**
- Choose Sport, enter Target name (required), Date (optional) and Time(optional) and any Notes (optional) you want to add.
- 3. Add phases to your target. Choose distance or duration for each phase, manual or automatic next phase start and the intensity.
- 4. Click **Save** to add the target to your **Diary**, or the favorites icon to add it to your **Favorites**.

Favorites

If you have created a target, and added it to your favorites you can use it as a scheduled target.

- 1. Choose **Favorites**. Your training target favorites are shown.
- 2. Click the favorite you want to use a template for your target.
- 3. Choose **Sport**, enter **Target name** (required), **Date** (optional) and **Time**(optional) and any **Notes** (optional) you want to add.

- 4. You can edit the target if you wish, or leave it as it is.
- 5. Click **Update changes** to save changes made to the favorite. Click **Add to diary** to add the target to your **Diary** without updating the favorite.

After syncing your training targets to your V800, you can find:

- Scheduled training targets in **Diary** (current week and the next 4 weeks)
- Training targets listed as favorites in **Favorites**

When starting your session, access your target from **Diary** or **Favorites**.

For information on starting a training target session, see "Start a Training Session" on page 44

FAVORITES

In **Favorites**, you can store and manage your favorite routes and training targets in the Flow web service. Your V800 can have a maximum of 20 favorites at a time. The number of favorites in the Flow web service is not limited. If you have over 20 favorites in the Flow web service, the first 20 in the list are transferred to your V800 when syncing.

You can change the order of your favorites by dragging and dropping them. Choose the favorite you want to move and drag it into the place you want to put it in the list.

Add a Route to Favorites

Add a route recorded by you or another user to your favorites, and after syncing it your V800 you can follow it with route guidance.

- 1. When viewing a route click the favorites icon in the lower right corner of the map.
- 2. Name the route, and choose **Save**.
- 3. The route is added to your favorites

Add a Training Target to Favorites:

- 1. Create a training target.
- 2. Click the favorites icon in the lower right corner of the page.
- 3. The target is added to your favorites

or

- 1. Choose an existing target from your **Diary**.
- 2. Click the favorites icon in the lower right corner of the page.
- 3. The target is added to your favorites.

Edit a Favorite

- 1. Click the favorites icon in the upper right corner next to your name. All your favorite routes and training targets are shown.
- 2. Choose the favorite you want to edit:
- **Routes:** The name of a route can be changed, but the route on the map cannot be edited.
- **Training targets:** Change the name of the target, or choose edit in the lower right corner to modify the target.

Remove a favorite

Click the delete icon in upper right corner of the route or training target to remove it from the favorites list.

TRAINING

Wear Heart Rate Sensor	43
Pair Heart Rate Sensor	44
Start a Training Session	44
Start a Multisport Training Session	46
Start a session with Training Target	46
Start a Session with Route Guidance	47
Start a Session with Race Pace	47
Start a Session with Interval Timer	47
Functions During Training	48
Switch Sport During a Multisport Session	48
Take a Lap	
Lock a Heart Rate Zone	48
Change Sport Specific Tap Sensitivity	48
Change Phase During a Phased Session	
View Quick Menu	48
Set Constant Backlight On	48
Set Location Guide On	48
Save POI (point of interest)	49
Countdown Timer	49
Interval Timer	49
Automatic Pause	49
HeartTouch	49
Pause/Stop a training session	49
Delete a Training Session	50
After Training	50
Training Summary on Your V800	50
Polar Flow App	53
Polar Flow Web Service	53
Status	54

WEAR HEART RATE SENSOR

Use our heart rate sensors when training to get the most out of Polar's unique Smart Coaching features. Heart rate data gives you an insight into your physical condition and how your body responds to training. This will help you fine-tune your training plans and reach your peak performance.


A heart rate monitor gives you a physiological window, through accurate heart rate measurement, into your body's response to the moment-to-moment changes in your physical activity. Although there are many subjective clues as to how your body is doing during exercise (perceived exertion, breathing rate, physical sensations), none is as reliable as measuring heart rate. It is objective and is affected by both internal and external factors - meaning you will have a dependable measure of your physical state.

PAIR HEART RATE SENSOR

- 1. Wear your heart rate sensor, and press START in time view to enter pre-training mode.
- 2. **To pair, touch your sensor with V800 is displayed**, touch your heart rate sensor with V800, then wait for it to be found.
- 3. The device ID **Pair Polar H7 xxxxxxxx** is displayed. Choose **Yes**.
- 4. **Pairing completed** is shown when you are done.

You can also pair a new sensor in **Settings > General settings > Pair and sync > Pair other device**. For more information on pairing, see "Pairing" on page 23

When using a H7 heart rate sensor, V800 may detect your heart rate via GymLink transmission before you have paired it. Make sure you have paired your heart rate sensor before starting training. GymLink transmission is optimized to be used in swimming, therefore your heart rate is shown in gray in other sport profiles if you haven't paired your heart rate sensor via Bluetooth®.

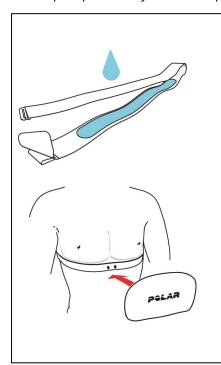

- 1. Moisten the electrode areas of the strap.
- 2. Attach the connector to the strap.
- 3. Adjust the strap length to fit tightly but comfortably. Tie the strap around your chest, just below the chest muscles, and attach the hook to the other end of the strap.
- 4. Check that the moist electrode areas are firmly against your skin and that the Polar logo of the connector is in a central and upright position.

Detach the connector from the strap, and rinse the strap under running water after every training session. Sweat and moisture may keep the heart rate sensor activated, so also remember to wipe it dry.

START A TRAINING SESSION

Wear the heart rate sensor, and make sure you have paired it and any other compatible sensors with your V800.



1. Begin by pressing the START button to enter pre-training mode.

Choose the sport you want use



2. Choose the sport profile you want to use.

To change the sport profile settings before starting your session (in pre-training mode), press and hold LIGHT to enter the **Quick Menu**. To return to the pre-training mode, press BACK.

Wait for GPS and optional sensors to be found



- 3. If you have activated the GPS function and/or paired an optional sensor*,V800 will automatically start searching for the signals.
- Stay in the pre-training mode until V800 has found the sensor signals and your heart rate. OK is shown next to the sensor icon when it is found.
- 4. Stand still and hold the position until V800 has found the satellite signals. The percentage value shown next to the GPS icon indicates when the GPS is ready. When it reaches 100 %, Ok is displayed, and you are ready to go.



V800 uses SiRFInstantFix[™] satellite prediction technology to acquire a fast satellite fix. It accurately predicts satellite positions for up to three days allowing you to find satellite signals in 5 -10 seconds.

To catch the GPS satellite signals, go outdoors and away from tall buildings and trees. Wear V800 with the face upwards on your wrist. Keep it in a horizontal position in front of you and away from your chest. Keep your arm stationary and raised above the level of your chest during the search

For best GPS performance, wear V800 on your wrist with the display facing up. Due to the location of the GPS antenna on the V800, it is not recommended to wear it with the display on the underside of your wrist. When wearing it on the handlebars of a bike, make sure the display is facing up.

5. When V800 has found all the signals, press START. **Recording started** is displayed and you can start training.

During training recording you can change the training view with UP/DOWN. To change settings without stopping the training recording, press and hold LIGHT to enter **Quick menu**. For more information, "Quick Menu" on page 35

*Optional sensors include Polar Stride Sensor *Bluetooth*® Smart, Polar Cadence Sensor *Bluetooth*® Smart and Polar Speed Sensor *Bluetooth*® Smart.

START A MULTISPORT TRAINING SESSION

Before starting a multisport training session, make sure that you have set the sport profile settings for each of the sports that you are going to use for the training session. For more information, see "Sport Profiles" on page 81



- 1. Begin by pressing the START button.
- 2. Choose **Triathlon**, **Free multisport** or any other multisport profile (can be added in the Flow web service).
- 3. Once V800 has found all the signals, press START. **Recording started** is displayed and you can start training.
- 4. To change the sport press **BACK** to go to transition mode.
- 5. Choose your next sport, and press **START** (your transition time is shown) and continue training.

For more information on multisport, see "Multisport" on page 84

START A SESSION WITH TRAINING TARGET

- 1. Begin by going to **Diary** or **Favorites**.
- 2. In **Diary**, choose the day the target is scheduled and press START, and then choose the target from the list and press **START**. Any notes you have added to the target are displayed.

or

In **Favorites**, choose the target from the list and press START. Any notes you have added to the target are displayed.

- 3. Press START to enter the pre-training mode, and choose the sport profile you want to use.
- 4. When V800 has found all the signals, press START. **Recording started** is displayed and you can start training.

For more information on training targets, "Training Targets" on page 39

START A SESSION WITH ROUTE GUIDANCE

- 1. Begin by going to **Favorites**.
- 2. Choose the route from the list and press START.
- 3. Press START to enter the pre-training mode, and choose the sport profile you want to use.
- 4. When V800 has found all the signals, press START. **Recording started** is displayed and you can start training.

For more information on route guidance, see "Route Guidance" on page 57

START A SESSION WITH RACE PACE

- 1. Begin by going to **Favorites**.
- 2. Choose **Race pace**, and press START. Set the target distance km/m and target time.
- 3. Press START to enter the pre-training mode, and choose the sport profile you want to use.
- 4. When V800 has found all the signals, press START. **Recording started** is displayed and you can start training.

For more information on Race Pace, see "Race Pace" on page 58

START A SESSION WITH INTERVAL TIMER

You can set one repeating or two alternating time and/or distance based timers for guiding your work and recovery phases in interval training.

- 1. Begin by going to **Timers > Interval timer**. Choose **Set timer(s)** to create new timers.
- 2. Choose Time-based or Distance-based:
 - **Time-based**: Define minutes and seconds for the timer and press START.
 - **Distance-based**: Set the distance for the timer and press START.
- 3. **Set another timer?** is shown. To set another timer, choose **Yes**.
- 4. When completed, choose **Start X.XX km / XX:XX** and press START to enter the pre-training mode, and then choose the sport profile you want to use.
- 5. When V800 has found all the signals, press START. **Recording started** is displayed and you can start training.

FUNCTIONS DURING TRAINING

SWITCH SPORT DURING A MULTISPORT SESSION

Press BACK, and choose the sport you want to switch to. Confirm your selection with **START**.

TAKE A LAP

Press START to record a lap. You can also record a lap by tapping the display if you have set it in the sport profile settings in the Flow web service. Laps can also be taken automatically. In sport profile settings, set **Automatic lap** to **Lap distance**, **Lap duration** or **Location- based**. If you choose **Lap distance**, set the distance after which each lap is taken. If you choose **Lap duration**, set the duration after each lap is taken. If you choose **Location- based**, a lap will always be taken at the starting point of your session.

LOCK A HEART RATE ZONE

Press and hold START to lock the heart rate zone you are currently in. To lock/unlock the zone, press and hold START. If your heart rate goes outside the locked zone, you will be notified with audio and vibration feedback.

CHANGE SPORT SPECIFIC TAP SENSITIVITY

Press and hold LIGHT. **Quick menu** is displayed. Choose **Sport specific tap sensitivity** from the list and choose **Light tap, Normal tap, Strong tap, Very strong tap** or **Off** to customize the sensitivity to best suit your current sport.

CHANGE PHASE DURING A PHASED SESSION

Press and hold LIGHT. **Quick menu** is displayed. Choose **Start next phase** from the list, and press START (if manual phase change is chosen when creating the target). If automatic is chosen, the phase will change automatically when you have finished a phase.

VIEW QUICK MENU

Press and hold LIGHT. **Quick menu** is displayed. You can change certain settings without pausing your training session. For more information, "Quick Menu" on page 35

SET CONSTANT BACKLIGHT ON

Press and hold LIGHT. **Quick menu** is displayed. Choose **Set backlight on** from the list, and press START. When enabled, the backlight stays on continuously when pressing LIGHT. Please note that using this function shortens battery life.

SET LOCATION GUIDE ON

The location guide is used by the Back to start feature, that guides to your starting point or a POI. Press and hold LIGHT. **Quick menu** is displayed. Choose **Set location guide on, Set target point** is displayed. Choose **Starting point (default)**. You can change the target point by returning to the

Quick menu, and choosing **Change target point**. At least one POI must be saved during your session to be able to change the target point. For more information, "Back to start" on page 57

SAVE POI (POINT OF INTEREST)

Press and hold LIGHT. **Quick menu** is displayed. Choose **Set location guide on** from the list, and press START. Choose **Save new POI** from list, and press START to save your current location as a POI.

COUNTDOWN TIMER

Press and hold LIGHT. **Quick menu** is displayed. Choose **Countdown timer** from the list, and press START. Choose **Set Timer**, and set the countdown time, and press **START** to confirm.

INTERVAL TIMER

Press and hold LIGHT. **Quick menu** is displayed. Choose **Interval timer** from the list, and press START. Choose **Start X.XX km / XX:XX** to use a previously set timer or create a new timer in **Set Timer**:

- 1. Choose Time-based or Distance-based:
 - Time-based: Define minutes and seconds for the timer and press START.
 - **Distance-based**: Set the distance for the timer and press START.
- 2. **Set another timer?** is shown. To set another timer, choose **Yes**.
- 3. When completed, choose **Start X.XX km / XX:XX** and press START.

AUTOMATIC PAUSE

When you start or stop moving, your V800 automatically starts and stops training recording. GPS recording must set to high accuracy or, you must have a Polar Speed Sensor *Bluetooth*® Smart for automatic pause to work. Set automatic pause on or off in **Quick menu** or in sport profile settings. For more information, "Sport Profile Settings" on page 28

HEARTTOUCH

Bring V800 near your heart rate sensor to activate the HeartTouch function. You can set the function to: off, activate backlight, show previous lap or show time of day. The HeartTouch function only works with a H7 heart rate sensor. You can edit the HeartTouch functions in the sport profile settings in the Flow web service. For more information, "Sport Profiles" on page 81

PAUSE/STOP A TRAINING SESSION



1. To pause a training session, press the BACK button. **Recording paused** is displayed. To continue your training session, press START.



2. To stop a training session, press and hold the BACK button for three seconds when paused until **Recording ended** is displayed.

If you stop your session after pausing, the time elapsed after pausing is not included in the total training time.

DELETE A TRAINING SESSION

To delete a training session, go to **Diary** on your V800, and select a date. Scroll down to **Delete session**, and choose the session you want to delete.

You can only delete sessions from your V800 **Diary** that have not been synced to Flow app or the Flow web service. If you want to delete a file that you have already synced, it can be deleted in the Flow web service.

AFTER TRAINING

Get instant analysis and in-depth insights into your training and recovery with V800, Flow app and Flow web service.

TRAINING SUMMARY ON YOUR V800

After each training session, you'll get an instant training summary of your session. After viewing your training summary, you'll also see how your session affected recovery status.

The information shown in the summary depends on the sport profile and sensors used. Information shown includes:

- Training Load and the needed recovery time for the session
- Training Benefit
- Start time and duration of your session
- Average and maximum speed/pace, distance
- Average and maximum heart rate and cumulative heart rate zones
- Altitude compensated calories and fat burn % of calories,
- Running Index
- Average and maximum cadence (running and cycling)
- Average and maximum stride length (running)
- · Maximum altitude, ascent and descent
- · Lap details

To view your training summary later, go to **Diary** and choose the day, and then choose the summary of the session you want to view.

SINGLE SPORT SUMMARY

Single sport summary includes detailed information of your session. \\


Summary Start time	Start time
10:31 PM Duration	Duration
00:51:23 Distance 10.20 km	Distance (visible if the GPS function is on or Polar Stride Sensor <i>Bluetooth</i> ® Smart/ Polar Speed Sensor <i>Bluetooth</i> ® Smart is in use)
Summary Race time	Race time
O1:50:20 PM	Average speed in race
in race 23.2 km/h	① Only visible if race pace used
Summary Training load	Training Load
Reasonable Load from this session 12 h	Recovery need from this session
12 h	
Summary	Training Benefit
Training benefit Basic training	Press START for more details.
	Visible if heart rate sensor in use, not visible in multisport sessions
Summary HR zones 5 00:01:27	Heart rate zones
00:11:20 00:22:02 00:08:11	Visible if heart rate sensor in use
Summary Avg heart rate 137 (76%)	Average heart rate
Max heart rate 168 (93%)	Maximum heart rate

Summary Calories 682 kcal Fat burn % of calories 35 %	Calories Fat burn % of calories
Summary Average pace 5:00 min/km Maximum pace 3:47 min/km	Average speed/pace Maximum speed/pace
Summary Running Index 50	Running Index Visible if running type sport and GPS or Polar Stride Sensor Bluetooth® Smart in use
Summary Average cadence 80 Maximum cadence	Average cadence Maximum cadence Visible if Polar Stride Sensor Bluetooth® Smart in use
Summary Average stride length 125 cm Maximum stride length 140 cm	Average stride length Maximum stride length Visible if Polar Stride Sensor Bluetooth® Smart in use
Summary Average cadence 86 Maximum cadence 108	Average cadence Maximum cadence Visible if Polar Cadence Sensor Bluetooth® Smart in use
Summary Max altitude 172 m Ascent 40 m Descent 25 m	Maximum altitude Ascent Descent

	Visible if altitude in use
Summary	Laps
Laps (5) Best lap	Best lap
09:30:07 Average lap 10:02:52	Average lap
·	Press START for more details.
Summary	Automatic laps
Automatic laps (10) Best lap	Best lap
03:20:08 Average lap 05:01:02	Average lap
	Press START for more details.

MULTISPORT SUMMARY

Multisport summary includes an overall summary of the session as well as sport specific summaries.

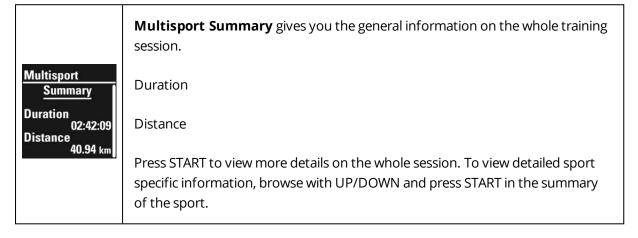

POLAR FLOW APP

Sync your V800 with Flow app to analyze your data at a glance after each session. The Flow app allows you to see a quick overview of your training data offline.

For information, "Polar Flow App" on page 38

POLAR FLOW WEB SERVICE


The Polar Flow web service allows you to analyze every detail of your training and learn more about your performance. Follow your progress and also share your best sessions with others.

For more information, "Polar Flow Web Service" on page 38

STATUS

To view your status information, go to **Status**. In **Status** you'll find:

Recovery status

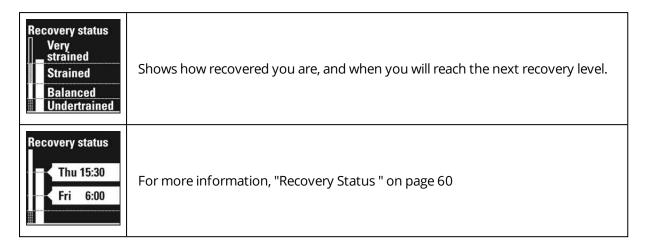

FEATURES

GPS	56
Back to start	57
Route Guidance	57
Race Pace	58
Barometer	58
Smart Coaching	59
Training Load	59
Recovery Status	60
Activity Tracking	62
Training Benefit	63
Jump test	65
Fitness Test	68
Orthostatic Test	71
Running Index	72
Heart Rate Zones	75
Smart Calories	78
Smart Notifications	78
Cadence from the Wrist	78
Polar Running Program	79
Create a Polar Running Program	79
Start a running target	80
Follow your progress	80
Speed Zones	80
Speed Zones Settings	80
Training Target with Speed Zones	81
During Training	81
After Training	81
Sport Profiles	81
Add a Sport profile	81
Edit a Sport Profile	81
Related to Sport	82
Related to Device	82
Multisport	84
Swimming	84
Swimming Metrics (Pool Swimming)	84
Swimming Styles	85
Pace and Distance	85
Strokes	85
Swolf	
Choose Pool Length	85
Start a pool swimming session	
During your Swim	

After your Swim	86
R-R Recording	
Performing R-R recording	
Test results	87

GPS

The V800 has built-in GPS that provides accurate speed and distance measurement for a range of outdoor sports, and allows you to see your route on map in the Flow app and web service after your session.

V800 includes the following GPS features:

- **Distance**: Gives you accurate distance during and after your session.
- **Speed/Pace**: Accurate speed/pace information during and after your session.
- Race Pace: Helps you to keep a steady pace and achieve your target time for a set distance.
- **Running index**: In V800, Running Index is based on heart rate, speed and altitude data measured during the run. It gives information about your performance level, both aerobic fitness and running economy. In V800, this feature can also recognize if you're running uphill or downhill.
- **Back to start**: Directs you to your starting point in the shortest distance possible, as well as shows the distance to your starting point. Now you can check out more adventurous routes and explore them safely, knowing that you're only a touch of a button away from seeing the direction to where you started.
- Route guidance: Follows your previously recorded routes and shared routes from Polar Flow.
- Power save, long session mode and Medium accuracy GPS: Allows you to save the battery life of your V800 during long training sessions. In power save mode your GPS data is stored at intervals of 60 seconds, and in medium accuracy mode it is stored at intervals of 30 seconds. A longer interval gives you more recording time. When using power save mode or medium accuracy GPS location-based automatic lap, automatic pause and route guidance cannot be used. In addition, Running Index cannot be used unless you have a stride sensor, and Race Pace cannot be used unless you have a stride sensor or speed sensor.
- **Incline**: See your incline during your session. Uphill/downhill steepness is shown in percentages and grade. Only available in high accuracy GPS mode.
- When using power save mode, the GPS data is not as accurate as in high accuracy mode. Power save mode is only recommended to be used in long sessions lasting over 10 hours.
- When using power save mode in cycling your current speed is not shown.
- When training with either a Polar Stride Sensor *Bluetooth*® Smart or Polar Speed Sensor *Bluetooth*® Smart with GPS set on, speed and distance information is collected from the stride sensor or speed sensor, not the GPS. However, route information is collected from the GPS.

For best GPS performance, wear V800 on your wrist with the display facing up. Due to the location of the GPS antenna on the V800, it is not recommended to wear it with the display on the underside of your wrist. When wearing it on the handlebars of a bike, make sure the display is facing up.

BACK TO START

The back to start feature guides you back to the starting point of your session or to a saved POI.

To use the back to start feature:

- 1. Press and hold LIGHT during a training session. **Quick menu** is displayed.
- 2. Choose **Set location guide on**, **Set target point** is displayed.
- 3. Choose **Starting point (default)**.

You can change the target point by returning to the **Quick menu**, and choosing **Change target point**. At least one POI must be saved during your session to be able to change the target point.

To return to your starting point:

- Browse to the Back to start view.
- Keep V800 in a horizontal position in front of you.
- Keep moving in order for V800 to determine which direction you are going. An arrow will point in the direction of your starting point.
- To get back to the starting point, always turn in the direction of the arrow.
- The V800 also shows the bearing and the direct distance (beeline) between you and the starting point.

When in unfamiliar surroundings, always keep a map at hand in case the V800 loses the satellite signal or the battery runs out.

ROUTE GUIDANCE

The route guidance feature guides you along routes that you have recorded in previous sessions or routes that other Flow web service users have recorded and shared. The route can be started from the start point or the end point. You can also navigate to the nearest point of the route.

You must first go to a point on your route in order for the guidance to start. You can choose to go to the route start point, route end point or nearest route point (original direction or reverse direction). When the route has been reached, your V800 guides you all the way through the route. Guidance on the display keeps you on the right track during your session. If you go off route, V800 will let you know and alert you with sound and vibration.

Guidance on the Display

- The circle shows your location (If the circle is empty you are off the route)
- The arrow shows the correct direction
- More of the route is shown as you as proceed
- Distance left

Adding a Route to V800

To add a route to your V800, you must save it as a favorite in the Flow web service **Explore** view or in the analysis view of your training session, and sync it to your V800.

For more information on favorites, see "Favorites" on page 41

For information on starting a session with route guidance, see "Start a Training Session" on page 44

RACE PACE

Race pace feature helps you to keep a steady pace and achieve your target time for a set distance. Define a target time for the distance, for example, 45 minutes for a 10 kilometer run. During the training session the target pace/speed is compared with training information. You can follow up on how far behind or ahead you are, compared to your pre-set target. You can also check what is the required steady pace/speed in order to meet your set target. Race pace can be set on V800, or you can also set a race pace target in the Flow web service.

For information on starting a session with Race Pace, see "Start a Training Session" on page 44

BAROMETER

The barometer features include:

- · Altitude, ascent and descent
- Temperature during training (can be viewed on the display)

V800 measures altitude with an atmospheric air pressure sensor and converts the measured air pressure into an altitude reading. This is the most accurate way to measure altitude and altitude changes (ascent / descent) after calibration. Ascended and descended are shown in meters/feet.

To make sure that the altitude remains accurate, it needs to be calibrated whenever a reliable reference, such as a peak or a topographic map, is available or when at sea level. Calibration can also be set to automatic. This is especially useful if a training session is always started in the same environment. Pressure variations due to weather conditions, or indoor air-conditioning, may affect altitude readings.

The temperature shown is the temperature of your V800. When wearing V800 on your wrist, your body heat affects the temperature reading. To get an accurate air temperature reading, take V800 off your wrist for 15-20 minutes.

Altitude is automatically calibrated with GPS, and the altitude will be shown in gray until it is calibrated. To get the most accurate altitude readings, it is recommended to always manually calibrate altitude when you know your current altitude. Manual calibration can be done in the pre-training view or in the training view quick menu. For more information, see "Quick Menu" on page 35

SMART COACHING

Whether it's assessing your day-to-day fitness levels, creating individual training plans, working out at the right intensity or receiving instant feedback, Smart Coaching offers a choice of unique, easy-to-use features, personalized to your needs and designed for maximum enjoyment and motivation when training.

V800 includes the following Smart Coaching features:

- Training Load
- Recovery status based on Training Load and 24/7 activity
- Training Benefit
- Jump Test
- Fitness Test
- Orthostatic Test
- Running Index
- · Heart rate zones
- Smart calories

TRAINING LOAD

Training load is textual feedback on the strenuousness of a single training session. Training load calculation is based on the consumption of critical energy sources (carbohydrates and proteins) during exercise. It makes the loads of different types of training sessions comparable with each other. To enable a more accurate comparison between sessions, we have converted your training load into an approximate recovery need estimation.

Training load takes into consideration different factors which affect your training load and estimated recovery need. These include HR_{sit} , HR_{max} , VO_{2max} , sex, age, height, weight and your training background. Your aerobic and anaerobic thresholds (can be set in the Flow web service), heart rate during training and the duration of your session also affect the calculation. In addition by applying sport-specific factor, the strenuousness of the sport performed is reflected in your in training load and recovery need.



After each training session in the training summary, you will receive a description of your training load and the estimated time needed to recover from the session.

Training Load	
Extreme	> 49 h
Very demanding	25 – 48 h
Demanding	13 - 24 h
Reasonable	7 – 12 h
Mild	0 - 6h

Check the estimated recovery needs for the different Training Loads from this chart.


See a more detailed visual interpretation of your training load and recovery in the Flow web service.

RECOVERY STATUS

The recovery status feature keeps track of your cumulative load – that is, intensity, volume and frequency of your training and activity – taking your training background into account. Your recovery status combines your training load with the data of the activities you do every day. It estimates your recovery status and how long it takes for you to recover. It is a tool that helps you avoid over and under training and adjust your training plans, together with other tools such as the orthostatic test.

Your recovery status is based on your cumulative training load, daily activity and resting from the past 8 days. The most recent training sessions and activity are weighted more than earlier ones, therefore they have the biggest effect on your recovery status. Your activity outside training sessions is tracked with an internal 3D accelerometer that records your wrist movements. It analyzes the frequency, intensity and irregularity of your movements together with your physical information, allowing you to see how active you are outside your training sessions. By combining your daily activity with your training load you get a true picture of your required recovery status. Continuous monitoring of your recovery status will help you recognize personal limits, avoid over or under training, and adjust training intensity and duration according to your daily and weekly targets.

To get the most accurate recovery status information, wear a heart rate sensor when training.

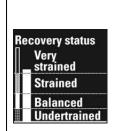

Very strained

"Very strained" means that you have been training hard lately and your cumulative load is very high. Over time this will improve your fitness and performance. You just need to give yourself enough time to fully recover before your next heavy training period or competition.

Strained

"Strained" shows that your training load has cumulated and become high. This may also mean that you're not fully recovered from your past training and activity. Improving fitness and performance requires strenuous training every now and then, but also time to recover well.

Balanced

"Balanced" tells you that your recent training and the time you need to recover from it are in balance. When you devote enough time for recovery, you can make sure you get the most out of your training.

Undertrained

"Undertrained" means that you have recently been training less than normally. Perhaps you need some extra time to recover due to an illness, stress from everyday life or change of focus in your training plan. Please remember, though, that if you cut down your training load for weeks in a row without careful planning, some of the training benefits you have already gained may diminish.



Shows you when you will reach the next recovery level.

View Your Recovery Status

Tap the display in time view

or

• Go to Status > Recovery status in the main menu

View Your Daily Calories

See how many calories you have burnt through training, activity and BMR (Basal metabolic rate: the minimum metabolic activity required to maintain life).

• Tap the display twice in time view

or

• Go to **Today's activity** in the main menu, and press START in the **Activity** view.

A more detailed view of your daily activity including activity intensity, active time, inactivity, steps/distance, calories, and sleep time/index is available in the Flow app and Flow web service.

ACTIVITY TRACKING

V800 tracks your activity with an internal 3D accelerometer that records your wrist movements. It analyzes the frequency, intensity and irregularity of your movements together with your physical information, allowing you to see how active you are outside your training sessions.

You'll get a daily activity goal and guidance on how to reach your goal. V800 also reminds you to get up and move when you've been inactive for too long. View the data on your V800 or Polar Flow App.

The daily activity goal you get from Polar V800 is based on the global physical activity recommendations for moderate and vigorous intensity activities, as well as research findings on the negative health effects that too much sitting may have on you. The daily activity goal V800 gives you may in fact be slightly more than most recommendations state. In addition to one hour of moderate intensity activity, also the low intensity activity plays an important role in fulfilling V800's daily activity goal requirements.

Your daily activity goal is set based on your physical settings and your typical day. If you are an office worker, for instance, you would be expected to reach about four hours of low intensity activity during an ordinary day. For people who stand and walk a lot during their working hours, V800 has higher expectations.

ACTIVITY DATA

V800 gradually fills up an activity bar to indicate your progress towards your daily goal. You can view the activity bar in **Today's activity** and, optionally, in time view (change the watch face by pressing and holding UP).

In **Today's activity** you can see how active your day has been so far and get guidance on how to reach you goal.

Activity

- **Active time**: Active time tells you the cumulative time of body movements that are good for your body and health.
- **Calories**: Shows how many calories you have burned through training, activity and BMR (Basal metabolic rate: the minimum metabolic activity required to maintain life).
- **Steps**: Steps you have taken so far. The amount and type of body movements are registered and turned into an estimation of steps. A basic recommendation is to aim for 10 000 steps or more a day.

Press START in the **Activity** view to see how your calories are split between training, activity and BMR.

• **To go**: Your V800 gives you options for reaching your daily activity goal. It tells you how much longer you need to be active if you choose low, medium or high intensity activities. You have one goal, but a number of ways to achieve it. The daily activity goal can be reached at low, medium or high intensities. In the V800, 'up' means low intensity, 'walking' means medium intensity, and 'jogging' means high intensity. You can find more examples for low, medium and high intensity activities at the Polar Flow web service and choose own way of reaching your goal.

Inactivity alert

V800 spots if you're being inactive for too long during your day.

If you've been still for 55 minutes, **It's time to move** is shown. Stand up and find your own way to be active. If you're not active in the next five minutes you'll get an inactivity stamp.

You can set the alert on or off in **Settings** > **General Settings** > **Inactivity alert**.

Both the Polar Flow app and the Polar Flow web service will show you how many inactivity alerts you have received. This way you can check back on your daily routine and make changes toward a more active life.

Sleep information in the Flow web service and Flow app

If you wear your V800 at night it will track your sleep. No sleep mode activation is needed. V800 will automatically detect from your wrist movements that you're sleeping.

Your sleep time is the longest continuous rest time that takes place within 24 hours starting from 18:00/6pm to next day's 18:00/6pm. While less than 1 hour breaks to your sleep do not stop sleep calculation, they are not calculated into sleep time. Breaks longer than 1 hour discontinue sleep time calculation.

Sleep time, and its quality (restful / restless) is shown at Flow web service and Flow app after V800 is synced. The periods when you sleep peacefully and don't move a lot are calculated as restful sleep. Periods when you move and change your position are calculated as restless sleep. Instead of simply summing up all the immobile periods, the algorithm gives more weight to long than short immobile periods. The percentage of restful sleep compares the time you slept restfully with the total sleeping time. Restful sleep is highly individual and should be interpreted together with sleep time.

Knowing the amount of restful and restless sleep gives you a look into how you sleep at night and if it's affected by any changes in your daily life. This may help you in finding ways to improve your sleep and feel well rested during the day.

Activity data in Flow App

With the Polar Flow mobile app you can follow and analyze your activity data on the go and have your data synced wirelessly from your V800 to the Polar Flow service.

TRAINING BENEFIT

The Training Benefit feature helps you better understand the effects of your training. This feature requires the use of the heart rate sensor. After each training session you get textual feedback on your training session providing that you have trained at least a total of 10 minutes in the heart rate zones.

HOW DOES IT WORK?

Training Benefit feedback is based on heart rate zones. It reads into how much time you spend and how many calories you burn in each zone.

Motivating feedback that's delivered straight to you immediately after exercise is something we can all benefit from. So if you want to know the effect of different training sessions, this feature will tell you

exactly what you need to know. You get a quick overview after each session, and for more detailed feedback, you can either check your training file or you can get further in-depth analysis at <u>polar.com/flow</u>. The descriptions of different training benefit options are listed in the table below.

Feedback	Training benefit
Maximum training+	What a session! You improved your sprint speed and the nervous system of your muscles, which make you more efficient. This session also increased your resistance to fatigue.
Maximum training	What a session! You improved your sprint speed and the nervous system of your muscles, which make you more efficient.
Maximum & Tempo train- ing	What a session! You improved your speed and efficiency. This session also significantly developed your aerobic fitness and your ability to sustain high intensity effort for longer.
Tempo & Maximum train- ing	What a session! You significantly improved your aerobic fitness and your ability to sustain high intensity effort for longer. This session also developed your speed and efficiency.
Tempo training+	Great pace in a long session! You improved your aerobic fitness, speed, and ability to sustain high intensity effort for longer. This session also increased your resistance to fatigue.
Tempo training	Great pace! You improved your aerobic fitness, speed, and ability to sustain high intensity effort for longer.
Tempo & Steady state training	Good pace! You improved your ability to sustain high intensity effort for longer. This session also developed your aerobic fitness and the endurance of your muscles.
Steady state & Tempo training	Good pace! You improved your aerobic fitness and the endurance of your muscles. This session also developed your ability to sustain high intensity effort for longer.
Steady state training+	Excellent! This long session improved the endurance of your muscles and your aerobic fitness. It also increased your resistance to fatigue.
Steady state training	Excellent! You improved the endurance of your muscles and your aerobic fitness.
Steady state & Basic train- ing, long	Excellent! This long session improved the endurance of your muscles and your aerobic fitness. It also developed your basic endurance and your body's ability to burn fat during exercise.
Steady state & Basic train-	Excellent! You improved the endurance of your muscles and your aerobic

Feedback	Training benefit
ing	fitness. This session also developed your basic endurance and your body's ability to burn fat during exercise.
Basic & Steady state training, long	Great! This long session improved your basic endurance and your body's ability to burn fat during exercise. It also developed the endurance of your muscles and your aerobic fitness.
Basic & Steady state training	Great! You improved your basic endurance and your body's ability to burn fat during exercise. This session also developed the endurance of your muscles and your aerobic fitness.
Basic training, long	Great! This long, low intensity session improved your basic endurance and your body's ability to burn fat during exercise.
Basic training	Well done! This low intensity session improved your basic endurance and your body's ability to burn fat during exercise.
Recovery training	Very nice session for your recovery. Light exercise like this allows your body to adapt to your training.

JUMP TEST

There are three kinds of jump tests to choose from: squat, countermovement and continuous. The squat and countermovement tests measure your explosive strength, but in the countermovement jump test your muscles and tendons also do a pre-stretch that lets you use elastic energy, usually allowing you to jump higher. The continuous jump test measures your anaerobic power. It is especially useful for those who do sports that require anaerobic power, in other words maximal effort for short periods.

To do the Jump test, go to **Tests > Jump Test**. To perform the test you need a Polar Stride Sensor *Bluetooth*® Smart. For more information, see "Polar Stride Sensor Bluetooth® Smart" on page 88

If you haven't paired a Polar Stride Sensor *Bluetooth*® Smart with V800, **You need a Polar stride** sensor is displayed when trying to enter **Jump Test**.

Before performing any of the jump tests, make sure you have warmed up properly, especially your leg muscles. When performing any of the tests, always use the same correct jumping technique to maximize the comparability and reliability of the results.

Your latest test result is shown in **Tests > Jump test > Latest result**. Only your most recently performed test result is shown. You can view your previous results in the V800 diary. For a visual analysis of your Jump test results, go to the Flow web service and select the test from your **Diary** to view details from it.

SQUAT JUMP

The squat jump test measures explosive strength. This test is performed by starting with your knees bent in a 90 degree angle, and jumping vertically as high as possible from that position. Hands should be held on the hips to avoid the effect of arm swinging to the test. Knees and ankles should be extended at take-off, and they should be in a similar extended position when landing on the ball of the foot.

In the test you perform three attempts of the squat jump and the best attempt is the test result. Give yourself a short recovery period between attempts to ensure maximal effort on every attempt.

Performing the Squat Jump

Wear the Polar *Bluetooth*® Smart Stride Sensor, and choose **Jump test > Squat**, and press START. **Searching for stride sensor** is displayed. **Squat jumps Start now!** is shown when you can start the test.


- 1. Stand with your hands on your hips and knees bent in a 90 degree angle. Stay still for a few seconds.
- 2. Jump vertically without any countermovement.
- 3. Land with both feet with your legs straight and ankles extended.
- 4. Perform three attempts of the squat jump. Give yourself a short recovery period between attempts to ensure maximal effort on every attempt.

1 It is important not to perform any kind of countermovement during the squat jump test.



During the test you will see the number jumps performed (1/3, 2/3 or 3/3), and the height of your last jump e.g. 53 cm.

Test Results

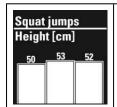

After the test you will see the heights of all three of your jumps

COUNTERMOVEMENT JUMP

The countermovement jump test measures explosive strength. This test is performed by starting in an upright standing position and squatting down to a 90 degree leg bend position before immediately jumping vertically as high as possible. Hands should be held on the hips to avoid the effect of arm

swinging to the test. Knees and ankles should be extended at take-off, and they should be in a similar extended position when landing on the ball of the foot.

In the test you perform three attempts of the countermovement jump and the best attempt is the test result. Give yourself a short recovery period between attempts to ensure maximal effort on every attempt.

Performing the Countermovement Jump


Wear the Polar *Bluetooth*® Smart Stride Sensor, and choose **Jump test > Countermovement**, and press START. **Searching for stride sensor** is displayed. **Countermovement Start now!** is shown when you can start the test.

- 1. Stand upright with your hands on your hips.
- 2. Squat rapidly to about a 90 degree knee angle, and immediately jump vertically.
- 3. Land with both feet with your legs straight and ankles extended.
- 4. Perform three attempts of the countermovement jump. Give yourself a short recovery period between attempts to ensure maximal effort on every attempt.



During the test you will see the number jumps performed (1/3, 2/3 or 3/3), and the height of your last jump e.g. 59 cm.

Test Results

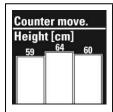

After the test you will see the heights of all three of your jumps.

CONTINUOUS JUMP

The continuous jump test measures your anaerobic power. This test is especially useful for those who do sports that require anaerobic power, in other words maximal effort for short periods. The aim of the continuous jump test is to perform the highest number of jumps with maximum height in the set time period.

The continuous jump test is performed by squatting down until the knees are bent in a 90 degree angle, and then rapidly jumping vertically as high as possible, and landing with both feet at the same time, bending the knees, and repeating the vertical jumping movement until the set time period is over. The test should be started with maximal effort, jumping as high as possible as rapidly as possible. As the test

proceeds you will naturally become fatigued but keep maximal effort throughout the test. In the Flow web service you can analyze your test jump by jump, and see how your jump height decreased during the test.

Performing the Continuous Jump

Before performing the continuous jump test, set the duration of test. Choose **Jump test > Set duration of cont. test** The duration can be set to **15 seconds, 30 seconds, 60 seconds** or **Set other duration**. If you choose **Set other duration**, you can set the duration anywhere from 5 seconds to 300 seconds.


Wear the Polar *Bluetooth*® Smart Stride Sensor, and choose **Jump test > Continuous**, and press START. **Searching for stride sensor** is displayed. **Continuous jumps Start now!** is shown when you can start the test.

- 1. Stand upright with your hands on your hips.
- 2. Squat until your knees are in a 90 degree leg bend position, and immediately jump vertically.
- 3. Land with both feet with your legs straight and ankles extended.
- 4. Repeat the jump movement continuously until the test is over (you will be notified with audio and vibration when the test is over).



During the test you will see the number of jumps performed, and the time remaining .

Test Results

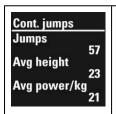

After the test you will see the number of jumps performed, the average height of your jumps and the average power per kilogram/pound.

FITNESS TEST

The Polar Fitness Test is an easy, safe and quick way to estimate your aerobic (cardiovascular) fitness at rest. The result, Polar OwnIndex, is comparable to maximal oxygen uptake (VO_{2max}), which is commonly used to evaluate aerobic fitness. Your long-term training background, heart rate, heart rate variability at rest, gender, age, height, and body weight all influence OwnIndex. The Polar Fitness Test is developed for use by healthy adults.

Aerobic fitness relates to how well your cardiovascular system works to transport oxygen to your body. The better your aerobic fitness, the stronger and more efficient your heart is. Good aerobic fitness has

many health benefits. For example, it helps in decreasing the risk of high blood pressure and your risk of cardiovascular diseases and stroke. If you want to improve your aerobic fitness it takes, on average, six weeks of regular training to see a noticeable change in your OwnIndex. Less fit individuals see progress even more rapidly. The better your aerobic fitness, the smaller the improvements in your OwnIndex.

Aerobic fitness is best improved by training types that use large muscle groups. Such activities include running, cycling, walking, rowing, swimming, skating, and cross-country skiing. To monitor your progress, start by measuring your OwnIndex a couple of times during the first two weeks in order to get a baseline value, and then repeat the test approximately once a month.

To make sure the test results are reliable, the following basic requirements apply:

- You can perform the test anywhere at home, at the office, at a health club provided the testing environment is peaceful. There should be no disturbing noises (e.g. television, radio, or telephone) and no other people talking to you.
- Always take the test in the same environment and at the same hour.
- Avoid eating a heavy meal or smoking 2-3 hours prior to testing.
- Avoid heavy physical exertion, alcohol, and pharmaceutical stimulants on the test day and the previous day.
- You should be relaxed and calm. Lie down and relax for 1-3 minutes before starting the test.

BEFORE THE TEST

Wear your heart rate sensor. For more information, see "Wear Heart Rate Sensor" on page 43

Before starting the test, make sure your physical settings including training background are accurate in **Settings > Physical settings**

PERFORMING THE TEST

To perform the fitness test, go to Tests > Fitness Test > Relax and start the test.

- **Searching for heart rate** is displayed. When heart rate is found, a heart rate graph, your current heart rate and **Lie down & relax** is shown on the display. Stay relaxed and limit body movements and communication with other people.
- You can interrupt the test in any phase by pressing BACK. **Test canceled** is displayed.

If V800 cannot receive your heart rate signal, the message **Test failed** is displayed. In which case, you should check that the heart rate sensor electrodes are wet and that the textile strap fits snugly.

TEST RESULTS

When the test is over, you hear two beeps along with a description of your fitness test result and your estimated VO_{2max} is displayed.

Update to VO2max to physical settings? is displayed.

- Select **Yes** to save the value to your **Physical settings**.
- Select No only if you know your recently measured VO_{2max} value, and if it differs more than one fitness level class from the result.

Your latest test result is shown in **Tests > Fitness test > Latest result**. Only your most recently performed test result is shown.

For a visual analysis of your Fitness test results, go to the Flow web service and select the test from your Diary to view details from it.

Fitness Level Classes

Men

Age / Years	Very low	Low	Fair	Moderate	Good	Very good	Elite
20-24	< 32	32-37	38-43	44-50	51-56	57-62	> 62
25-29	< 31	31-35	36-42	43-48	49-53	54-59	> 59
30-34	< 29	29-34	35-40	41-45	46-51	52-56	> 56
35-39	< 28	28-32	33-38	39-43	44-48	49-54	> 54
40-44	< 26	26-31	32-35	36-41	42-46	47-51	> 51
45-49	< 25	25-29	30-34	35-39	40-43	44-48	> 48
50-54	< 24	24-27	28-32	33-36	37-41	42-46	> 46
55-59	< 22	22-26	27-30	31-34	35-39	40-43	> 43
60-65	< 21	21-24	25-28	29-32	33-36	37-40	> 40

Women

Age / Years	Very low	Low	Fair	Moderate	Good	Very good	Elite
20-24	< 27	27-31	32-36	37-41	42-46	47-51	> 51
25-29	< 26	26-30	31-35	36-40	41-44	45-49	> 49
30-34	< 25	25-29	30-33	34-37	38-42	43-46	> 46
35-39	< 24	24-27	28-31	32-35	36-40	41-44	> 44
40-44	< 22	22-25	26-29	30-33	34-37	38-41	> 41
45-49	< 21	21-23	24-27	28-31	32-35	36-38	> 38
50-54	< 19	19-22	23-25	26-29	30-32	33-36	> 36

Age / Years	Very low	Low	Fair	Moderate	Good	Very good	Elite
55-59	< 18	18-20	21-23	24-27	28-30	31-33	> 33
60-65	< 16	16-18	19-21	22-24	25-27	28-30	> 30

The classification is based on a literature review of 62 studies where VO_{2max} was measured directly in healthy adult subjects in the USA, Canada and 7 European countries. Reference: Shvartz E, Reibold RC. Aerobic fitness norms for males and females aged 6 to 75 years: a review. Aviat Space Environ Med; 61:3-11, 1990.

ORTHOSTATIC TEST

Orthostatic test is a generally used tool for monitoring the balance between training and recovery. It is based on the training-induced changes in the function of your autonomic nervous system. Orthostatic test results are affected by several external factors, such as mental stress, sleep, latent illness, environmental changes (temperature, altitude), and others. Long term follow-up helps you to optimize your training and prevent overtraining.

Orthostatic test is based on the measurement of heart rate and heart rate variability. Changes in heart rate and heart rate variability reflect the changes in autonomic regulation of the cardiovascular system. During the test HRrest, HRstand and HRpeak are measured. Heart rate and heart rate variability measured during orthostatic test are good indicators of disturbances in the autonomic nervous system, for example fatigue or overtraining. However, heart rate responses to fatigue and overtraining are always individual, and require longer term follow-up.

BEFORE THE TEST

When you perform the test for the first time, six baseline tests should be conducted over a period of two weeks to determine your personal baseline value. These baseline measurements should be taken during two typical basic training weeks, not during heavy training weeks. The baseline measurements should include tests taken both after training days and after recovery days.

After the baseline recordings, you should continue to perform the test 2-3 times a week. Test yourself weekly in the morning following both a recovery day and a heavy training day (or a series of heavy training days). An optional third test can be performed after a normal training day. The test may not provide reliable information during detraining or in a very irregular training period. If you take a break from exercise for 14 days or longer, you should consider resetting your long-term averages and perform the baseline tests again

The test should always be taken in standardized/similar conditions in order to get the most reliable results. It is recommended that you take the test in the morning before breakfast. The following basic requirements apply:

- Wear the heart rate sensor.
- You should be relaxed and calm.

- You can be seated in a relaxed position or lying in bed. The position should always be the same when you do the test.
- The test can take place anywhere at home, in the office, at a health club as long as the test environment is peaceful. There should be no disturbing noises (for example, television, radio or telephone) or other people talking to you.
- Avoid eating, drinking and smoking 2-3 hours prior to the test.
- It is recommended to perform the test regularly and at the same time of day to get comparable test results, preferably in the morning after waking up.

PERFORMING THE TEST

Choose **Tests** > **Orthostatic test** > **Relax and start the test**. **Searching for heart rate** is displayed. When heart rate is found **Lie down & relax** is shown on the display.

- Do not move during this first part of the test, which lasts 3 minutes.
- After 3 minutes, the wrist unit will beep and **Stand up** is displayed. Stand up and remain standing still for 3 minutes.
- After 3 minutes, the wrist unit will beep again and the test is finished.
- You can interrupt the test in any phase by pressing BACK. **Test canceled** is displayed.

If V800 cannot receive your heart rate signal, the message **Test failed** is displayed. In which case, you should check that the heart rate sensor electrodes are wet and that the textile strap fits snugly.

TEST RESULTS

As a result you see your HRrest, HRstand and HRpeak values compared with the average of your previous results.

Your latest test result is shown in **Tests > Orthostatic test > Latest result**. Only your most recently performed test result is shown.

In the Flow web service you can follow your test results in the long-term. For a visual analysis of your Orthostatic test results, go to the Flow web service and select the test from your Diary to view details from it.

RUNNING INDEX

Running Index offers an easy way to monitor running performance changes. A running index value is an estimate of maximal aerobic running performance, which is influenced by aerobic fitness and running economy. By recording your Running Index over time, you can monitor progress. Improvement means that running at a given pace requires less of an effort, or that your pace is faster at a given level of exertion.

In V800, Running Index takes the effect of uphills and downhills into account. At a given pace, running uphill is physiologically more stressful than running on a level surface, and running downhill is physiologically less stressful than running on a level surface.

To receive the most accurate information on your performance, make sure you have set your HR_{max} and HR_{rest} values.

Running Index is calculated during every training session when heart rate and the GPS function is on / Stride Sensor *Bluetooth*® Smart is in use, and when the following requirements apply:

- Sport profile used is a running type sport (Running, Road Running, Trail running etc.)
- Speed should be 6 km/h / 3,75 mi/h or faster and duration 12 minutes minimum
- Altitude data must be available (otherwise up- and downhills are not taken into account)
- Your heart rate must be above 40% of your HRR (heart rate reserve) value. HRR is the difference between maximum heart rate and resting heart rate.
- If you use a stride sensor, it must be calibrated. If you use GPS it must be set to High accuracy.

To receive the most accurate information on your performance, make sure you have set your HR_{max} and HR_{rest} values. Calculation begins when you start recording the session. During a session, you may stop twice at traffic lights, for example, without interrupting the calculation. After your session, V800 displays a Running Index value and stores the result in the training summary.

Compare your result to the table below.

SHORT-TERM ANALYSIS

Men

Age / Years	Very low	Low	Fair	Moderate	Good	Very good	Elite
20-24	< 32	32-37	38-43	44-50	51-56	57-62	> 62
25-29	< 31	31-35	36-42	43-48	49-53	54-59	> 59
30-34	< 29	29-34	35-40	41-45	46-51	52-56	> 56
35-39	< 28	28-32	33-38	39-43	44-48	49-54	> 54
40-44	< 26	26-31	32-35	36-41	42-46	47-51	> 51
45-49	< 25	25-29	30-34	35-39	40-43	44-48	> 48
50-54	< 24	24-27	28-32	33-36	37-41	42-46	> 46
55-59	< 22	22-26	27-30	31-34	35-39	40-43	> 43
60-65	< 21	21-24	25-28	29-32	33-36	37-40	> 40

Women

Age / Years	Very low	Low	Fair	Moderate	Good	Very good	Elite
20-24	< 27	27-31	32-36	37-41	42-46	47-51	> 51
25-29	< 26	26-30	31-35	36-40	41-44	45-49	> 49
30-34	< 25	25-29	30-33	34-37	38-42	43-46	> 46
35-39	< 24	24-27	28-31	32-35	36-40	41-44	> 44
40-44	< 22	22-25	26-29	30-33	34-37	38-41	> 41
45-49	< 21	21-23	24-27	28-31	32-35	36-38	> 38
50-54	< 19	19-22	23-25	26-29	30-32	33-36	> 36
55-59	< 18	18-20	21-23	24-27	28-30	31-33	> 33
60-65	< 16	16-18	19-21	22-24	25-27	28-30	> 30

The classification is based on a literature review of 62 studies where VO_{2max} was measured directly in healthy adult subjects in the USA, Canada and 7 European countries. Reference: Shvartz E, Reibold RC. Aerobic fitness norms for males and females aged 6 to 75 years: a review. Aviat Space Environ Med; 61:3-11, 1990.

There may be some daily variation in the Running Indexes. Many factors influence Running Index. The value you receive on a given day is affected by changes in running circumstances, for example different surface, wind or temperature, in addition to other factors.

LONG-TERM ANALYSIS

The single Running Index values form a trend that predicts your success in running certain distances.

The following chart estimates the duration that a runner can achieve in certain distances when performing maximally. Use your long-term Running Index average in the interpretation of the chart. The prediction is best for those Running Index values that have been received at speed and running circumstances similar to the target performance.

Running	Cooper test	5 km (h:m-	10 km (h:m-	21.098 km	42.195 km
Index	(m)	m:ss)	m:ss)	(h:mm:ss)	(h:mm:ss)
36	1800	0:36:20	1:15:10	2:48:00	5:43:00
38	1900	0:34:20	1:10:50	2:38:00	5:24:00
40	2000	0:32:20	1:07:00	2:29:30	5:06:00

Running Index	Cooper test (m)	5 km (h:m- m:ss)	10 km (h:m- m:ss)	21.098 km (h:mm:ss)	42.195 km (h:mm:ss)
42	2100	0:30:40	1:03:30	2:21:30	4:51:00
44	2200	0:29:10	1:00:20	2:14:30	4:37:00
46	2300	0:27:50	0:57:30	2:08:00	4:24:00
48	2400	0:26:30	0:55:00	2:02:00	4:12:00
50	2500	0:25:20	0:52:40	1:57:00	4:02:00
52	2600	0:24:20	0:50:30	1:52:00	3:52:00
54	2700	0:23:20	0:48:30	1:47:30	3:43:00
56	2800	0:22:30	0:46:40	1:43:30	3:35:00
58	2900	0:21:40	0:45:00	1:39:30	3:27:00
60	3000	0:20:50	0:43:20	1:36:00	3:20:00
62	3100	0:20:10	0:41:50	1:32:30	3:13:00
64	3200	0:19:30	0:40:30	1:29:30	3:07:00
66	3300	0:18:50	0:39:10	1:26:30	3:01:00
68	3350	0:18:20	0:38:00	1:24:00	2:55:00
70	3450	0:17:50	0:36:50	1:21:30	2:50:00
72	3550	0:17:10	0:35:50	1:19:00	2:45:00
74	3650	0:16:40	0:34:50	1:17:00	2:40:00
76	3750	0:16:20	0:33:50	1:14:30	2:36:00
78	3850	0:15:50	0:33:00	1:12:30	2:32:00

HEART RATE ZONES

Polar heart rate zones introduce a new level of effectiveness in heart rate-based training. Training is divided into five heart rate zones based on percentages of maximum heart rate. With heart rate zones, you can easily select and monitor training intensities.

Target zone	Intensity % of HRmax*, bpm	Example dur- ations	Training effect
MAXIMUM	90-100% 171-190	less than 5	Benefits: Maximal or near

Target zone	Intensity % of HRmax*, bpm	Example dur- ations	Training effect
54	bpm	minutes	maximal effort for breathing and muscles. Feels like: Very exhausting for breathing and muscles. Recommended for: Very experienced and fit athletes. Short intervals only, usually in final preparation for short events.
HARD	80-90% 152-172 bpm	2–10 minutes	Benefits: Increased ability to sustain high speed endurance. Feels like: Causes muscular fatigue and heavy breathing. Recommended for: Experienced athletes for year-round training, and for various durations. Becomes more important during pre competition season.
MODERATE	70-80% 133-152 bpm	10–40 minutes	Benefits: Enhances general training pace, makes moderate intensity efforts easier and improves efficiency. Feels like: Steady, controlled, fast breathing. Recommended for: Athletes training for events, or looking for performance gains.
LIGHT	60-70% 114-133 bpm	40-80 minutes	Benefits: Improves general base fitness, improves recovery and

Target zone	Intensity % of HRmax*, bpm	Example dur- ations	Training effect
			boosts metabolism.
			Feels like: Comfortable and
			easy, low muscle and
&			cardiovascular load.
			Recommended for: Everybody
2 🗸			for long training sessions during
			base training periods and for
			recovery exercises during
			competition season.
VERY LIGHT			Benefits: Helps to warm up and cool down and assists recovery.
			cool down and assists recovery.
41	50 600/ 404 444		Feels like: Very easy, little strain.
6	50-60% 104-114 bpm	20-40 minutes	
	βριτι		December of the Control
			Recommended for: For
West lives			recovery and cool-down, throughout training season.
			throughout training season.

*HR_{max} = Maximum heart rate (220-age). Example: 30 years old, 220–30=190 bpm.

Training in heart rate zone 1 is done at a very low intensity. The main training principle is that performance improves when recovering after, and not only during training. Accelerate the recovery process with very light intensity training.

Training in heart rate zone 2 is for endurance training, an essential part of any training program. Training sessions in this zone are easy and aerobic. Long-duration training in this light zone results in effective energy expenditure. Progress will require persistence.

Aerobic power is enhanced in heart rate zone 3. The training intensity is higher than in zones 1 and 2, but still mainly aerobic. Training in zone 3 may, for example, consist of intervals followed by recovery. Training in this zone is especially effective for improving the efficiency of blood circulation in the heart and skeletal muscles.

If your goal is to compete at top potential, you will have to train in heart rate zones 4 and 5. In these zones, you exercise anaerobically in intervals of up to 10 minutes. The shorter the interval, the higher the intensity. Sufficient recovery between intervals is very important. The training pattern in zones 4 and 5 is designed to produce peak performance.

The Polar target heart rate zones can be personalized in the sport profile settings in the Flow web service by using a laboratory measured HR_{max} value, or by taking a field test to measure the value yourself. When training in a target heart rate zone, try to make use of the entire zone. The mid-zone is a good target, but keeping your heart rate at that exact level all the time is not necessary. Heart rate gradually adjusts to training intensity. For instance, when crossing from heart rate target zone 1 to 3, the circulatory system and heart rate will adjust in 3-5 minutes.

Heart rate responds to training intensity depending on factors such as fitness and recovery levels, as well as environmental factors. It is important to look out for subjective feelings of fatigue, and to adjust your training program accordingly.

SMART CALORIES

The most accurate calorie counter on the market calculates the number of calories burned. The energy expenditure calculation is based on:

- Body weight, height, age, gender
- Individual maximum heart rate (HR_{max})
- · Heart rate during training
- Individual resting heart rate value (HR_{rest})
- Individual maximal oxygen uptake (VO2_{max})
- Altitude

For best possible Smart Calories information accuracy, please give V800 your measured VO2_{max} and HR_{max} values if you have them. If not, use the value given by Polar Fitness test.

SMART NOTIFICATIONS

The Smart Notifications feature allows you to get notifications from your phone to your Polar device. Your Polar device notifies you if you get an incoming call or receive a message (for example an SMS or a WhatsApp message). It also notifies you about the calendar events you have on your phone's calendar. To use the Smart Notifications feature, you need to have the Polar Flow mobile app for iOS or Android, and your Polar device needs to be paired with the app.

For detailed instructions on using Smart notifications, see the support document <u>Smart Notifications</u> (Android) or <u>Smart Notifications</u> (iOS).

CADENCE FROM THE WRIST

Cadence from the wrist gives you the option to get your running cadence without a separate stride sensor. Your cadence is measured with a built-in accelerometer from your wrist movements. The get this feature you need to have at least firmware version 1.7 on your V800. Please note that when using a stride sensor cadence will always be measured with it.

Cadence from the wrist is available in the following running type sports:

 Walking, Running, Jogging, Road running, Trail running, Treadmill running, Track and field running and Ultra running

It is also available in the following multisport profiles when doing the running leg:

• Triathlon, Duathlon, Off-road triathlon and Off-road duathlon

To see your cadence during a training session, add cadence to the training view of the sport profile you use when running. This can be done in the Flow web service Sport Profiles.

POLAR RUNNING PROGRAM

Polar Running program is a personalized program based on your fitness level, designed to make sure that you train right and avoid overreaching. It's intelligent, and adapts based on your development, and lets you know when it might be a good idea to cut back a little and when to step it up a notch. Each program is tailored for your event, taking your personal attributes, training background and preparation time into account. The program is free, and available in the Polar Flow web service at www.polar.com/flow.

Programs are available for 5k, 10k, half marathon and marathon events. Each program has three phases: Base building, Build-up and Tapering. These phases are designed to gradually develop your performance, and make sure you're ready on race day. Running training sessions are divided into five types: easy jog, medium run, long run, tempo run and interval. All sessions include warm-up, work, and cool-down phases for optimal results. In addition, you can choose to do strength, core, and mobility exercises to support your development. Each training week consists of two to five running sessions, and the total running training session duration per week varies from one to seven hours depending on your fitness level. The minimum duration for a program is 9 weeks, and the maximum is 20 months.

Learn more about the Polar Running Program in this <u>in-depth guide</u>. Or read more about how to <u>get started with the Running Program</u>.

CREATE A POLAR RUNNING PROGRAM

- 1. Log into the Flow web service at www.polar.com/flow.
- 2. Choose **Programs** from the Tab.
- 3. Choose your event, name it, set the event date, and when you wish to start the program.
- 4. Fill in the physical activity level questions.*
- 5. Choose if you want to include supporting exercises in the program.
- 6. Read and fill in the physical activity readiness questionnaire.
- 7. Review your program, and adjust any settings if necessary.
- 8. When you're done, choose Start program.

^{*}If four weeks of training history is available, these will be pre-filled.

START A RUNNING TARGET

Before starting a session, make sure you've synced your training session target to your device. The sessions are synced to your device as training targets, and you start them from your **Diary**. Follow guidance on your device throughout your session.

- 1. On your device, go to **Diary**.
- 2. Choose a day to view the scheduled target.
- 3. Choose the target, and then choose the sport profile.
- 4. Press START, and follow the guidance.

If you want to do a target scheduled for another day, you can – just choose a day from your **Diary**, and start the session scheduled for that day.

FOLLOW YOUR PROGRESS

Sync your training results from your device to the Flow web service via the USB cable or Flow app. Follow your progress from the **Programs** tab. You'll see an overview of your current program, and how you've progressed.

SPEED ZONES

With the speed/pace zones you can easily monitor speed or pace during your session, and adjust your speed/pace to achieve the targeted training effect. The zones can be used to guide the efficiency of your training during sessions, and help you mix up your training with different training intensities for optimal effects.

SPEED ZONES SETTINGS

The speed zone settings can be adjusted in the Flow web service. They can be turned on or off in the sport profiles they are available in. There are five different zones, and zone limits can be manually adjusted or you can use the default ones. They are sport specific, allowing you to adjust the zones to best suit each sport. The zones are available in running sports (including team sports that involve running), cycling sports as well as rowing and canoeing.

Default

If you choose **Default**, you cannot change the limits. The default zones are an example of speed/pace zones for a person with a relatively high fitness level.

Free

If you choose **Free**, all limits can be changed. For example, if you have tested your actual thresholds, such as anaerobic and aerobic thresholds, or upper and lower lactate thresholds, you can train with zones based on your individual threshold speed or pace. We recommend that you set your anaerobic threshold speed and pace as the minimum for zone 5. If you also use aerobic threshold, set that as the minimum of zone 3.

TRAINING TARGET WITH SPEED ZONES

You can create training targets based on speed/pace zones. After synchronizing the targets via FlowSync, you'll receive guidance from your training device during training.

DURING TRAINING

During your training you can view which zone you are currently training in and the time spent in each zone.

AFTER TRAINING

In the training summary on V800, you'll see an overview of the time spent in each speed zone. After syncing, detailed visual speed zone information can be viewed in the Flow web service.

SPORT PROFILES

Lets you list all your favorite sports and define specific settings for each one of them. For example, you can create tailored views for each sport you do and choose what data you want to see when you train: just your heart rate or just speed and distance – whatever suits you and your training needs and requirements best.

There are six sport profiles on your V800 by default. In the Flow web service you can add new sport profiles to your sports list, as well as edit them and existing profiles. Your V800 can contain a maximum of 20 sport profiles. The number of sport profiles in the Flow web service is not limited. If you have over 20 sport profiles in the Flow web service, the first 20 in the list are transferred to your V800 when syncing.

You can change the order of your sport profiles by dragging and dropping them. Choose the sport you want to move and drag it into the place you want to put it in the list.

ADD A SPORT PROFILE

In the Flow web service:

- 1. Click your name/profile photo in the upper right corner.
- 2. Choose Sport Profiles.
- 3. Click **Add sport profile**, and choose the sport from the list.
- 4. The sport is added to your sport list.

EDIT A SPORT PROFILE

In the Flow web service:

- 1. Click your name/profile photo in the upper right corner.
- 2. Choose **Sport profiles**.
- 3. Click **Edit** under the sport you want to edit.

In each sport profile, you can edit the following information:

RELATED TO SPORT

BASICS

- Automatic lap (Can be set to duration, distance or location-based)
- Training sounds
- Speed view
- Training reminder (You will receive a message after a set duration, distance or a certain amount of calories burned)

HEART RATE

- Heart rate view (Beats per minute, % of maximum, % of heart rate reserve)
- Heart rate visible to other devices (Other compatible devices using Bluetooth ® Smart wireless technology (e.g. gym equipment) can detect your heart rate.)
- Heart rate zone settings (With the heart rate zones you can easily select and monitor training intensities. If you choose Default, you cannot change heart rate limits. If you choose Free, all limits can be changed. Default heart rate zone limits are calculated from your maximum heart rate.

RELATED TO DEVICE

TRAINING VIEWS

Choose what information you see on your training views during your sessions. You can have a total of eight different training views for each sport profile. Each training view can have a maximum of four different data fields.

Click the pencil icon on an existing view to edit it, or add a new view. You can select one to four items for your view from six categories:

Time	 Time of day Duration Lap time Last lap time Rest time (only in pool swimming)
Environment	 Altitude Total ascent Total descent Incline Temperature Current lap ascent Current lap descent
Body measurement	Heart rateAverage heart rateMaximum heart rate

	 HR avg in lap Calories ZonePointer Time in zone RR variation
Distance	DistanceLap distanceLast lap distance
Speed	Speed/paceAverage speed/paceMaximum speed/paceLap speed/pace
Cadence	 Running/Cycling cadence Average running/cycling cadence Current lap running/cycling cadence Stride length Average stride length

You can also enable or disable the cumulative HR zone view and the Back to start view from these settings.

GESTURES AND FEEDBACK

- Heart Touch
- Tap
- Automatic pause
- Vibration feedback

Please note that stride sensor settings are visible in all single sport profiles. If do not have a stride sensor, ignore this setting.

GPS AND ALTITUDE

- GPS recording rate (Power save, long session is only recommended to be used in long sessions lasting over 10 hours. When using power save mode, the GPS data is not as accurate as in high accuracy mode.)
- Altitude

When you are done with the sport profile settings, click save. To sync the settings to your V800, press synchronize in FlowSync.



Please note that in a number of indoor sports, group sports and team sports profiles the **HR visible to other devices** setting is enabled by default. This means that compatible devices



using Bluetooth Smart wireless technology, e.g. gym equipment, can detect your heart rate. You can check which sport profiles have Bluetooth broadcasting enabled by default from the <u>Polar Sport profiles list</u>. You can enable or disable Bluetooth broadcasting from sport profile settings.

MULTISPORT

Multisport allows you to include multiple sports in one training session, and seamlessly switch between sports without interrupting your training recording. During a multisport training session your transition times between sports are automatically monitored, allowing you to see how long it took you to switch from one sport to another.

There are two different ways to perform a multisport training session: fixed multisport and free multisport. In a fixed multisport (multisport profiles in the Polar sports list) like triathlon, the order of the sports is fixed, and they must be performed in that specific order. In free multisport, you can choose what sports you perform and in which order you perform them by selecting them from the sport list. You can also switch back and forth between sports.

For information on starting a multisport session, see "Start a Training Session" on page 44

SWIMMING

V800 is water resistant to 30 meters, and can be worn during swimming. The H7 heart rate sensor detects your heart rate when swimming with GymLink transmission as Bluetooth Smart® does not work in water. Please note that when using GPS when swimming, interference may occur, and the recorded data is not as accurate as in land activities. GPS may also interfere with GymLink transmission, causing disturbance in heart rate measurement when swimming. Therefore it is recommended to switch GPS off when measuring heart rate in water.

When measuring heart rate in water, you may experience interference because:

- The ECG signal strength is individual and may vary depending on the individual's tissue composition. Problems occur more frequently when measuring heart rate in water.
- Pool water with high chlorine content and seawater are very conductive. Sensor electrodes can short-circuit in these conditions preventing ECG signal detection.
- Jumping into water or strenuous muscle movement during competitive swimming may shift the sensor on your body where ECG signals are not detected.

SWIMMING METRICS (POOL SWIMMING)

Swimming metrics help you analyze each swimming session, and follow your performance and progress in the long run. The metrics record your swim distance, time and pace, stroke rate, and also identify your swimming style. In addition, with the help of the SWOLF score you can improve your swimming technique.

To get the most accurate information, make sure your have set which hand you wear V800 on. This can be set in V800 **General Settings**.

Swimming metrics are only available in the Pool swimming profile. To get the Pool swimming profile you must have at least 1.2 firmware on your V800.

SWIMMING STYLES

V800 recognizes your swimming style, and calculates style specific metrics as well as totals for your whole session.

Styles V800 recognizes:

- Freestyle
- Backstroke
- Breaststroke
- Butterfly

PACE AND DISTANCE

The pace and distance measurements are based on pool length, therefore to get accurate data always make sure you have set the correct pool length. V800 recognizes when you turn, and uses this information to give you accurate pace and distance.

STROKES

V800 tells you how many strokes you take in a minute or per pool length. This information can be used to find out more about your swimming technique, rhythm and timing.

SWOLF

SWOLF (short for swimming and golf) is an indirect measure of efficiency. SWOLF is calculated by adding together your time and the amount of strokes it takes you to swim a pool length. For instance, 30 seconds and 10 strokes to swim the length of a pool will equal a SWOLF score of 40. Generally, the lower your SWOLF is for a certain distance and style, the more efficient you are.

SWOLF is highly individual, and thus should not be compared to SWOLF scores other people have swam. It's rather a personal tool that can help you improve and fine-tune your technique, and find an optimal efficiency for different styles.

CHOOSE POOL LENGTH

It's important that you choose the correct pool length, as it affects pace, distance and stroke rate calculation, as well as your SWOLF score. The default lengths are 25 meters, 50 meters and 25 yards, but you can also set it manually to a custom length. The minimum length that can be chosen is 20 meters/yards.

The chosen pool length is shown in pre-training mode. To change it from there, press and hold LIGHT to access the **Sport Profile** quick menu, choose **Pool length** and set the correct length. It can also be changed in **Settings > Sport Profiles > Pool swimming > Pool length**.

START A POOL SWIMMING SESSION

- 1. Press START in time view to enter pre-training mode, and scroll to the Pool swimming profile
- 2. Check that the pool length is correct (shown on the display).
- 3. Press START to begin training recording.

DURING YOUR SWIM

During your swim on the display you can view,

- Distance
- Pace
- Time
- Rest time
- Heart rate and heart rate zones

You can customize what is shown on the display in the sport profiles section in the Flow web service.

AFTER YOUR SWIM

In the training summary on your V800 you'll see,


- Average and maximum pace (pace/100 meters or pace/100 yards).
- Lap information
- Summary by swimming style, which includes:
 - Swimming time
 - Average and maximum heart rate (if a H7 heart rate sensor is used)
 - Average and maximum pace (pace/100 meters or pace/100 yards)
 - Stroke average (strokes/pool length and strokes/minute)
 - SWOLF

After your session you can view detailed breakdown of your swim in the Flow web service.

For more information on swimming metrics, see www.polar.com/en/support/V800/swimming_metrics_pool_swimming

R-R RECORDING

R-R recording rate saves RR intervals, i.e. intervals between successive heartbeats. Heart rate varies with every heartbeat. Heart rate variability (HRV) is the variation of RR intervals. The R-R recording feature allows you to record RR intervals for research or coaching purposes without accumulating training data. Please note that you cannot train with V800 when using the R-R recording feature.

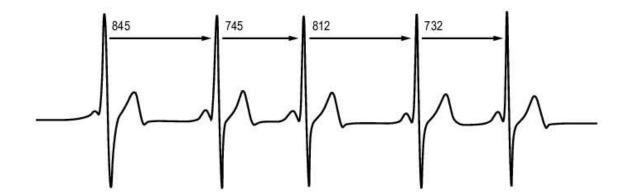

PERFORMING R-R RECORDING

To perform R-R recording:

- 1. Wear the heart rate sensor, and go to Tests > RR recording > Start Recording and press START
- 2. **Searching for heart rate** is displayed. The recording is started when **Heart rate found** is displayed.
- 3. To stop the recording, press and hold BACK.

TEST RESULTS

After stopping the recording you will see the result. The result includes:

- Duration
- Start time
- End time
- Minimum heart rate
- Maximum heart rate
- Average heart rate

After syncing your R-R recording results to the Flow web service you can export them to third party services for further analysis.

SENSORS

Polar Stride Sensor Bluetooth® Smart	88
Pair a Stride Sensor with V800	88
Calibrate the Stride Sensor	88
Manual Calibration	89
Automatic Calibration	
Running Cadence and Stride Length	90
Polar Speed Sensor Bluetooth® Smart	90
Pair a Speed Sensor with V800	90
Measuring Wheel Size	91
Polar Cadence Sensor Bluetooth® Smart	92
Pair A Cadence Sensor with V800	92
Polar LOOK Kéo Power Sensor Bluetooth® Smart	93
Pair Kéo Power with V800	93
Power Settings on V800	
Calibrate Kéo Power	

POLAR STRIDE SENSOR BLUETOOTH® SMART

PAIR A STRIDE SENSOR WITH V800

Make sure the stride sensor has been correctly attached to your shoe. For more information on setting up the stride sensor refer to the user manual of the stride sensor.

There are two ways to pair a stride sensor with your V800:

- 1. Press START in time view to enter pre-training mode.
- 2. Touch your stride sensor with V800, and wait for it to be found.
- 3. The device ID Pair Polar RUN xxxxxxxx is displayed. Choose Yes.
- 4. Pairing completed is shown when you are done.

or

- 1. Go to **General Settings > Pair and sync > Pair other device** and press START.
- 2. V800 starts searching for your stride sensor.
- 3. Once the stride sensor is found, **Polar RUN xxxxxxxx** is displayed.
- 4. Press START, **Pairing** is displayed.
- 5. **Pairing completed** is displayed when you are done.

CALIBRATE THE STRIDE SENSOR

Calibration of the stride sensor improves the accuracy of speed/pace and distance measurements. It is recommended that you calibrate the stride sensor before using it for the first time, if there are significant changes in your running style, or if the position of the stride sensor on the shoe is dramatically changed

(e.g. if you have new shoes or if you switch the sensor from your right shoe to your left one). The calibration should be done at the speed you normally run. If you run at different speeds, the calibration should be done at your average speed. You can calibrate the stride sensor manually or automatically.

When training with a stride sensor you can choose to use speed data from GPS or from the stride sensor. To set this go to **Settings > Sport profiles > Running> Stride sensor > Choose sensor for speed**, and choose **Stride sensor** or **GPS**.

MANUAL CALIBRATION

Manual calibration can be done in two ways. You can run a distance you know, and set the correct distance in **Quick menu**. You can also set the calibration factor manually if you know the factor which gives you accurate distance.

SET CORRECT LAP DISTANCE

To calibrate the stride sensor manually by setting correct lap distance, choose **Settings > Sport profiles** > **Running> Stride sensor > Calibration > Manual > Set correct lap distance**

- 1. Press START in time view to enter pre-training mode, and scroll to the Running profile
- 2. Start a session, and run a distance you know that is more than 400 meters.
- 3. When you have the ran the distance, press START to take a lap.
- Press and hold light to enter the Quick menu, and choose Stride sensor > Calibration >
 Manual > Set correct lap distance
- 5. Set the actual distance you have ran. The calibration factor is updated.

SET FACTOR

To calibrate the stride sensor manually by setting the factor, choose **Settings > Sport profiles > Running> Stride sensor > Calibration > Manual > Set factor**: If you already know the factor which gives you accurate distance. **Calibrated. Factor: xxxx** is displayed when you are done.

Manual calibration can also be started during a session, when the stride sensor is in use. Press and hold LIGHT to enter the **Quick menu** and then choose **Stride sensor > Calibration > Manual**.

AUTOMATIC CALIBRATION

Automatic stride sensor calibration is done based on GPS data and it happens in the background. Current pace, stride length and cumulative distance will be updated and shown correctly after the automatic calibration. Your speed is shown in gray on the display until the calibration is complete. If you manually calibrate your stride sensor later, the GPS based calibration factor will be overwritten.

The automatic calibration is performed twice, and the average of the two calibration factors is used. In your next training session, the average of your previous calibration factor and the factor obtained during that session is used.

The automatic calibration starts after 100 meters. Following criteria has to be met during the calibration distance of 500 m.

- At least 6 satellites have to be available
- Speed has to be at least 7 km/h
- Ascent and descent are less than 30 meters

When running on different surfaces (e.g. road, trail, treadmill), use a different sport profile for each of them to achieve the best calibration for each surface.

To calibrate the stride sensor automatically, choose

• Settings > Sport profiles > Running> Stride sensor > Calibration > Automatic

Automatic calibration can also be started during a session, when the stride sensor is in use. Press and hold LIGHT to enter the **Quick menu** and then choose **Stride sensor > Calibration > Automatic**.

RUNNING CADENCE AND STRIDE LENGTH

Cadence* is the number of times the foot with the stride sensor* hits the ground per minute. Stride length* is the average length of one step. That is the distance between your right and left foot contacting the ground. Running speed = 2 * stride length * cadence. There are two ways to run faster: moving your legs at a higher cadence or taking longer steps. Elite long distance runners typically run with a high cadence of 85-95. On uphills, typical cadence values are lower. On downhills they are higher. Runners adjust stride length to gather speed: stride length increases as speed increases. Yet one of the most common mistakes novice runners make is over-striding. The most efficient stride length is the natural one – the one that feels most comfortable. You will run faster in races by strengthening your leg muscles so they take you forward with a longer stride.

You should also work on maximizing cadence efficiency. Cadence does not progress easily, but if properly trained, you will be able to sustain it throughout your runs and maximize your performance. To develop cadence, the nerve-muscle connection needs to be trained - and reasonably frequently. A session of cadence training a week is a good start. Incorporate some cadence work into the rest of your week. During long easy runs, you could include some faster cadence every now and then. A good way of improving stride length is to undertake specific strength work, like running hills, running in soft sand, or running up steps. A six-week training period including strength work should result in noticeable improvements in stride length, and if combined with some faster leg speed work (such as short strides at best 5km pace), noticeable improvements should be seen in overall speed, as well.

POLAR SPEED SENSOR BLUETOOTH® SMART

PAIR A SPEED SENSOR WITH V800

Make sure the speed sensor has been correctly installed. For more information on installing the speed sensor refer to the user manual of the speed sensor.

There are two ways to pair a speed sensor with your V800:

- 1. Press START in time view to enter pre-training mode.
- 2. V800 starts searching for your speed sensor. Rotate the wheel a few times to activate the sensor. The flashing red light in the sensor indicates that the sensor is activated.
- 3. The device ID Pair Polar SPD xxxxxxxx is displayed. Choose Yes.
- 4. **Pairing completed** is displayed when the pairing is complete.
- 5. **Sensor linked to:** is displayed. Choose **Bike 1** or **Bike 2**. Confirm with START.
- 6. **Set wheel size** is displayed. Set the size and press START.

or

- 1. Go to **General Settings > Pair and sync > Pair other device** and press START.
- 2. V800 starts searching for the speed sensor. Rotate the wheel a few times to activate the sensor. The flashing red light in the sensor indicates that the sensor is activated.
- 3. Once the speed sensor is found, **Polar SPD xxxxxxxx** is displayed.
- 4. Press START, **Pairing** is displayed.
- 5. **Pairing completed** is displayed when the pairing is complete.
- 6. Sensor linked to: is displayed. Choose Bike 1 or Bike 2. Confirm with START.
- 7. **Set wheel size** is displayed. Set the size and press START.

MEASURING WHEEL SIZE

Wheel size settings are a prerequisite for correct cycling information. There are two ways of determining the wheel size of your bike:

Method 1

Look for the diameter in inches or in ETRTO printed on the wheel. Match it to the wheel size in millimeters in the right column of the chart.

ETRTO	Wheel size diameter (inches)	Wheel size setting (mm)
25-559	26 x 1.0	1884
23-571	650 x 23C	1909
35-559	26 x 1.50	1947
37-622	700 x 35C	1958
52-559	26 x 1.95	2022
20-622	700 x 20C	2051
52-559	26 x 2.0	2054
23-622	700 x 23C	2070
25-622	700 x 25C	2080

ETRTO Wheel size diameter (inches)		Wheel size setting (mm)
28-622	700 x 28	2101
32-622	700 x 32C	2126
42-622	700 x 40C	2189
47-622	700 x 47C	2220

Wheel sizes on the chart are advisory as wheel size depends on the wheel type and air pressure.

Method 2

- Measure the wheel manually for the most accurate result.
- Use the valve to mark the point where the wheel touches the ground. Draw a line on the ground to mark that point. Move your bike forward on a flat surface for one complete rotation. The tire should be perpendicular to the ground. Draw another line on the ground at the valve to mark a full rotation. Measure the distance between the two lines.
- Subtract 4 mm to account for your weight on the bike to get your wheel circumference.

POLAR CADENCE SENSOR BLUETOOTH® SMART

PAIR A CADENCE SENSOR WITH V800

Make sure the cadence sensor has been correctly installed. For more information on installing the cadence sensor refer to the user manual of the cadence sensor.

There are two ways to pair a cadence sensor with your V800:

- 1. Press START in time view to enter pre-training mode.
- 2. V800 starts searching for your cadence sensor. Rotate the crank a few times to activate the sensor. The flashing red light in the sensor indicates that the sensor is activated.
- 3. The device ID **Pair Polar CAD xxxxxxxx** is displayed. Choose **Yes**.
- 4. **Pairing completed** is displayed when the pairing is complete.
- 5. **Sensor linked to:** is displayed. Choose **Bike 1** or **Bike 2**. Confirm with START.

or

- 1. Go to General Settings > Pair and sync > Pair other device and press START.
- 2. V800 starts searching for the cadence sensor. Rotate the crank a few times to activate the sensor. The flashing red light in the sensor indicates that the sensor is activated.
- 3. Once the cadence sensor is found, **Polar CAD xxxxxxxx** is displayed.
- 4. Press START, **Pairing** is displayed.
- 5. **Pairing completed** is displayed when the pairing is complete.
- 6. **Sensor linked to:** is displayed. Choose **Bike 1** or **Bike 2**. Confirm with START.

POLAR LOOK KÉO POWER SENSOR BLUETOOTH® SMART

PAIR KÉO POWER WITH V800

Before pairing Kéo Power make sure you have installed the it correctly. For information on mounting the pedals and installing the transmitters see the Polar LOOK Kéo Power user manual that came in the product box or the video tutorial.

Both transmitters need to be paired one at a time, therefore you have to perform the pairing twice when taking Kéo Power into use. After pairing the first transmitter, you can immediately pair the second one by selecting it from the list. Check the device ID can found on the backside of each transmitter to make sure both transmitters have been paired.

There are two ways to pair Keó Power with your V800:

- 1. Press START in time view to enter pre-training mode.
- 2. Rotate the cranks to wake up the transmitters.
- 3. The device ID **Pair Polar PWR xxxxxxxx** is displayed. Choose **Yes**.
- 4. **Pairing completed** is shown when you are done.

or

- 1. Go to General Settings > Pair and sync > Pair other device and press START.
- 2. Rotate the cranks to wake up the transmitters. V800 starts searching for Kéo Power.
- 3. Once the it is found, **Polar PWR xxxxxxxx** is displayed.
- 4. Press START, **Pairing** is displayed.
- 5. **Pairing completed** is displayed when you are done.

POWER SETTINGS ON V800

Adjust the power settings to best suit your training needs. Edit the power settings in **Settings > Sport profiles**, and choose the profile you want to edit, and choose **Bike power settings**.

In the **Bike power settings** you'll find:

- Power view: Choose Watts (W), Watts/kg (W/kg) or % of FTP.
- **Power, rolling average**: Set how frequently data points of your power are recorded. Choose 1, 3, 5, 10, 15, 30 or 60 seconds.
- **Set FTP value**: Set your FTP value. The setting range is 60 to 600 watts.
- Check power zone limits: Check your power zone limits.

CALIBRATE KÉO POWER

Calibrate Kéo Power before starting your session. V800 calibrates itself automatically each time the transmitters wake up and V800 is found. The calibration takes a couple of seconds.

Training temperature has an effect on the calibration accuracy, so make sure your bike's temperature has become stable before you start the offset calibration.

To calibrate Kéo power:

- 1. Wake up the transmitters by rotating the cranks and choose pre-training mode on your V800 to start the calibration.
- 2. Keep the bike upright and cranks in place until calibration is completed.

To ensure the calibration is done properly:

- Do not put any weight on the pedals during calibration.
- Do not interrupt the calibration.

When the calibration is complete a green LED will blink on the transmitters, and you can start your session.

IMPORTANT INFORMATION

Caring for Your V800	95
V800	95
Heart rate sensor	96
Stride Sensor Bluetooth® Smart, Speed Sensor Bluetooth® Smart	and Cadence Sensor Bluetooth®
Smart	96
Storing	96
Service	96
Technical Specification	97
V800	97
Heart Rate Sensor	98
Polar FlowSync Software	98
Polar Flow mobile application compatibility	98
Water resistance of Polar products	99
Batteries	100
Changing Heart Rate Sensor Battery	100
H7	101
H10	101
Precautions	102
Interference During Training	102
Minimizing Risks When Training	102
Limited International Polar Guarantee	103
Compliance Statement	105
Disclaimer	106

CARING FOR YOUR V800

Like any electronic device, Polar V800 should be treated with care. The suggestions below will help you fulfill guarantee obligations and enjoy this product for many years to come.

V800

Keep your training device clean. Use a damp paper towel to wipe dirt from the training device. To maintain the water resistance, do not wash the training device with a pressure washer. Never use alcohol or any abrasive material such as steel wool or cleaning chemicals.

After each time of using the USB port of the training device, check visually that there is no hair, dust or other dirt on the connector. Gently wipe to remove any dirt from the connector pins by using a dry cleaning cloth (like one used to clean glass surfaces). A toothpick can be used to remove hair, dust or other dirt from the connector cavity. Rinse the USB connector with lukewarm water after each session.

The combined impact of moisture and intense abrasion may cause a darker color to come off clothing possibly staining the blue-colored V800.

Operating temperatures are -10 °C to +50 °C / +14 °F to +122 °F.

HEART RATE SENSOR

Connector: Detach the connector from the strap after every use and dry the connector with a soft towel. Clean the connector with a mild soap and water solution when needed. Never use alcohol or any abrasive material (e.g. steel wool or cleaning chemicals).

Strap: Rinse the strap under running water after every use and hang to dry. Clean the strap gently with a mild soap and water solution when needed. Do not use moisturizing soaps, because they can leave residue on the strap. Do not soak, iron, dry clean or bleach the strap. Do not stretch the strap or bend the electrode areas sharply.



① Check the washing instructions on the label of the strap.

STRIDE SENSOR BLUETOOTH® SMART, SPEED SENSOR BLUETOOTH® SMART AND CADENCE SENSOR BLUETOOTH® SMART

Clean the sensors with a mild soap and water solution and rinse them with clean water. To maintain the water resistance, do not wash the sensors with a pressure washer. Do not immerse the speed sensor, cadence sensor or stride sensor in water. Never use alcohol or any abrasive material such as steel wool or cleaning chemicals. Avoid hard hits to the sensors, as these may damage the sensor units.

STORING

Keep your training device and sensors in a cool and dry place. Do not keep them in a damp environment, in non-breathable material (a plastic bag or a sports bag) nor with conductive material (a wet towel). Do not expose the training device to direct sunlight for extended periods, such as by leaving it in a car or mounted on the bike mount.

It is recommended to store the training device partially or fully charged. The battery slowly loses its charge when it is stored. If you are going to store the training device for several months, it is recommended to recharge it after a few months. This will prolong the battery lifetime.

Dry and store the strap and the connector separately to maximize the heart rate sensor battery lifetime. Keep the heart rate sensor in a cool and dry place. To prevent snap oxidation, do not store the heart rate sensor wet in non-breathing material, such as a sports bag. Do not expose the heart rate sensor to direct sunlight for extended periods

SERVICE

During the two-year guarantee/warranty period we recommend that you have service done by an authorized Polar Service Center only. The warranty does not cover damage or consequential damage caused by service not authorized by Polar Electro. For further information, see Limited International Polar Guarantee.

For contact information and all Polar Service Center addresses, visit www.polar.com/support and country-specific websites.

The username for your Polar Account is always your email address. The same username and password are valid for Polar product registration, Polar Flow web service and app, Polar discussion forum and newsletter registration.

TECHNICAL SPECIFICATION

V800

Battery type:	350 mAh Li-pol rechargeable battery
Operating time:	Up to 13 h (continuous training) with heart rate and high accuracy GPS recording, up to 20 h (continuous training) with heart rate and medium accuracy GPS recording, up to 50 h (continuous training) in GPS power save mode with heart rate, approx. 30 days in time mode
Operating temperature:	-10 °C to +50 °C / 14 °F to 122 °F
Training computer materials:	ABS + GF, PC/ABS plastic alloy, Aluminum alloy, Stainless steel, Gorilla glass window
Wrist strap and buckle materials:	Thermoplastic polyurethane,Stainless steel, Aluminum alloy
Watch accuracy:	Better than ± 0.5 seconds / day at 25 °C / 77 °F temperature
GPS accuracy:	Distance ±2%, speed ±2 km/h
Altitude resolution:	1 m
Ascent/Descent resolution:	5 m
Maximum altitude:	9000 m / 29525 ft
Sample rate:	1 s in high accuracy GPS recording ,30 s in medium accuracy GPS recording, 60 s in GPS power save mode
Accuracy of heart rate monitor:	± 1% or 1 bpm, whichever larger. Definition applies to stable conditions.
Heart rate measuring range:	15-240 bpm

Current speed display range:	(0-36 km/h or 0-22.5 mph (when measuring speed with Polar stride sensor)		
	(0-127 km/h or 0-79 mph (when measuring speed with Polar speed sensor)		
	(0-399 km/h 247.9 mph (when measuring speed with integrated GPS)		
Water resistance:	30 m		
Memory capacity:	60 h training with GPS and heart rate depending on your language settings		
Display resolution:	128 x 128		

HEART RATE SENSOR

Battery type:	CR 2025
Battery sealing ring:	O-ring 20.0 x 1.0 Material FPM
Operating temperature:	-10 °C to +50 °C/14 °F to 122 °F
Connector material:	Polyamide
Strap material:	38% Polyamide, 29% Polyurethane, 20% Elastane, 13% Polyester
Water resistance:	30 m

Uses Bluetooth® Smart wireless technology and GymLink transmission.

POLAR FLOWSYNC SOFTWARE

To use FlowSync software you need a computer with Microsoft Windows or Mac operating system with an internet connection and a free USB port.

Check the latest compatibility information from support.polar.com.

POLAR FLOW MOBILE APPLICATION COMPATIBILITY

Check the latest compatibility information from support.polar.com.

WATER RESISTANCE OF POLAR PRODUCTS

Most Polar products can be worn when swimming. They are not, however, diving instruments. To maintain water resistance, do not press the buttons of the device under water.

Polar devices with wrist-based heart rate measurement are suitable for swimming and bathing. They will collect your activity data from your wrist movements also when swimming. In our tests, however, we found that the wrist-based heart rate measurement doesn't work optimally in water, so we cannot recommend wrist-based heart rate measurement for swimming.

In the watch industry, water resistance is generally indicated as meters, which means the static water pressure of that depth. Polar uses this same indication system. Water resistance of Polar products is tested according to International Standard **ISO 22810** or **IEC60529**. Every Polar device that has water resistance indication is tested before the delivery to stand water pressure.

Polar products are divided into four different categories according to their water resistance. Check the back of your Polar product for the water resistance category, and compare it to the chart below. Please note that these definitions do not necessarily apply to products of other manufacturers.

When performing any underwater activity, the dynamic pressure generated by moving in water is greater than the static pressure. This means that moving the product under water subjects it to a greater pressure than if the product were stationary.

Marking on the back of the product	Wash splashes, sweat, raindrops etc.	Bathing and swim- ming	Skin diving with snorkel (no air tanks)	SCUBA diving (with air tanks)	Water resistant characteristics
Water resistant IPX7	OK	-	-	-	Do not wash with a pressure washer. Protected against splashes, raindrops etc. Reference standard: IEC60529.
Water resistant IPX8	OK	ОК	-	-	Minimum for bathing and swimming. Reference standard: IEC60529.
Water resistant Water resistant 20/30/50 meters Suitable for swimming	OK	ОК	-	-	Minimum for bathing and swimming. Reference standard: ISO22810.

Water resistant 100	OK	OK	OK	-	For frequent use in
meters					water but not SCUBA
					diving.
					Reference standard:
					ISO22810.

BATTERIES

The Polar V800 has an internal, rechargeable battery. Rechargeable batteries have a limited number of charge cycles. You can charge and discharge the battery over 300 times before a notable decrease in its capacity. The number of charge cycles also varies according to use and operating conditions. Do not charge the V800 battery when it is wet. Do not charge the battery in temperatures under -10 °C or over +50 °C.

At the end of the working life of the product Polar encourages you to minimize possible effects of waste on the environment and human health by following local waste disposal regulations and, where possible, utilizing separate collection of electronic devices. Do not dispose of this product as unsorted municipal waste.

The Polar H7 heart rate sensor has a user changeable battery. To change the battery yourself, please follow the instructions carefully as instructed in "Changing Heart Rate Sensor Battery" below

The batteries for the speed sensor *Bluetooth* Smart®, and cadence sensor *Bluetooth* Smart® cannot be replaced. Polar has designed the sensors to be sealed in order to maximize mechanical longevity and reliability. The sensors have long-life batteries inside. To purchase a new sensor contact your authorized Polar Service Center or retailer.

For battery information of the Polar stride sensor *Bluetooth* Smart®, consult the user manual for the product in question.

Keep the batteries away from children. If swallowed, contact a doctor immediately. Batteries should be disposed of properly according to local regulations.


CHANGING HEART RATE SENSOR BATTERY

To change the battery of the heart rate sensor yourself, carefully follow the instructions below:

When changing the battery, make sure the sealing ring is not damaged, in which case you should replace it with a new one. You can purchase the sealing ring/battery kits at well-equipped Polar retailers and authorized Polar Services. In the USA and Canada, the additional sealing rings are available at authorized Polar Service Centers. In the USA the sealing ring/battery kits are also available at www.shoppolar.com.


When handling a new, fully charged battery, avoid clasp-like contact, i.e. simultaneously from both sides, with metal or electrically conducting tools, like tweezers. This may short circuit the battery, causing it to discharge more rapidly. Typically, short circuiting does not damage the battery, but it may decrease the capacity and the lifetime of the battery.

H7

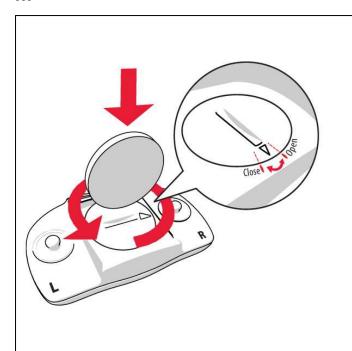

- Using a coin, open the battery cover by turning it counterclockwise to OPEN.
- 2. Insert the battery (CR 2025) inside the cover with the positive (+) side against the cover. Make sure the sealing ring is in the groove to ensure water resistance.
- 3. Press the cover back into the connector.
- 4. Use the coin to turn the cover clockwise to CLOSE.

H10

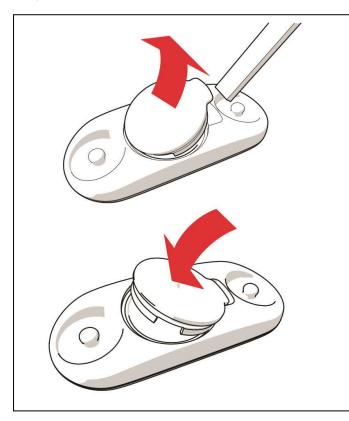

- 1. Lever the battery cover open by using a small flat-headed tool.
- 2. Remove the old battery from the battery cover.
- 3. Insert the new battery (CR2025) inside the cover with the negative (-) side outwards.
- 4. Align the ledge on the battery cover with the slot on the connector and press the battery cover back into place. You should hear a snap.

Danger of explosion if the battery is replaced with wrong type.

PRECAUTIONS

The Polar V800 training device shows your performance indicators. The training device is designed to indicate the level of physiological strain and recovery during and after an exercise session. It measures heart rate, speed and distance. It also measures running cadence when used with Polar stride sensor Bluetooth® Smart and cycling cadence when used with a Polar cadence sensor Bluetooth® Smart . No other use is intended or implied.

The training device should not be used for obtaining environmental measurements that require professional or industrial precision.

INTERFERENCE DURING TRAINING

Electromagnetic Interference and Training Equipment

Disturbance may occur near electrical devices. Also WLAN base stations may cause interference when training with the training device. To avoid erratic reading or misbehavior, move away from possible sources of disturbance.

Training equipment with electronic or electrical components such as LED displays, motors and electrical brakes may cause interfering stray signals. To solve these problems, try the following:

- 1. Remove the heart rate sensor strap from your chest and use the training equipment as you would normally.
- 2. Move the training device around until you find an area in which it displays no stray reading or does not flash the heart symbol. Interference is often worst directly in front of the display panel of the equipment, while the left or right side of the display is relatively free of disturbance.
- 3. Put the heart rate sensor strap back on your chest and keep the training device in this interference-free area as much as possible.

If the training device still does not work with the training equipment, it may be electrically too noisy for wireless heart rate measurement. For further information, www.polar.com/support.

Parts of V800 are magnetic. It may attract metallic materials and it's magnetic field may interfere with a compass. To avoid interference, it is recommended to wear your compass on one arm (at the level of your chest) and your V800 on the other arm's wrist. Do not place credit cards or other magnetic storage media near V800, because information stored on them may be erased.

MINIMIZING RISKS WHEN TRAINING

Training may include some risk. Before beginning a regular training program, it is recommended that you answer the following questions concerning your health status. If you answer yes to any of these questions, we recommend that you consult a doctor before starting any training program.

- Have you been physically inactive for the past 5 years?
- Do you have high blood pressure or high blood cholesterol?
- Are you taking any blood pressure or heart medication?
- Do you have a history of breathing problems?
- Do you have symptoms of any disease?
- Are you recovering from a serious illness or medical treatment?
- Do you use a pacemaker or other implanted electronic device?
- Do you smoke?
- Are you pregnant?

Note that in addition to training intensity, medications for heart conditions, blood pressure, psychological conditions, asthma, breathing, etc., as well as some energy drinks, alcohol, and nicotine may also affect heart rate.

It is important to be sensitive to your body's responses during training. If you feel unexpected pain or excessive fatigue when training, it is recommended that you stop the training or continue at a lighter intensity.

Note! If you are using a pacemaker, defibrillator or other implanted electronic device, you can use Polar products. In theory interference to pacemaker caused by Polar products should not be possible. In practice no reports exist to suggest anyone ever having experienced interference. We cannot however issue an official guarantee on our products' suitability with all pacemakers or other implanted devices, such as defibrillators, due to the variety of devices available. If you have any doubts, or if you experience any unusual sensations while using Polar products, please consult your physician or contact the implanted electronic device manufacturer to determine safety in your case.

If you are allergic to any substance that comes into contact with your skin or if you suspect an allergic reaction due to using the product, check the listed materials in Technical Specifications. To avoid any skin reaction to the heart rate sensor, wear it over a shirt, but moisten the shirt well under the electrodes to ensure flawless operation.

Your safety is important to us. The shape of the Polar stride sensor *Bluetooth*® Smart is designed to minimize the possibility of it getting caught in something. In any case, be careful when running with the stride sensor in brushwood, for example.

The combined impact of moisture and intense abrasion may cause color to come off the heart rate sensor's surface, possibly staining clothes. If you use perfume, suntan/sunscreen lotion or insect repellent on your skin, you must ensure that it does not come into contact with the training device or the heart rate sensor. Please avoid clothing with colors that might transfer onto the training device (especially training devices with light/bright colors) when worn together.

LIMITED INTERNATIONAL POLAR GUARANTEE

• This guarantee does not affect the consumer's statutory rights under applicable national or state laws in force, or the consumer's rights against the dealer arising from their sales/purchase contract.

- This limited Polar international guarantee is issued by Polar Electro Inc. for consumers who have purchased this product in the USA or Canada. This limited Polar international guarantee is issued by Polar Electro Oy for consumers who have purchased this product in other countries.
- Polar Electro Oy/Polar Electro Inc. guarantees the original consumer/purchaser of this device that the product will be free from defects in material or workmanship for two (2) years from the date of purchase.
- The receipt of the original purchase is your proof of purchase!
- The guarantee does not cover the battery, normal wear and tear, damage due to misuse, abuse, accidents or non-compliance with the precautions; improper maintenance, commercial use, cracked, broken or scratched cases/displays, armband, elastic strap and Polar apparel.
- The guarantee does not cover any damage/s, losses, costs or expenses, direct, indirect or incidental, consequential or special, arising out of, or related to the product.
- Items purchased second hand are not covered by the two (2) year warranty, unless otherwise stipulated by local law.
- During the guarantee period, the product will be either repaired or replaced at any of the authorized Polar Service Centers regardless of the country of purchase.

Guarantee with respect to any product will be limited to countries where the product has been initially marketed.



This product is compliant with Directives 2014/53/EU and 2011/65/EU. The relevant Declaration of Conformity and other regulatory information for each product are available at www.polar.com/en/regulatory_information.



This crossed out wheeled bin marking shows that Polar products are electronic devices and are in the scope of Directive 2012/19/EU of the European Parliament and of the Council on waste electrical and electronic equipment (WEEE) and batteries and accumulators used in products are in the scope of Directive 2006/66/EC of the European Parliament and of the Council of 6 September 2006 on batteries and accumulators and waste batteries and accumulators. These products and batteries/accumulators inside Polar products should thus be disposed of separately in EU countries. Polar encourages you to minimize possible effects of waste on the environment and human health also outside the European Union by following local waste disposal regulations and, where possible, utilize separate collection of electronic devices for products, and battery and accumulator collection for batteries and accumulators.

Polar Electro Oy is a ISO 9001:2008 certified company.

© 2013 Polar Electro Oy, FI-90440 KEMPELE, Finland. All rights reserved. No part of this manual may be used or reproduced in any form or by any means without prior written permission of Polar Electro Oy.

The names and logos in this user manual or in the package of this product are trademarks of Polar Electro Oy. The names and logos marked with a ® symbol in this user manual or in the package of this product are registered trademarks of Polar Electro Oy. Windows is a registered trademark of Microsoft Corporation and Mac OS is a registered trademark of Apple Inc. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Polar Electro Oy is under license.

COMPLIANCE STATEMENT

COMPLIANCE STATEMENT

CANADA

Polar Electro Oy has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment.

Polar Electro Oy n'a approué aucune modification apportée à l'appareil par l'utilisateur, quelle qu'en soit la nature. Tout changement ou toute modification peuvent annuler le droit d'utilisation de l'appareil par l'utilisateur.

Industry Canada (IC) regulatory information

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Avis de conformité à la réglementation d'Industrie Canada

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Class B digital device notice

This Class B digital apparatus complies with Canadian ICES-003, RSS-Gen and RSS-210.

Cet appareil numérique de la classe B est conforme à la norme NMB-003, CNR-Gen et CNR-210 du Canada.

USA

Polar Electro Oy has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment.

FCC regulatory information

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1. Reorient or relocate the receiving antenna.
- 2. Increase the separation between the equipment and receiver.
- 3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4. Consult the dealer or an experienced radio/ TV technician for help.

This product emits radio frequency energy, but the radiated output power of this device is far below the FCC radio frequency exposure limits.

This equipment complies with FCC RF radiation exposure limits forth for an uncontrolled environment. Nevertheless, the device should be used in such a manner that the potential for human contact with the antenna during normal operation is minimized.

DISCLAIMER

- The material in this manual is for informational purposes only. The products it describes are subject to change without prior notice, due to the manufacturer's continuous development program.
- Polar Electro Inc./Polar Electro Oy makes no representations or warranties with respect to this manual or with respect to the products described herein.
- Polar Electro Inc./Polar Electro Oy shall not be liable for any damages, losses, costs or expenses, direct, indirect or incidental, consequential or special, arising out of, or related to the use of this material or the products described herein.

Manufactured by:

Polar Electro Oy

Professorintie 5

FI-90440 KEMPELE

Tel +358 8 5202 100

Fax +358 8 5202 300

www.polar.com

2.9 EN 7/2021